

# Safety Instructions

When using Shihlin inverters, please follow the installation to ensure the safety of user and others. The following instructions will be classified and described by icons:







**DANGER** It means dangerous instructions, and incorrect handling may result in death or severe injury.



**CAUTION** It means caution instructions. Incorrect handling may result in injury or property damage.



It means caution and execution need to be done. Please operate according to the instructions.

|   |   |
|---|---|
| <br><b>DANGER</b>    | <ul style="list-style-type: none"> <li>● Inverters must be used on the location except corrosive gas, water, flammable gas.</li> <li>● Please operate far from flammable substance or explosives.</li> <li>● Please do not lay the inverter on an intense trembling or shaking occasion.</li> <li>● Do not operate wires soaked under oil or water.</li> <li>● Prohibit touching any part in the inverter when power is ON to avoid electric shock.</li> <li>● Three-phase power cannot be connected to terminal U/T1, V/T2, W/T3.</li> <li>● The terminal  of the inverter must be correctly grounded.</li> <li>● Do not conduct wiring when the power is ON.</li> </ul>  |
| <br><b>CAUTION</b> | <ul style="list-style-type: none"> <li>● Do not conduct hi-pot test on internal components of the inverter, for semiconductor is easily damaged by high voltage.</li> <li>● There are CMOS IC components on PCBAs which are especially sensitive to static electricity. Please do not touch PCBAs before taking anti-static measures.</li> <li>● Even if the motor stops, a charge may still remain in the main circuit terminals of the inverter with hazardous voltages.</li> <li>● Only qualified persons are allowed to install, wire and maintain the inverter.</li> <li>● After some functions are set, the motor may start immediately once power is ON.</li> <li>● Please choose the safe area to install the inverter, avoiding heat, direct sunlight, moisture humidity and splashing of droplets.</li> <li>● When wiring between the inverter and motor is too long, it may damage the layer insulation of the motor. A reactor can be mounted between inverter and motor, avoiding insulation is damaged.</li> <li>● For the installation power system of rated voltage, it cannot be over 240V for 220 series; it cannot be over 480V for 440 series.</li> </ul> |
|                    | <ul style="list-style-type: none"> <li>● Only qualified personnel familiar with wiring is allowed to perform wiring.</li> <li>● For the installation direction and method, please refer to the regulations.</li> <li>● Make sure to use the temperature in a safe range.</li> <li>● Please follow the installation to use the voltage.</li> <li>● When there are problems in operation, please first unload the motor, after zero-load operation is OK, and then connect to the machine.</li> <li>● Please confirm whether the inverter power is in line with the motor power.</li> <li>● Before running, please confirm whether the emergency switch can operate normally.</li> <li>● Power wire, U, V, W wires and signal wire should not be stranded, but separately.</li> <li>● Please turn off the power if it is not used for a long time.</li> </ul>   |

## TABLE OF CONTENTS

|   |           |
|---|-----------|
| <b>1. Manual Guide</b> .....  | <b>1</b>  |
| <b>2. Delivery Check</b> .....  | <b>3</b>  |
| 2.1 Nameplate Instruction .....   | 3         |
| 2.2 Type Instruction .....  | 3         |
| 2.3 Order Code Description .....  | 3         |
| <b>3. Shihlin Inverter Introduction</b> .....   | <b>4</b>  |
| 3.1 Electric Specification.....   | 4         |
| 3.2 General Specification (Inverter Characteristics) .....                                    | 7         |
| 3.3 Appearance and Dimensions .....   | 9         |
| 3.4 Name of Each Component .....  | 13        |
| 3.5 Installation and Wiring .....   | 17        |
| 3.6 Mini Jumper Instruction.....  | 28        |
| 3.7 Selection of Peripheral Equipment .....   | 29        |
| <b>4. Primary Operation</b> .....   | <b>36</b> |
| 4.1 Operating Modes of the Inverter.....  | 36        |
| 4.2 Basic Operation Procedures for Different Modes .....                                      | 42        |
| 4.3 Operation .....   | 46        |
| <b>5. Parameter Description</b> .....   | <b>48</b> |
| 5.1 Torque Boost (P.0, P.46) .....  | 51        |
| 5.2 The Range of the Output Frequency (P.1, P.2 and P.18).....                                | 52        |
| 5.3 Base Frequency and Base Frequency Voltage (P.3, P.19 and P.47) .....                      | 52        |
| 5.4 Multi-speed (P.4~P.6, P.24~P.27 and P.142~P.149).....                                     | 53        |
| 5.5 Acceleration / Deceleration Time (P.7, P.8, P.20, P.21,P.44 and P.45) .....               | 55        |
| 5.6 Electronic Thermal Relay Capacity (P.9).....  | 56        |
| 5.7 DC Injection Brake (P.10, P.11 and P.12) .....  | 57        |
| 5.8 Starting Frequency (P.13) .....   | 58        |
| 5.9 Load Pattern Selection (P.14, P.98~P.99, P.162~P.169) .....                               | 58        |
| 5.10 JOG Mode (P.15 and P.16) .....   | 61        |
| 5.11 Stall Prevention (P.22, P.23 and P.66).....  | 61        |
| 5.12 Output Frequency Filter Constant (P.28) .....  | 63        |
| 5.13 Acceleration / Deceleration Pattern Selection (P.29).....                                | 63        |
| 5.14 Regenerative Brake (P.30 and P.70) .....   | 65        |
| 5.15 Carrier Operation Selection (P.31) .....   | 65        |
| 5.16 Communication Function (P.32,P.33,P.34,P.36,P.48~P.53,P.153 . P.154) .....               | 66        |
| 5.17 Communication mode operation command and speed command selection (P.35).....             | 86        |
| 5.18 Speed Display (P.37, P.259).....   | 87        |
| 5.19 Voltage Signal Selection and Target Frequency (P.38, P.73, P.139, P.140 and P.141) ..... | 88        |
| 5.20 The Input Signal across Terminal 4-5 and the Target Frequency (P.39).....                | 92        |

|  |     |
|--|-----|
| <b>5.21 Multi-function Output (P.40, P.85, P.129, P.130, P.120)</b> .....                            | 92  |
| <b>5.22 Up-to-frequency Sensitivity (P.41)</b> .....   | 95  |
| <b>5.23 Output Frequency Detection (P.42 and P.43)</b> .....   | 95  |
| <b>5.24 FM/AM Terminal (P.54~P.56, P.64, P.187, P.190 and P.191)</b> .....                           | 96  |
| <b>5.25 Restart Function (P.57, P.58, P.150 and P.160)</b> .....                                     | 99  |
| <b>5.26 Input Signal Filter Constant (P.60)</b> .....  | 100 |
| <b>5.27 Remote Setting Function (P.61)</b> .....   | 100 |
| <b>5.28 Zero Current Detection (P.62 and P.63)</b> .....   | 103 |
| <b>5.29 Retry Function (P.65, P.67, P.68, P.69)</b> .....  | 103 |
| <b>5.30 Brake Selection (P.71)</b> .....   | 105 |
| <b>5.31 Carrier Frequency (P.72)</b> .....   | 105 |
| <b>5.32 FR/10X Frequency Output Terminal Selection (P.74)</b> .....                                  | 107 |
| <b>5.33 Stop or Reset Function Selection (P.75)</b> .....  | 108 |
| <b>5.34 Parameters Write Protection (P.77)</b> .....   | 108 |
| <b>5.35 Forward/Reverse Rotation Prevention Selection (P.78)</b> .....                               | 109 |
| <b>5.37 Multi-function Terminal Function Selection (P.80~P.84, P.86, P.126~P.128)</b> .....          | 110 |
| <b>5.38 Multi-Function Control-Terminal Input Positive/Negative Logic (P.87)</b> .....               | 117 |
| <b>5.39 Multi-Function Output Terminal Positive/Negative Logic(P.88)</b> .....                       | 118 |
| <b>5.40 Slip Compensation Coefficient (P.89)</b> .....   | 118 |
| <b>5.41 Inverter Model (P.90)</b> .....  | 118 |
| <b>5.42 Frequency Jump (P.91~P.96)</b> .....   | 119 |
| <b>5.43 The Second Frequency Source (P.97)</b> .....   | 120 |
| <b>5.44 Programmed Operation Mode (P.100~P.108, P.111~P.118, P.121~P.123, P.131~P.138)</b> .....     | 120 |
| <b>5.45 Operation Panel Monitoring Selection (P.110)</b> .....                                       | 123 |
| <b>5.46 The Selection of Forward/Reverse Rotation Dead Time (P.119)</b> .....                        | 123 |
| <b>5.47 Zero-Speed Function (P.151~P.152)</b> .....  | 124 |
| <b>5.48 OverTorque Detection (P.155~P.156,P.260)</b> .....   | 124 |
| <b>5.49 External Terminals Filter Adjusting Function (P.157)</b> .....                               | 125 |
| <b>5.50 External Terminal Power Enable Function (P.158)</b> .....                                    | 126 |
| <b>5.51 Energy-Saving Control Function (P.159)</b> .....   | 126 |
| <b>5.52 Multi-Function Display (P.161)</b> .....   | 127 |
| <b>5.52 PID Control (P.170~P.183, P.223~P.225)</b> .....   | 128 |
| <b>5.53 4-5 Terminal Disconnection Handling Function (P.184)</b> .....                               | 133 |
| <b>5.54 SF-G Model Selection Function (P.186)</b> .....  | 134 |
| <b>5.55 Firmware version (P.188)</b> .....   | 134 |
| <b>5.56 Factory Setting Function (P.189)</b> .....   | 134 |
| <b>5.57 2-5 Terminal Input Signal (P.192~P.195)</b> .....  | 135 |
| <b>5.58 4-5 Terminal Input Signal (P.196~P.199)</b> .....  | 137 |
| <b>5.59 Multi-machine Constant Pressure System Function (P.200, P.209, P.210, P.213~P.217)</b> ..... | 138 |
| <b>5.60 Backlash Compensation Function (P.229~P.233)</b> .....                                       | 140 |
| <b>5.61 Triangular Wave Function (P.234~P.239)</b> .....   | 141 |
| <b>5.62 Auxiliary Frequency Function (P.240)</b> .....   | 142 |
| <b>5.63 DC Brake Function before Starting (P.242~P.244)</b> .....                                    | 143 |
| <b>5.64 Options for Stopping the Cooling Fan (P.245)</b> .....                                       | 144 |
| <b>5.65 Modulation Coefficient (P.246)</b> .....   | 144 |
| <b>5.66 Commercial Power Supply Frequency Operation Function (P.247~P.250)</b> .....                 | 145 |
| <b>5.67 Injection Molding Machine Specific Functions (P.251~P.254)</b> .....                         | 148 |
| <b>5.68 Maintenance Alarm Function (P.261)</b> .....   | 149 |
| <b>5.69 Input Phase Failure Protection (P.281)</b> .....   | 149 |

|  |            |
|--|------------|
| 5.70 Vibration Inhibition Factor (P.285 and P.286)   | 150        |
| 5.71 Short Circuit Protection Function (P.287)   | 150        |
| 5.72 Alarm History Parameters (P.288~P.291)  | 151        |
| 5.73 Accumulative Motor Operation Time Function (P.292 and P.293)                                  | 152        |
| 5.74 Password Protection Function (P.294 and P.295)  | 152        |
| 5.75 Motor Control Mode (P.300 and P.301)  | 153        |
| 5.76 Motor Parameter (P.302~P.312)   | 155        |
| 5.77 Gain Adjustment at Speed Control (P.320~P.325)  | 156        |
| 5.78 Torque Limit Range Setting (P.326)  | 157        |
| 5.79 Feedback Control Parameters (P.350~P.354)   | 158        |
| 5.80 Parameter Copy Function (P.994 and P.995) (a PU series operation panel needs to be purchased) | 159        |
| 5.81 Alarm History Clear (P.996)   | 160        |
| 5.82 Inverter Reset (P.997)  | 160        |
| 5.83 Restoration of the Parameters to the Default Values (P.998 and P.999)                         | 160        |
| <b>6. Inspection and Maintenance</b>   | <b>161</b> |
| 6.1 Daily Inspection   | 161        |
| 6.2 Periodical Inspection (During Machine Shutdown) Items  | 161        |
| 6.3 Regular Replacement for Some Components  | 162        |
| 6.4 Inverter Insulation Resistance Measurement   | 162        |
| 6.5 Motor Insulation Resistance Measurement  | 162        |
| 6.6 IGBT Module Test   | 163        |
| Appendix 1 Parameter Table   | 164        |
| Appendix 2 Alarm Code List   | 179        |
| Appendix 3 Troubles and Solutions  | 183        |
| Appendix 4 Optional Equipment  | 184        |
| Appendix 5 Optional external DC reactor  | 189        |
| Appendix 6 European Specification Compatibility Description  | 190        |
| Appendix 7 Australia C-Tick Specifications   | 194        |
| Appendix 8 Derating curve  | 195        |
| Revision Record  | 196        |

## 1. Manual Guide

The Shihlin Electric SF Series inverters have been designed with many complex parameterized functions to meet most of the application requirements in the market. For first-time users, they may experience some problems while using an inverter of such complex nature. Therefore, we recommend each user to read through each part of this manual carefully in order to master the operating methods of the inverters. Please feel free to contact us if you have any question.

Chapter 3 of this manual lists the detailed specifications of Shihlin Electric SF Series inverters. Section 3.5 will guide you on how to install the inverters, with an emphasis on safety precautions that must be noted when using the inverters.

Chapter 4 guides customers on how to use the inverter. In Section 4.1, it gives a brief outline on the operating mode of the inverter and how to use the operation panel. In section 4.2, the simple operating steps are explained. Chapter 5 explains the function of each parameter in detail.

The definitions of terminologies used in this manual are as follow:

1. Output frequency, target frequency, steady output frequency

The actual output current frequency of the inverter is called “output frequency.”

The frequency set by user (through operation panel, multi-speed terminals, voltage signal, and current signal or communication settings) is called “target frequency.”

When the motor starts running, the output frequency of the inverter will gradually accelerate to the target frequency before it finally runs steadily at the target frequency. This output frequency is called “stead output frequency.”

2. Detail explanation on parameter settings are provided in Chapter 5. For users who are not familiar with these settings, arbitrary adjustment of the parameter may result in abnormal operations. All parameters can be reset to their default values by the parameter of P.998. For setting procedures of this parameter, please refer to P.998 in Chapter 5.

3. The “operation mode” and “working mode” of the operation panel

The operating mode determines the reference source for the target frequency and the signal source for starting. A total of nine operating modes are provided in each Shihlin inverter. Please refer to Section 4.1 for details.

The operation panel is used mainly for monitoring the numeric values, setting parameters and target frequency. There are a total of five working modes on the Shihlin operation panel. Please refer to Section 4.1 for details.

4. The difference between “terminal name” and “function name”:

Printed letters can be found near the terminals of either the control board or the main board. They are used to distinguish each terminal and are called “terminal name.”

For “multi-function control terminal” and “multi-function output terminal,” besides the terminal name, it is also necessary to define the “function name.” The function name indicates the actual functions of the terminal.

When explaining the function for a terminal, the name used is its “function name.”

5. The difference between “on” and “turn on”:

When explaining the function for the “multi-function control terminal”, two words “on” and “turn on” are often used:

The word “on” is used to indicate that the external switch of the terminal is in close state, and thus it belongs to the description of the state.

The word “turn on” is used to describe the action that the external switch of the terminal is shut from the open state to the close state, and thus belongs to the description of action. Similarly, the words “off” and “turn off” belong to the above-mentioned states and actions.


## 2. Delivery Check

Each SF-TYPE inverter has been checked thoroughly before delivery, and is carefully packed to prevent any mechanical damage. Please check for the following when opening the package.


Checking out whether the product was damaged during transportation.

Whether the model of inverter coincide with what is shown on the package.

### 2.1 Nameplate Instruction

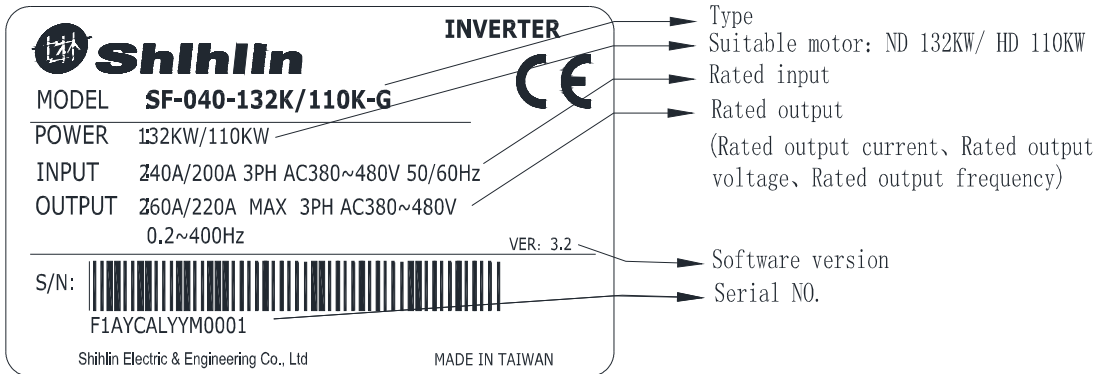

### 2.2 Type Instruction

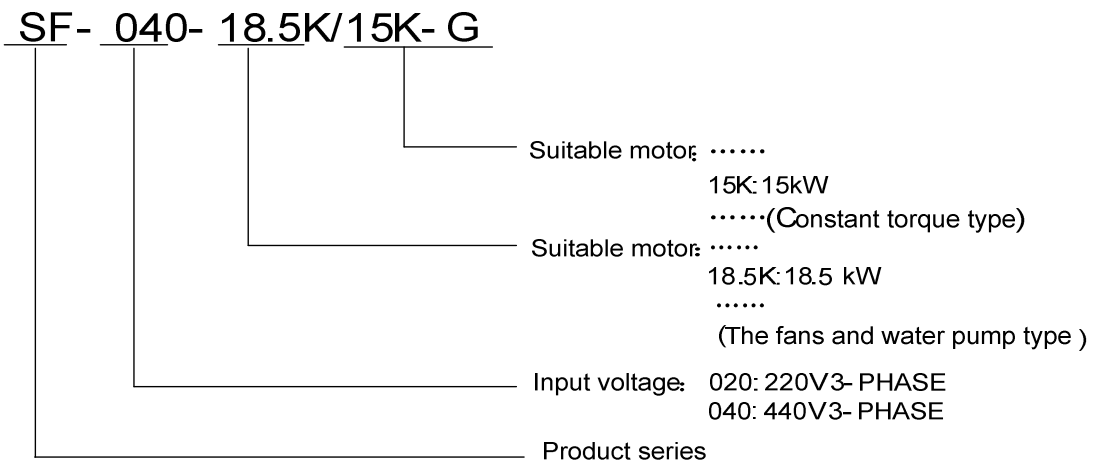

### 2.3 Order Code Description

Example:

| Customer requirement  | Order code    |
|---|---------------|
| Inverter specification                                      |               |
| SF-040-7.5K/5.5K-G(SF Series 440V 7.5K(F)/5.5K(G) Inverter) | LNKSF0407R5K  |
| SF-020-18.5K/15K-G(SF Series 220V 18.5K(F)/15(G) Inverter)  | LNKSF02018R5K |
| SF-040-55K/45K-G(SF Series 440V 55K(F)/45K(G) Inverter)     | LNKSF04055K   |

## 3. Shihlin Inverter Introduction

### 3.1 Electric Specification

#### 3.1.1 220V Series Three-phase

|                           |   |   |          |           |           |           |
|---------------------------|---|---|----------|-----------|-----------|-----------|
| Model SF-020-□□□K/K-G     |   | 5.5   | 7.5/5.5  | 11/7.5    | 15/11     | 18.5/15   |
| Applicable motor capacity | HP                                      | 7.5   | 10/7.5   | 15/10     | 20/15     | 25/20     |
|                           | kW                                      | 5.5   | 7.5/5.5  | 11/7.5    | 15/11     | 18.5/15   |
| Output                    | Rated output capacity kVA               | 9.5   | 12.5/9.5 | 18.3/12.5 | 24.7/18.3 | 28.6/24.7 |
|                           | Rated output current A                  | 25  | 33/25    | 49/33     | 65/49     | 75/65     |
|                           | Overload current rating                 | 120% 60 seconds / 150% 60 seconds<br>(inverse time characteristics) |          |           |           |           |
|                           | Maximum output voltage                  | Three-phase 200 ~ 240V  |          |           |           |           |
| Power supply              | Rated power voltage                     | Three-phase 200 ~ 240V 50Hz / 60Hz                                  |          |           |           |           |
|                           | Power voltage permissible fluctuation   | Three-phase 180~ 264V 50Hz / 60Hz                                   |          |           |           |           |
|                           | Power frequency permissible fluctuation | ±5%   |          |           |           |           |
|                           | Power source capacity kVA               | 12  | 17/12    | 20/17     | 28/20     | 34/28     |
| Cooling method            |   | Forced air cooling  |          |           |           |           |
| Inverter weight kg        |   | 5.6   | 5.6      | 7.0       | 8.3       | 9.0       |

|                           |   |   |           |         |         |         |
|---------------------------|---|---|-----------|---------|---------|---------|
| Model SF-020-□□□K/K-G     |   | 22/18.5   | 30/22     | 37/30   | 45/37   | 55/45   |
| Applicable motor capacity | HP                                      | 30/25   | 40/30     | 50/40   | 60/50   | 75/60   |
|                           | kW                                      | 22/18.5   | 30/22     | 37/30   | 45/37   | 55/45   |
| Output                    | Rated output capacity kVA               | 34.3/28.6   | 45.7/34.3 | 55/45.7 | 65/55   | 81/65   |
|                           | Rated output current A                  | 90/75   | 120/90    | 145/120 | 170/145 | 212/170 |
|                           | Overload current rating                 | 120% 60 seconds / 150% 60 seconds<br>(inverse time characteristics) |           |         |         |         |
|                           | Maximum output voltage                  | Three-phase 200 ~ 240V  |           |         |         |         |
| Power supply              | Rated power voltage                     | Three-phase 200 ~ 240V 50Hz / 60Hz                                  |           |         |         |         |
|                           | Power voltage permissible fluctuation   | Three-phase 180 ~ 264V 50Hz / 60Hz                                  |           |         |         |         |
|                           | Power frequency permissible fluctuation | ±5%   |           |         |         |         |
|                           | Power source capacity kVA               | 41/34   | 52/41     | 65/52   | 79/65   | 99/79   |
| Cooling method            |   | Forced air cooling  |           |         |         |         |
| Inverter weight kg        |   | 20  | 21        | 37      | 37      | 67      |



## 3.1.2 440V Series Three-phase

|                           |   |  |         |        |       |         |         |       |       |
|---------------------------|---|--|---------|--------|-------|---------|---------|-------|-------|
| Model SF-040-□□□K/K-G     |   | 5.5  | 7.5/5.5 | 11/7.5 | 15/11 | 18.5/15 | 22/18.5 | 30/22 | 37/30 |
| Applicable motor capacity | HP                                      | 7.5  | 10/7.5  | 15/10  | 20/15 | 25/20   | 30/25   | 40/30 | 50/40 |
|                           | kW                                      | 5.5  | 7.5/5.5 | 11/7.5 | 15/11 | 18.5/15 | 22/18.5 | 30/22 | 37/30 |
| Output                    | Rated output capacity kVA               | 10   | 14/10   | 18/14  | 25/18 | 29/25   | 34/29   | 46/34 | 56/46 |
|                           | Rated output current A                  | 13   | 18/13   | 24/18  | 32/24 | 38/32   | 45/38   | 60/45 | 73/60 |
|                           | Overload current rating                 | 120% 60 seconds / 150% 60 seconds (inverse time characteristics) |         |        |       |         |         |       |       |
|                           | Maximum output voltage                  | Three-phase 380 ~ 480 V  |         |        |       |         |         |       |       |
| Power supply              | Rated power voltage                     | Three-phase 380 ~ 480V 50Hz / 60Hz                               |         |        |       |         |         |       |       |
|                           | Power voltage permissible fluctuation   | Three-phase 342 ~ 528V 50Hz / 60Hz                               |         |        |       |         |         |       |       |
|                           | Power frequency permissible fluctuation | ±5%  |         |        |       |         |         |       |       |
|                           | Power source capacity kVA               | 11.5   | 16/11.5 | 20/16  | 27/20 | 32/27   | 41/32   | 52/41 | 65/52 |
| Cooling method            |   | Forced air cooling   |         |        |       |         |         |       |       |
| Inverter weight kg        |   | 5.6  | 5.6     | 5.6    | 5.6   | 8.3     | 8.3     | 25    | 25    |

|                           |   |  |        |         |         |         |         |         |
|---------------------------|---|--|--------|---------|---------|---------|---------|---------|
| Model SF-040-□□□K/K-G     |   | 45/37  | 55/45  | 75/55   | 90/75   | 110/90  | 132/110 | 160/132 |
| Applicable motor capacity | HP                                      | 60/50  | 75/60  | 100/75  | 120/100 | 150/120 | 175/150 | 215/175 |
|                           | kW                                      | 45/37  | 55/45  | 75/55   | 90/75   | 110/90  | 132/110 | 160/132 |
| Output                    | Rated output capacity kVA               | 69/56  | 84/69  | 114/84  | 137/114 | 168/137 | 198/168 | 236/198 |
|                           | Rated output current A                  | 91/73  | 110/91 | 150/110 | 180/150 | 220/180 | 260/220 | 310/260 |
|                           | Overload current rating                 | 120% 60 seconds / 150% 60 seconds (inverse time characteristics) |        |         |         |         |         |         |
|                           | Maximum output voltage                  | Three-phase 380 ~ 480 V  |        |         |         |         |         |         |
| Power supply              | Rated power voltage                     | Three-phase 380 ~ 480V 50Hz / 60Hz                               |        |         |         |         |         |         |
|                           | Power voltage permissible fluctuation   | Three-phase 342 ~ 528V 50Hz / 60Hz                               |        |         |         |         |         |         |
|                           | Power frequency permissible fluctuation | ±5%  |        |         |         |         |         |         |
|                           | Power source capacity kVA               | 79/65  | 100/79 | 110/100 | 137/110 | 165/137 | 198/165 | 247/198 |
| Cooling method            |   | Forced air cooling   |        |         |         |         |         |         |
| Inverter weight kg        |   | 25   | 37     | 37      | 37      | 67      | 67      | 67      |


# Shihlin Inverter Introduction

|                           |   |   |         |         |         |         |         |         |
|---------------------------|---|---|---------|---------|---------|---------|---------|---------|
| Model SF-040-□□□K/K-G     |   | 185/160   | 220/185 | 250/220 | 280/250 | 315/280 | 355/315 |         |
| Applicable motor capacity |   | HP  | 250/215 | 300/250 | 335/300 | 375/335 | 420/375 | 475/420 |
|                           |   | KW  | 185/160 | 220/185 | 250/220 | 280/250 | 315/280 | 355/315 |
| Output                    | Rated output capacity KVA               | 295/236   | 367/295 | 402/367 | 438/402 | 491/438 | 544/491 |         |
|                           | Rated output current A                  | 340/310   | 425/340 | 480/425 | 530/480 | 620/530 | 683/620 |         |
|                           | Overload current rating                 | 120% 60 seconds / 150% 60 seconds<br>(inverse time characteristics) |         |         |         |         |         |         |
|                           | Maximum output voltage                  | Three-phase 380-480V  |         |         |         |         |         |         |
| Power supply              | Rated power voltage                     | Three-phase 380-480V 50Hz / 60Hz                                    |         |         |         |         |         |         |
|                           | Power voltage permissible fluctuation   | Three-phase 342-528V 50Hz / 60Hz                                    |         |         |         |         |         |         |
|                           | Power frequency permissible fluctuation | ±5%   |         |         |         |         |         |         |
|                           | Power source capacity kVA               | 295/247   | 367/295 | 402/367 | 438/402 | 491/438 | 544/491 |         |
| Cooling method            |   | Forced air cooling  |         |         |         |         |         |         |
| Inverter weight kg        |   | 84  | 90      | 94      | 94      | 123     | 123     |         |

Note: The test conditions of rated output current, rated output capacity and frequency converter inverter power consumption are: the carrier frequency (P.72) is at the set value; the frequency converter/inverter output voltage is at 220V/440V; the output frequency is at 60Hz, and the ambient temperature is 40°C.


## 3.2 General Specification (Inverter Characteristics)

|   |   |   |
|---|---|---|
| Control method                                    | SVPWM control, V/F control, close-loop V/F control (VF+PG), general flux vector control, sensorless vector control (SVC), close-loop vector control (FOC+PG)  |   |
| Output frequency range                            | 0.2~400Hz (The starting frequency setting range is 0~60Hz).   |   |
| Resolution for setting frequency                  | Digital setting   | If the frequency set value is below 100Hz, the resolution will be 0.01Hz;<br>If the frequency set value is above 100Hz, the resolution will be 0.1Hz. |
|   | Analog setting  | When setting DC 0~5V signals, the resolution will be 1/500;<br>When setting DC 0~10V or 4~20mA signals, the resolution will be 1/1000;                |
| Output frequency accuracy                         | Digital setting   | Maximum target frequency $\pm 0.01\%$ .   |
|   | Analog setting  | Maximum target frequency $\pm 0.5\%$ .  |
| Voltage / frequency output characteristics        | Base voltage (P.19), base frequency (P.3) can be arbitrarily set. Constant torque model and applicable load model can be selected (P.14).   |   |
| Start torque                                      | 150% 1Hz: When the sensorless vector control is started.  |   |
| Torque boost                                      | The torque boost setting range is 0~30% (P.0), auto boost, slip compensation.   |   |
| Acceleration / deceleration curve characteristics | The resolution (0.01s/0.1s) of acceleration/deceleration time (P.7, P.8) is switched by P.21. The setting range has 0~360s or 0~3600s for selection. And different acceleration/deceleration curve model can be selected by P.29. |   |
| DC braking  | The DC braking action frequency is 0~120Hz (P.10); the DC braking time is 0~60s (P.11).<br>The DC braking voltage is 0~30% (P.12). Linear braking and idling braking selection (P.71).  |   |
| Stall current protection                          | The stalling protection level can be set to 0~400% (P.22).  |   |
| Target frequency setting                          | Operation panel setting; DC 0~5V signal, DC 0~10V signal, DC 4~20 mA signal; multiple speed stage level setting; communication setting.   |   |
| PID control                                       | Please refer to P.170~P.183 in Chapter 5.   |   |
| Multi-function control terminals                  | Motor starting (STF, STR), the second function (RT), 16-speed operation (RH, RM, RL, REX), external thermal relay (OH), reset (RES), etc. (they can be set by the user with P.80~P.84, P.86 and P.126~P.128).                     |   |

|                                       |                                       |   |   |   |
|---------------------------------------|---------------------------------------|---|---|---|
| Output terminal                       | Multi-function output terminals       | SU,SE   | <a href="#">P.40</a>  | Inverter running (RUN), output frequency detection (FU), Up to output frequency (SU), overload alarm (OL), zero current detection (OMD), alarm (ALARM), section detection (PO1), periodical detection (PO2), and pause detection (PO3), inverter output (BP), work frequency output (GP). |
|                                       |                                       | RUN,SE  | <a href="#">P.129</a>   |   |
|                                       |                                       | FU/10X,SE   | <a href="#">P.130</a>   |   |
|                                       | Multi-function output relay           | A,B,C   | <a href="#">P.85</a>  |   |
|                                       | Analog output                         | AM,5  | Multi-function DC (0~10V) output: output frequency, current ( <a href="#">P.54</a> ). |   |
|                                       | Pulse output                          | FM,SD   | Output the pulse of 0~2300Hz.   |   |
| Operation panel                       | Operation monitoring                  | Output frequency monitoring, output current monitoring, and output voltage monitoring, abnormality record (Maximum 12 sets).  |   |   |
|                                       | LED indication lamp (8)               | Forward rotation indication lamp, reverse rotation indication lamp, frequency monitoring indication lamp, voltage monitoring indication lamp, current monitoring indication lamp, mode switching indication lamp, PU terminals control indication lamp, and external terminals control indication lamp. |   |   |
| Communication function                |                                       | RS-485 communication, can select Shihlin/Modbus communication protocol.   |   |   |
| Protection mechanism / alarm function |                                       | Output short circuit protection, Over-current protection, (+/P)-(-/N) over-voltage protection, under-voltage protection, motor over-heat protection ( <a href="#">P.9</a> ), IGBT module over-heat protection, communication abnormality protection, etc.   |   |   |
| Environment                           | Ambient temperature                   | -10 ~ +40°C (non-freezing).   |   |   |
|                                       | Ambient humidity                      | Below 90%Rh (non-condensing).   |   |   |
|                                       | Storage temperature                   | -20 ~ +65°C。  |   |   |
|                                       | Surrounding environment               | Indoor, no corrosive gas, no flammable gas, no flammable powder.  |   |   |
|                                       | Altitude and vibration                | Altitude: below 1000 meters, Vibration: below 5.9m/s <sup>2</sup> (0.6G).   |   |   |
|                                       | Grade of protection                   | IP20  |   |   |
|                                       | The degree of environmental pollution | 2   |   |   |
|                                       | Class of protection                   | Class I   |   |   |
| International certification           |                                       |    |   |   |


## 3.3 Appearance and Dimensions

### 3.3.1 Frame A/B

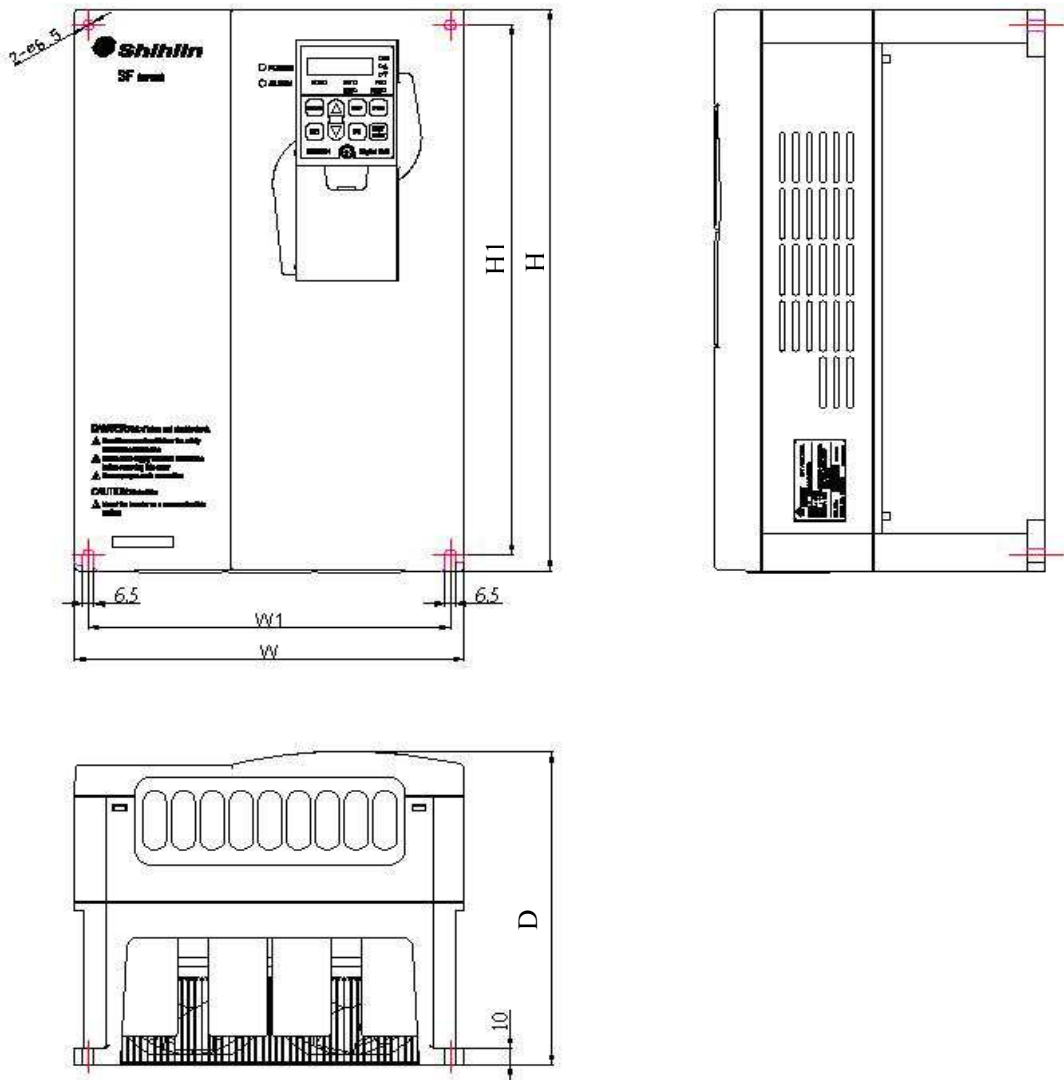


| Model              | Frame | H (mm) | H1 (mm) | W (mm) | W1 (mm) | D (mm) |
|--------------------|-------|--------|---------|--------|---------|--------|
| SF-040-5.5K        | A     | 323    | 303     | 200    | 186     | 186    |
| SF-040-7.5K/5.5K-G |       |        |         |        |         |        |
| SF-020-5.5K        |       |        |         |        |         |        |
| SF-020-7.5K/5.5K-G |       |        |         |        |         |        |
| SF-040-11K/7.5K-G  |       |        |         |        |         |        |
| SF-040-15K/11K-G   | B     | 350    | 330     | 230    | 214     | 195    |
| SF-020-11K/7.5K-G  |       |        |         |        |         |        |
| SF-020-15K/11K-G   |       |        |         |        |         |        |
| SF-020-18.5K/15K-G |       |        |         |        |         |        |
| SF-040-18.5K/15K-G |       |        |         |        |         |        |
| SF-040-22K/18.5K-G |       |        |         |        |         |        |

## 3.3.2 Frame C

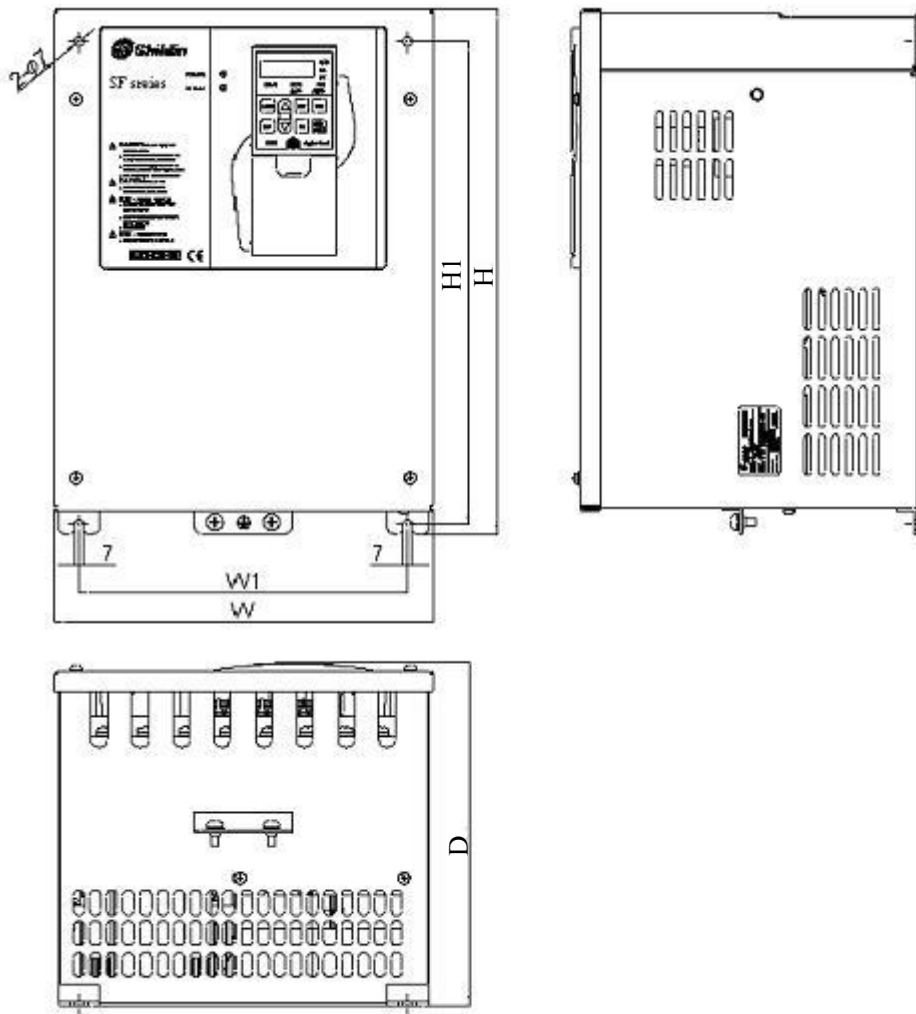


| Inverter model     | Frame | H (mm) | H1 (mm) | W (mm) | W1 (mm) | D (mm) |
|--------------------|-------|--------|---------|--------|---------|--------|
| SF-020-22K/18.5K-G | C     | 379    | 348     | 271    | 236     | 248    |
| SF-020-30K/22K-G   |       |        |         |        |         |        |

## 3.3.3 Frame D/E/F

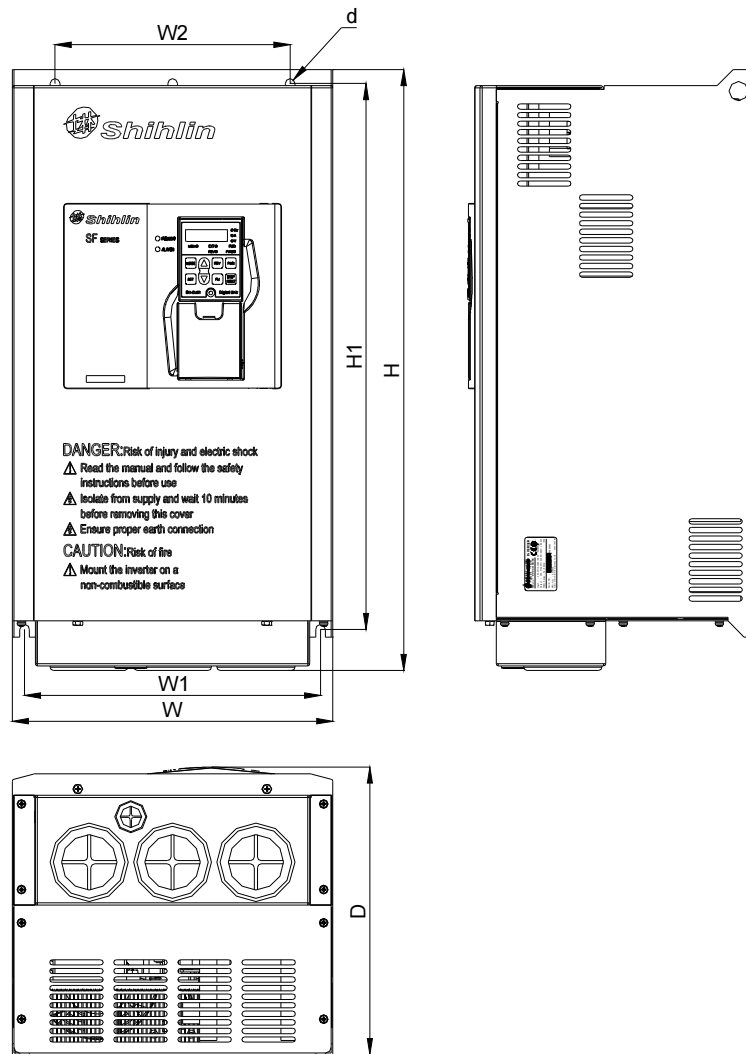

| Model              | Frame | H (mm) | H1 (mm) | W (mm) | W1 (mm) | W2 (mm) | D (mm) | d (mm) |
|--------------------|-------|--------|---------|--------|---------|---------|--------|--------|
| SF-040-30K/22K-G   | D     | 561    | 510     | 300    | 277     | 220     | 270    | 9      |
| SF-040-37K/30K-G   |       |        |         |        |         |         |        |        |
| SF-040-45K/37K-G   |       |        |         |        |         |         |        |        |
| SF-040-55K/45K-G   | E     | 595    | 566     | 370    | 336     | 336     | 286    | 13     |
| SF-020-37K/30K-G   |       |        |         |        |         |         |        |        |
| SF-040-75K/55K-G   |       |        |         |        |         |         |        |        |
| SF-040-90K/75K-G   |       |        |         |        |         |         |        |        |
| SF-020-45K/37K-G   | F     | 850    | 821     | 425    | 381     | 381     | 286    | 13     |
| SF-020-55K/45K-G   |       |        |         |        |         |         |        |        |
| SF-040-110K/90K-G  |       |        |         |        |         |         |        |        |
| SF-040-132K/110K-G |       |        |         |        |         |         |        |        |
| SF-040-160K/132K-G |       |        |         |        |         |         |        |        |

## 3.3.4 Frame G/H

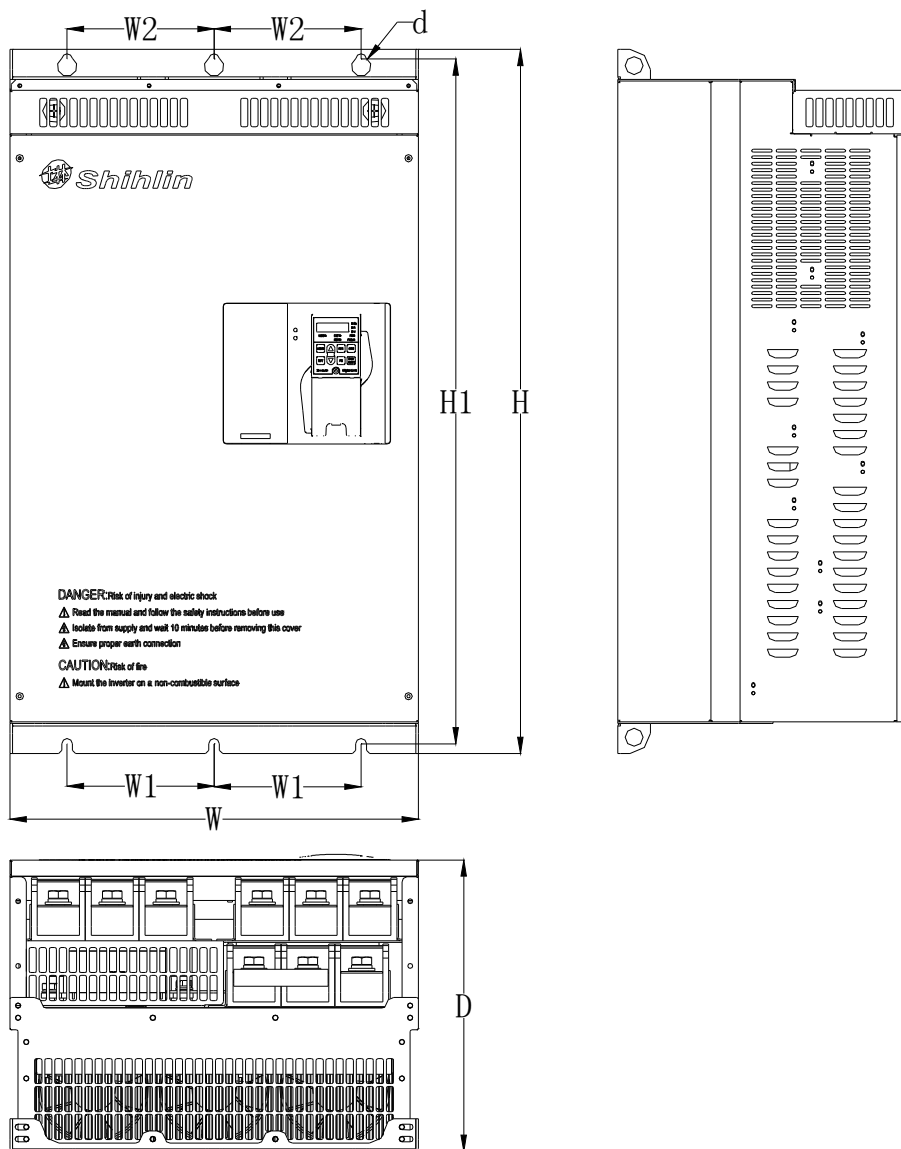


| Model              | Frame | H (mm) | H1 (mm) | W (mm) | W1 (mm) | W2 (mm) | D (mm) | d (mm) |
|--------------------|-------|--------|---------|--------|---------|---------|--------|--------|
| SF-040-185K/160K-G | G     | 870    | 850     | 500    | 180     | 180     | 360    | 13     |
| SF-040-220K/185K-G |       |        |         |        |         |         |        |        |
| SF-040-250K/220K-G |       |        |         |        |         |         |        |        |
| SF-040-280K/250K-G | H     | 1000   | 980     | 600    | 230     | 230     | 400    | 13     |
| SF-040-315K/280K-G |       |        |         |        |         |         |        |        |
| SF-040-355K/315K-G |       |        |         |        |         |         |        |        |




## 3.4 Name of Each Component

### 3.4.1 Nameplate and Model

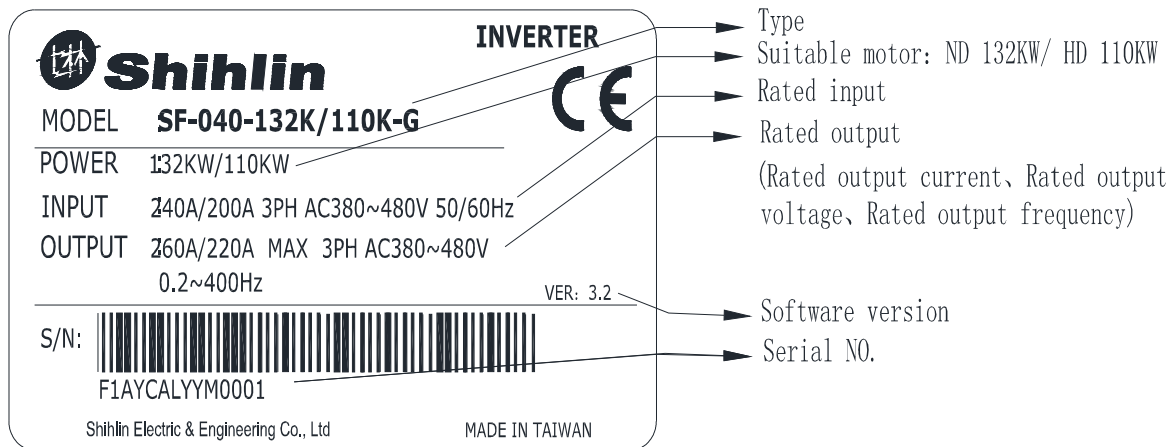


### 3.4.2 Names of the Components of Frame A/B

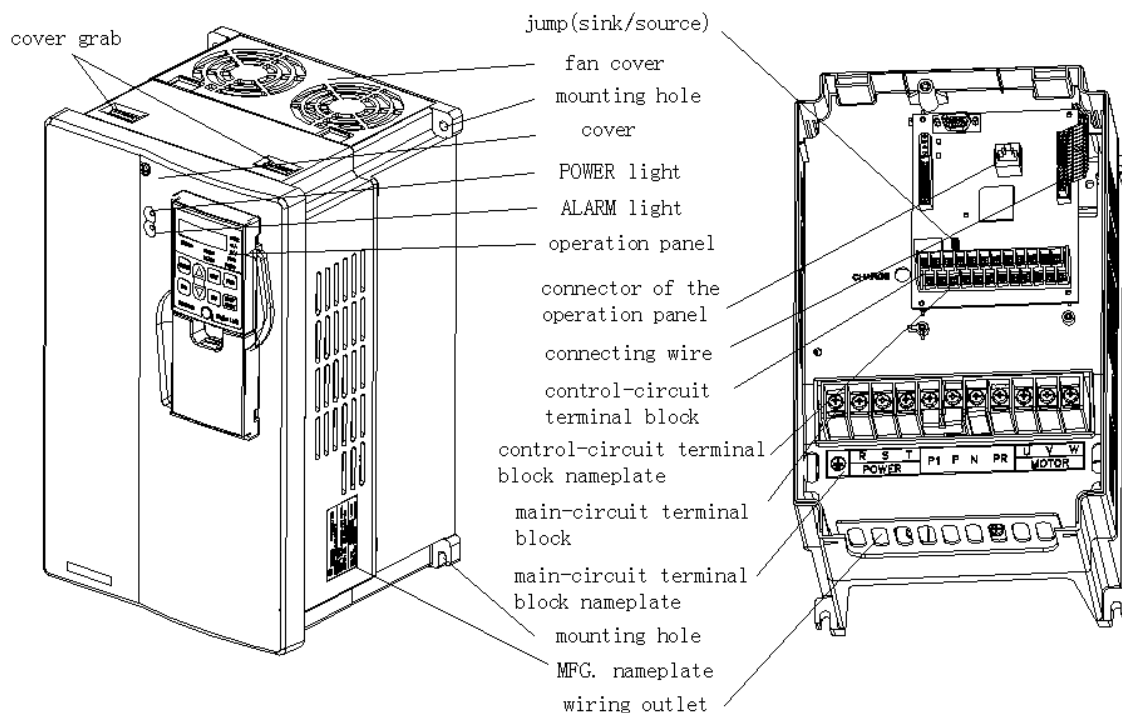


1. The above figure corresponds to all the models of frame A and B.
2. Push down the latch on the top cover and pull the latch toward the front of the inverter to remove the top cover.
3. "Wiring Outlet" is designed for fixing and protecting the lead wire. When wiring, the lead wire must pass through the "wiring outlet" and then connected to the terminals. Use cable ties to fix the wires in a bundle.

## 3.4.3 Names of the Components of Frame C

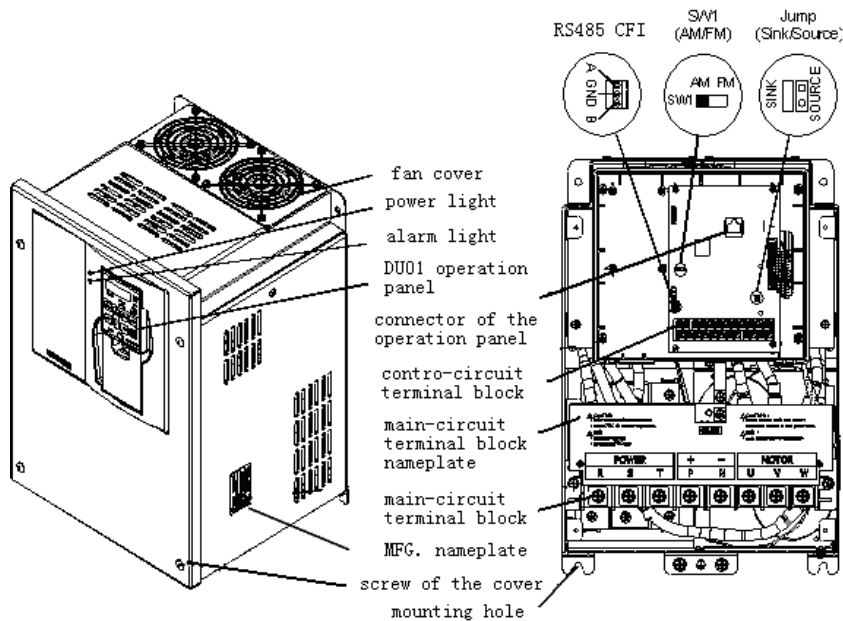

1. The above figure corresponds to all the models of frame C.
2. Loosen up the screws on the top cover and the top cover can be removed.
3. "Wiring Outlet" is designed for fixing and protecting the lead wire. When wiring, lead wire must pass through the "Wiring Outlet" and then connected with the terminals. Use cable ties to fix the wires in a bundle.

## 3.4.4 Names of the Components of Frame D/E/F

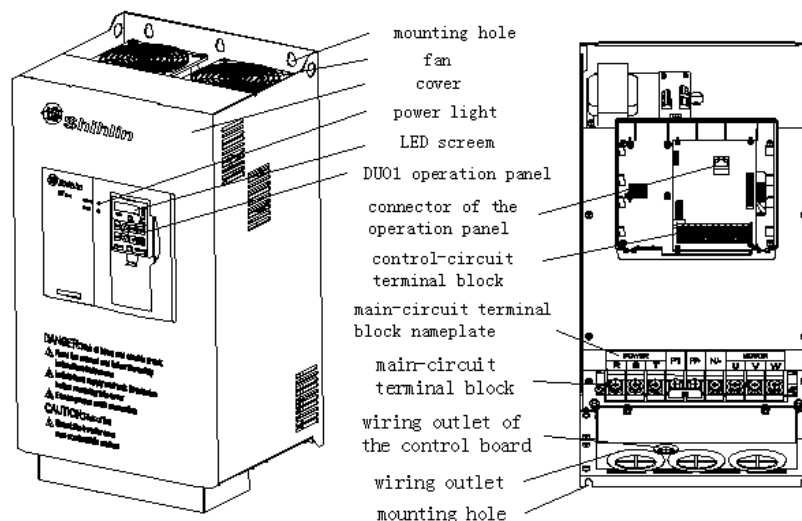


1. The above figure corresponds to all the models of frame D, E and F.
2. Push down the latch on the top cover and pull the latch toward the front of the inverter to remove the top cover.
3. "Wiring Outlet" is designed for fixing and protecting the lead wire. When wiring, the lead wire must passed through the "wiring outlet" and then connected to the terminals. Use cable ties to fix the wires in a bundle.


## 3.4.5 Each Type of Main Loop Terminals Arrangement

- Terminal arrangement


Note: 1. Frame A

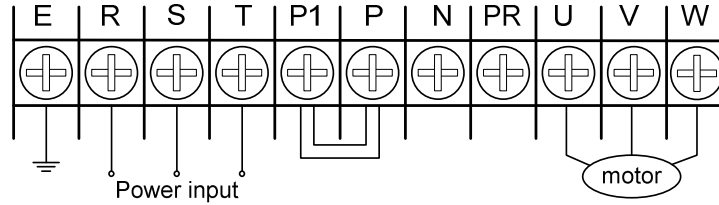


2. Frame B

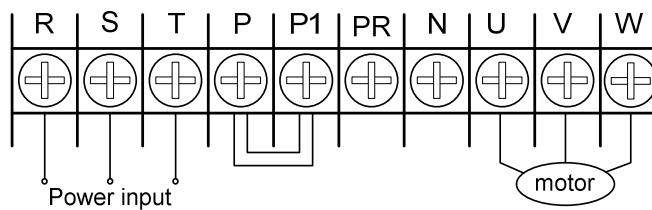


3. Frame C

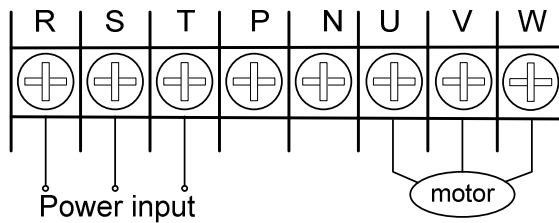


4. Frame D, E and F

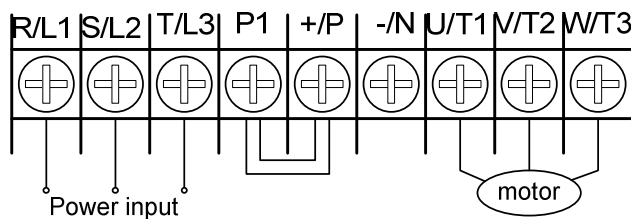


5. Frame G

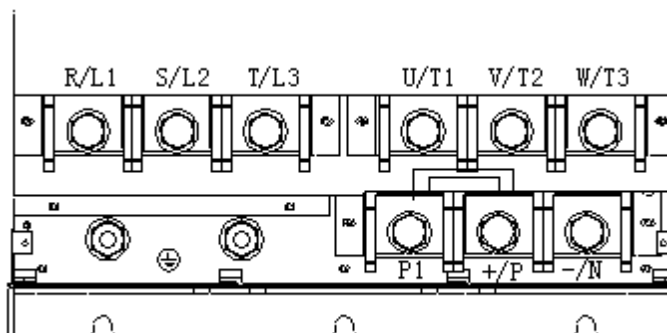

## 6. Frame H

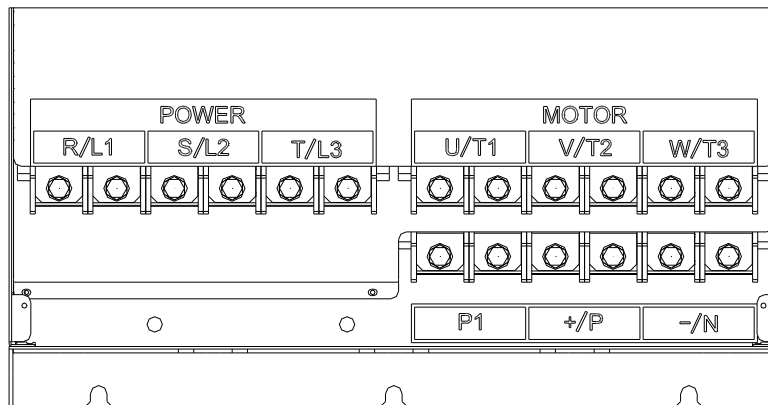


- DC reactor connection

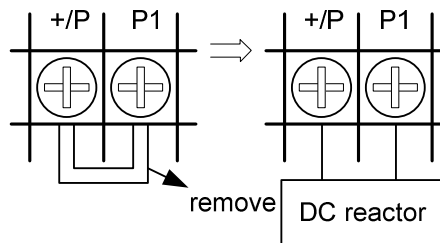

Note: Frame C, E and F corresponded inverters have built-in DC reactor.

- Brake unit connection

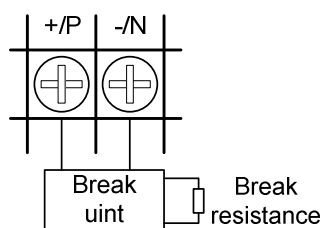

Note: Frame C, D, E and F corresponded inverters have no built-in brake unit. Brake units and brake resistors can be selected for use. The built-in brake unit of frame A and B corresponded inverters can have brake resistors.

Note: Instruction on the frames is presented in Section 3.3.

## **3.5 Installation and Wiring**

### **3.5.1 Transportation**

Take the pedestal when carrying and don't only take the cover or any part of the inverter, otherwise it may drop down.

### **3.5.2 Stockpile**

Keep this product in the packaging before installation and when not in use. To change the frequency that meets the manufacturer's warranty and maintenance conditions, please pay attention to the following regarding storage:

1. Must be placed in dry and without dirt place.
2. The environment temperature for storage position must range from  $-20^{\circ}\text{C}$  to  $+65^{\circ}\text{C}$ .
3. The relative humidity for storage position must range from 0% to 95%, and no condensation.
4. Avoid storing in the environment which contains corrosion gas or liquid.
5. It had better be packed properly and kept on shelf or table.

Note: 1. Even if the humidity meets the standard requirements, icing and condensation can also occur when the temperature changes rapidly. And the place should avoid.

2. Don't place it on the ground, and it should be placed on appropriate shelf. If in the bad surroundings, the desiccant should be placed in the packaging bag.
3. If the custody period is more than 3 months, the ambient temperature should not be higher than  $30^{\circ}\text{C}$ . It is to consider that the character will easily degrade in high temperature when the electrolytic capacitors are deposited without electricity.
4. If the inverter is installed in device or control board when not in use (especially in construction site or the humid and dusty place), the inverter should be removed and put in suitable environment according with the above storage conditions.
5. If the electrolytic capacitors are long-term no electricity, the character will degrade. Do not place it in the state of no electricity for more than one year.

### **3.5.3 EMC Installation Instructions**

Just as other electrical and electronic equipments, an inverter is the source of electromagnetic interference and an electromagnetic receiver when working with a power system. The amount of electromagnetic interference and noise is determined by the working principles of an inverter. In order to guarantee the inverter working reliably in the electromagnetic environment, it must have a certain ability of anti-electromagnetic interference in design. In order to make the drive system work normally, and meet CE declared requirements, please meet the following several aspects requirements in installation:

## 1. Field wiring

Power line supply electric independently from power transformer, five or four core line are generally used, null line and ground sharing a single line is forbidden.

Commonly signal wire (weak) and power wire (heavy) are in control cabinet, for the inverter, power wire is divided into input line and output line. Signal wire is easily interfered by power wire, so that causing the misoperation of the device. When wiring, signal wire and power wire should be distributed in different areas, parallel lines and interlaced lines are forbidden at close range (within 20cm), and especially don't bundle up the two lines. If the signal cables must pass through the power lines, the two should keep 90 degree Angle. Interlace lines and banding together is also forbidden for the input and output line of power wire, especially on the occasions which noise filter is installed. It will cause the coupling of electromagnetic noise through the distributed capacitance of the input and output lines, thus the noise filter will out of action.

Generally a control cabinet has different electric equipments such as inverter, filter, PLC, measurement instrument, their ability of emitting and bearing electromagnetic noise are diverse from each other, and this requires classifying these equipments. The classification can be divided into strong noise equipment and noise sensitive equipment, Install the similar equipments in the same area and, and keep a distance more than 20cm among inhomogeneous equipments.

## 2. Input noise filter, input and output magnet ring (Zero phase reactor)

Adding noise filter to the input terminal, the inverter will be isolated from the other equipments, and its ability of conduction and radiation will be reduced effectively. The better EMI suppression effect will be obtained by installing the input reactor recommended by this manual. By adding winding ferrite bead to the input and output terminal and coordinating with internal filter, the inverters will meet the CE declared and have a better effect.

## 3. Shielding

Good shielding and grounding can greatly reduce the interference of inverter, and can improve the anti-interference ability of the inverter. Sealing off the inverter with the good conductive sheet metal and connecting the sheet metal to ground, the limit value of radiation which CE declared will be met.





## 4. Grounding

The inverter must be connected to the ground safely and reliably. Grounding is not only for equipment and personal safety, but also the simplest, the most efficient and the lowest cost method to solving the EMC problem, so it should be prioritized. Please refer to the section of "terminal wiring".

## 5. Carrier wave


The leakage current contains the leakage current from line to line or over the ground. It depends on the size of the distributed capacitance when wiring and the carrier frequency of the frequency. The higher the carrier frequency, the longer the motor cable, and the larger the cable cross-sectional area is, the larger the leakage current is. Reducing the carrier frequency can effectively reduce the leakage current. When the motor line is long (50m above), the output side should be installed with ac reactor or sine wave filter, when the motor line is longer, a reactor should be installed every other distance. At the same time, reducing carrier frequency can effectively reduce the conduction and radiation interference, and the limits value of the conduction and radiation which CE declared can be met in 2K carrier frequency.

## 3.5.4 Installation
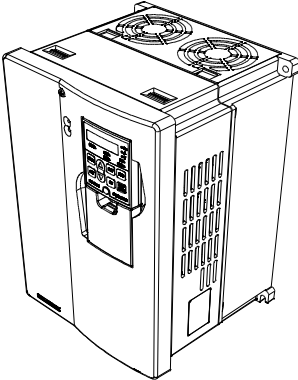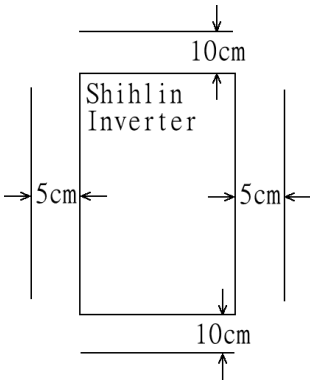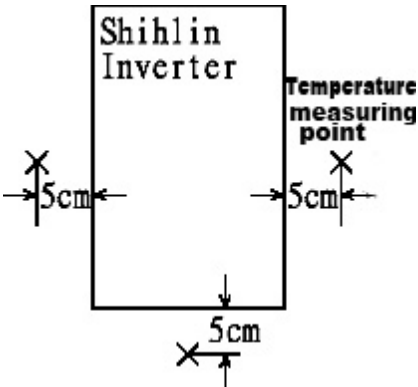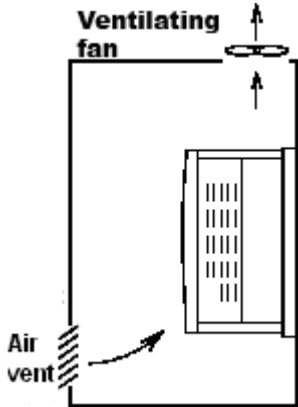
|  |  |
|--|--|
| <p>1. Please install it upward.</p>   | <p>2. Install the inverter with sufficient space at the surroundings.</p>    |
| <p>3. The ambient temperature shall not exceed the permissible value.</p>    | <p>4. Install the inverter at a correct position in a protection case.</p>  |
| <p>5. Please do not install the inverter on a surface of inflammable material such as wood, etc.<br/>         6. Please do not install the inverter at place exposed to explosive gas or inflammable dust.<br/>         7. Please do not install the inverter at places with airborne oil mist and dust.<br/>         8. Please do not install the inverter at places exposed to corrosive gas or high salt air.<br/>         9. Please do not install the inverter in an environment of high temperature and high humidity.</p> |  |

Note: 1. The installation, wire arrangement, dismantling, and maintenance can only be done by qualified electricians.  
 2. Please follow the installation instructions. In the event where installation instructions have not been followed that resulted in damage of the inverter or dangerous accident, the manufacturer shall not be held responsible for any legal responsibility. Please feel free to contact us should you have any question.


## 3.5.5 System Wire Arrangement

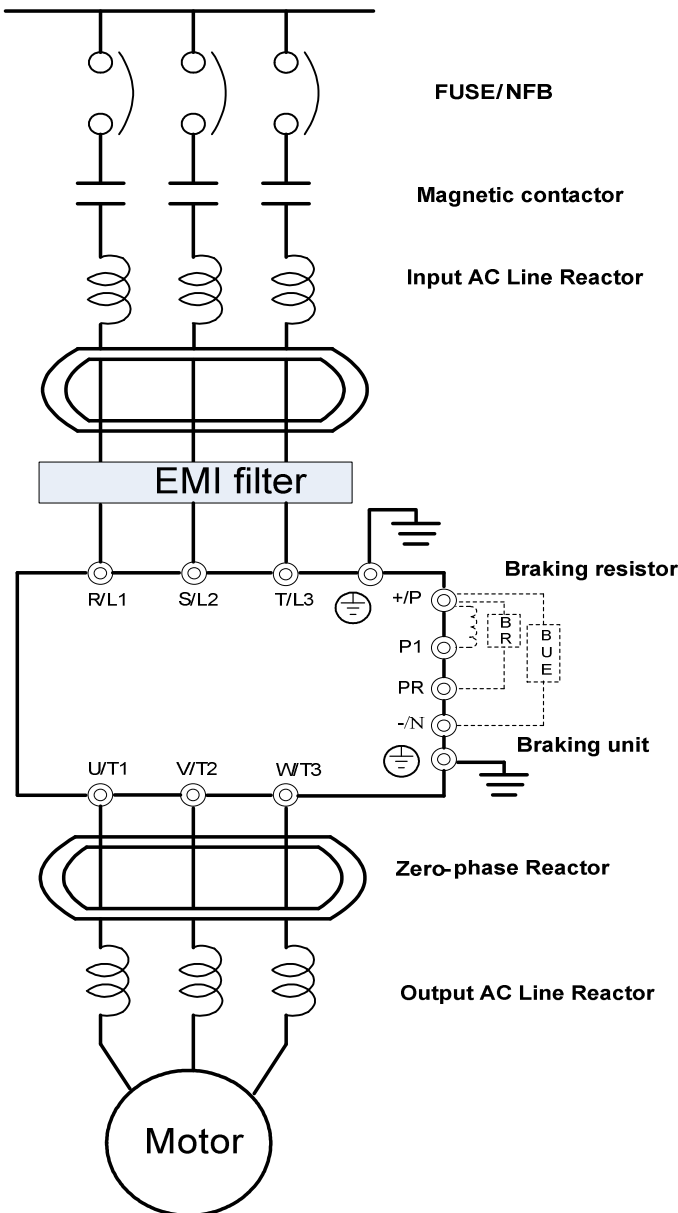

|                        |  |
|------------------------|--|
| Power supply           | Please follow the specific power supply requirement shown in this manual.  |
| Fuse/NFB               | There may be an inrush current during power up. Please refer to 3.7.1 and select the correct fuse /NFB.  |
| Magnetic contactor     | Please do not use a Magnetic contactor as the I/O switch of the inverter, as it will reduce the operating life cycle of the inverter.  |
| Input AC Line Reactor  | AC line reactor should be installed to improve the input power factor. The wiring distance should be less than 10m. Please refer to 3.7.6.   |
| Zero-phase Reactor     | Zero-phase reactors are used to reduce radio noise especially when audio equipment installed near the inverter. Effective for noise reduction on both the input and output sides. Attenuation quality is good for a wide range from AM band to 10MHz. Please refer to 3.7.5. |
| EMI filter             | Used to reduce electromagnetic interference.   |
| Braking unit           | Used to reduce stopping time of the motor.   |
| Output AC Line Reactor | Motor surge voltage amplitudes depending on motor cable length. The output AC line reactor is necessary to install on the inverter output side. Please refer to 3.7.6.   |



## 3.5.6 Terminal Wire Arrangement

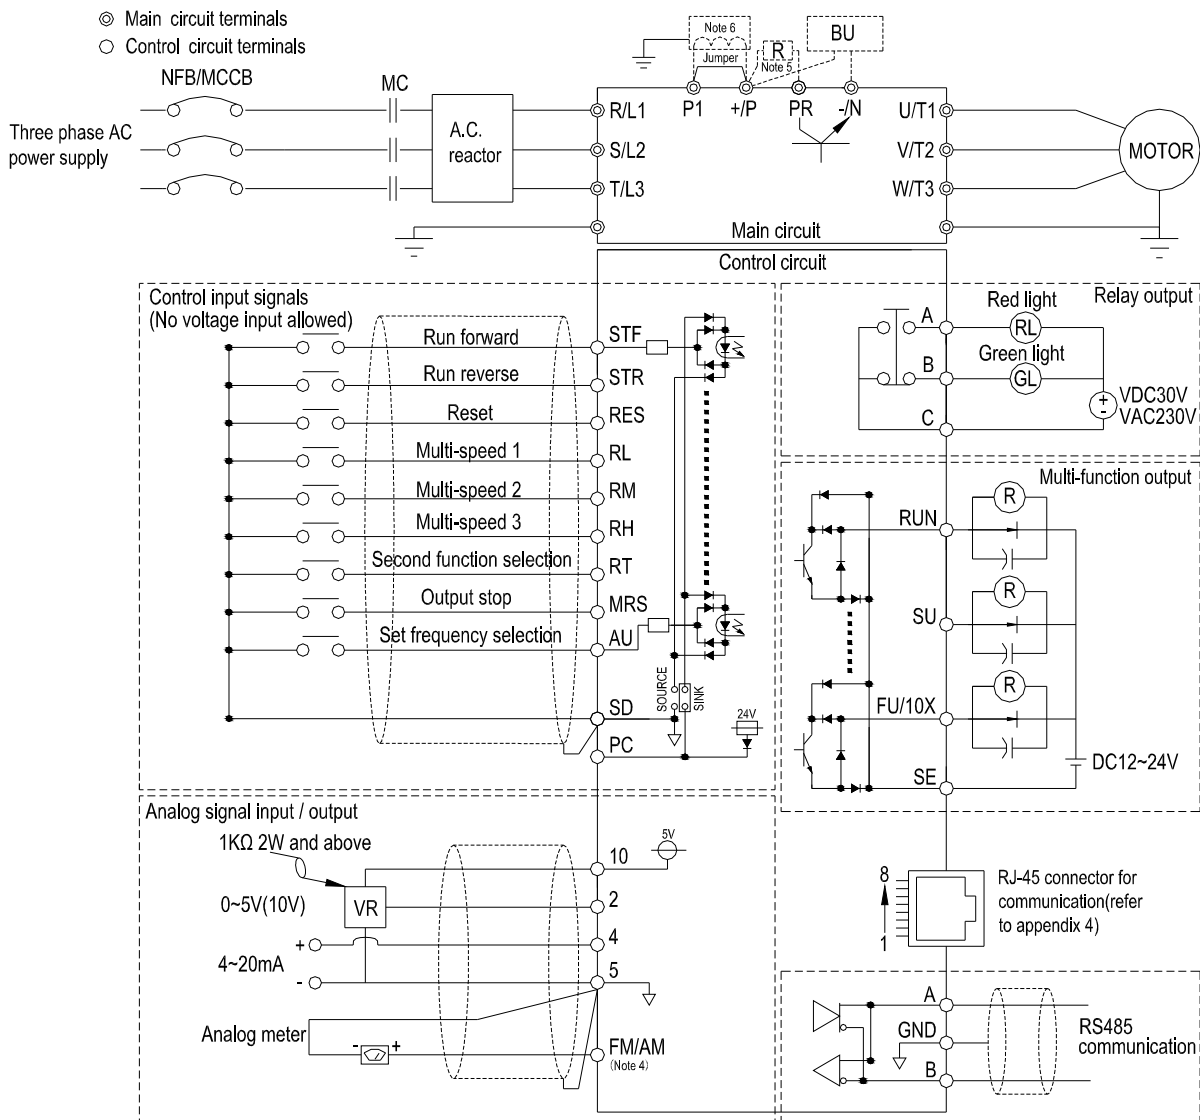


=====Caution:=====

1. Please refer to P.80~P.84, P.86 and P.126~P.128 (OH) of Chapter 5 for the applications of external thermal overload relay.
2. Make sure not to short PC and SD.
3. The DC reactor between +/P and P1 is optional. Please short +/P and P1 when DC reactor is not used.
4. When selecting FM function for the FM/AM output terminal, the reference ground is SD. For more details, please refer to P.64.
5. The brake resistor connection approach between +/P and PR is for frames A and B only. For connecting the brake unit of frame C, D, E, F to between +/P and -/N, please refer to terminal arrangement in 3.4.5
6. Inverters corresponding to frame C、E、F have build-in DC reactors, you can also refer to DC reactor specification on page 34 before adding DC reactors in addition.( When adding DC reactors,please remove the short circuit piece between P1 and +/P.)


=====

Note: 1. For the function of the multi-function control terminals, please refer to [P.80~P.84](#), [P.86](#) and [P.126~P.128](#); For the multi-function output terminals, please refer to [P.40](#), [P.85](#), [P.129](#) and [P.130](#).

2. The multi-function control terminal of SF-Type series inverter can select the sink input approach or the source input approach via the jumper. When the jumper is on the left side, "sink input" mode is chosen, and when the jumper is on the right side, "source input" mode is chosen. See the figure below:

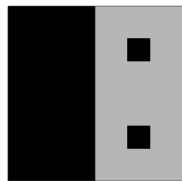


Sink Input Approach

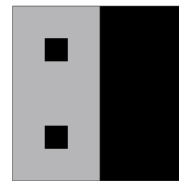


Source Input Approach

No matter what kind of multi-function control terminal is, all of its outside wire arrangement can be considered as a simple switch. If the switch is "on," the control signal will be put into the terminal. If the switch is "off," the control signal is shut off.


If "Sink Input" mode is selected, the function of the terminal is active when it is shorted with SD or connected with the external PLC. In this mode, the current flows out of the corresponding terminal when it is "on". Terminal "SD" is common to the contact input signals. When using an external power supply for output transistor, please use terminal PC as a common to prevent misoperation caused by leakage current.

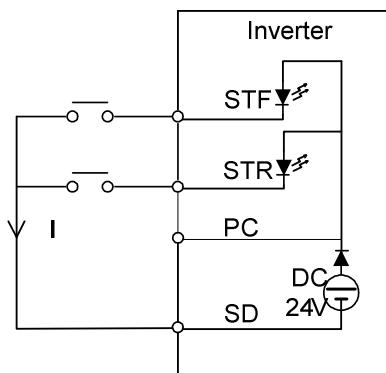

Sink Input: the multi-function control terminal is shorted directly with SD

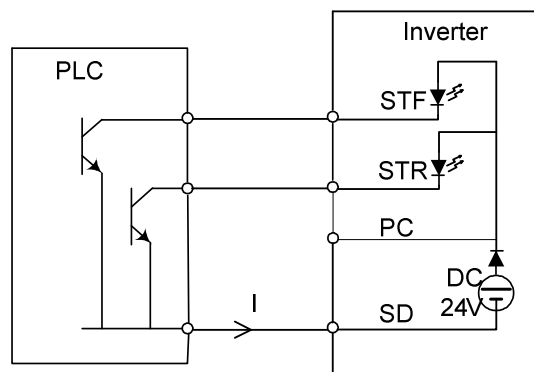


Sink Input: the multi-function control terminal is connected directly with open-collector PLC

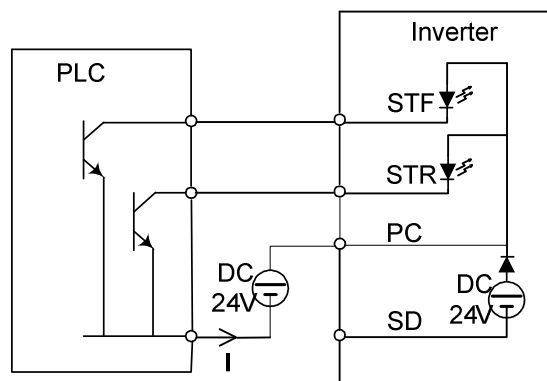


Sink Input: the multi-function control terminal is connected with open-collector PLC and external power supply


If "Source Input" mode is selected, the function of the terminal is active when it is shorted with PC or connected with the external PLC. In this mode, the current flows into the corresponding terminal when it is "on". Terminal PC is common to the contact input signals. When using an external power supply for transistor, please use terminal SD as a common to prevent misoperation caused by leakage current.

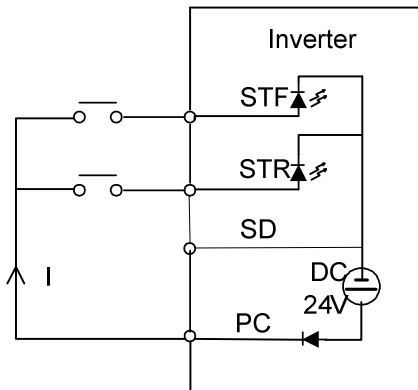

Source Input: the multi-function control terminal is shorted directly with PC

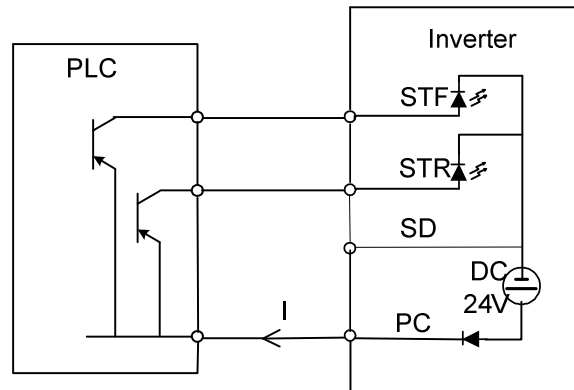


Source Input: the multi-function control terminal is connected directly with open-emitter PLC

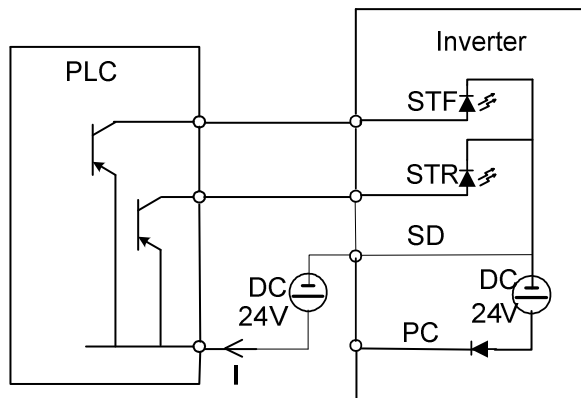

Source Input: the multi-function control terminal is connected with open-emitter PLC and external power supply


# Shihlin Inverter Introduction

| Main-circuit terminals  |  |
|---|--|
| <b>R/L1-S/L2-T/L3</b>   | Connect to the commercial power supply   |
| <b>U/T1-V/T2-W/T3</b>   | Connect to the three-phase squirrel-cage motor.  |
| <b>+P-P1</b>  | Add to the DC reactor.   |
| <b>+P-PR</b>  | Connect to the brake resistor. (Note 1, 2)   |
| <b>(+P)-(-N)</b>  | Connect to the brake unit. (Note 3)  |
|  | Connect the enclosure of the inverter to ground. / For 440V series, special type of grounding shall be adopted. (Note 4) |


Note: 1. For SF-Type series of inverters, brake resistor is not included. For information related to braking resistor, please refer to section [3.4.5](#) and [3.7.3](#).

2. For information related to regenerative voltage, please refer to [P.30](#) in Chapter 5.

3. +P and -N are the positive and negative terminals of the internal DC voltage of the inverter. In order to strengthen the braking capacity during deceleration, it is suggested to purchase the optional “brake unit” which is mounted between the terminals +P and -N. The “brake unit” can effectively dissipate the feedback energy from the motor to the inverter when decelerating. In case there is any problem on purchasing the “brake unit,” please feel free to contact us.

For safety and to reduce noise, the grounding terminal  of the inverter must be well grounded.

To avoid electric shocks and fire accident, external metal wire of electrical equipment should be short and thick, and should be connected to special grounding terminals of an inverter. If several inverters are placed together, all inverters must be connected to the common ground. Please refer to the following diagrams and ensure that no circuit is formed between grounding terminals.

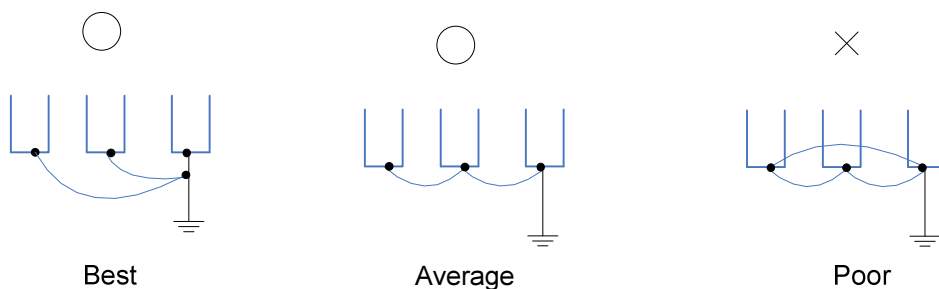


| Control terminals              |               |  |   |
|--------------------------------|---------------|--|---|
| Terminal type                  | Terminal name | Function name  | Remarks and function description  |
| Switch Signal Input            | STF           | Optional   | These terminals are multi-function control terminals (SINK/SOURCE mode is optional).<br>For detailed descriptions, please refer to <a href="#">P.80~P.84</a> , <a href="#">P.86</a> and <a href="#">P.126~P.128</a> , in Chapter 5.   |
|                                | STR           | Optional   |   |
|                                | RL            | Optional   |   |
|                                | RM            | Optional   |   |
|                                | RH            | Optional   |   |
|                                | AU            | Optional   |   |
|                                | RT            | Optional   |   |
|                                | MRS           | Optional   |   |
|                                | RES           | Optional   |   |
|                                | SD            | SD   | Common reference ground for STF, STR, RL, RM, RH, AU, RT, MRS, RES and FM.  |
| PC                             | PC            | In the "Source Input" mode, a common power supply for the terminals referred above is given. |   |
| Analog signal input            | 10            | ---  | The internal power is 5V at this terminal.  |
|                                | 2             | ---  | The input of voltage signal 0~5V or 0~ 10v; it is used to set the target frequency. <a href="#">P.38</a>  |
|                                | 4             | ---  | The input of current signal 4~20mA; it is used to set the target frequency. <a href="#">P.39</a>  |
|                                | 5             | ---  | The common reference ground of 10, 2, 4 and AM.   |
| Relay Output                   | A             | ---  | Normally, A-C is normal open, and B-C is normal closed. These terminals are multi-function relay output. Please refer to <a href="#">P.85</a> .<br>Contact capacity VDC30V / VAC230V-0.3A.  |
|                                | B             | ---  |   |
|                                | C             | ---  |   |
| Open collector output          | SU            | Optional   | The terminals can also be called "multi-function output terminals". The function name can be set by <a href="#">P.40</a> , <a href="#">P.129~P.130</a> . For detailed description, please refer to <a href="#">P.40</a> , <a href="#">P.129~P.130</a> in Chapter 5.   |
|                                | RUN           | Optional   |   |
|                                | FU/10X        | Optional   |   |
|                                | SE            | SE   | Open collector output reference ground.   |
| Analog / pulse output terminal | AM/FM         | ---  | Connected with a frequency meter or an external analog meter to indicate the output frequency or current. Permissible current load: 1mA, 1440 pulse /sec at 60Hz. Please refer to <a href="#">P.54</a> , <a href="#">P.55</a> , <a href="#">P.56</a> , <a href="#">P.64</a> , <a href="#">P.187</a> , <a href="#">P.190</a> , and <a href="#">P.191</a> in Chapter 5. |
| Communication terminal         | A/GND/B       | ---  | RS485 connector for inverter communication with PC/PLC.   |

## 3.5.7 Wiring Precautions

### Main circuit wiring:


1. Do not connect the power supply wires to the “motor connecting terminal U/T1-V/T2-W/T3” or the inverter may be damaged.
2. Please do not mount phase advance capacitor, surge absorbers and electromagnetic contactors at the output terminal of the inverter.

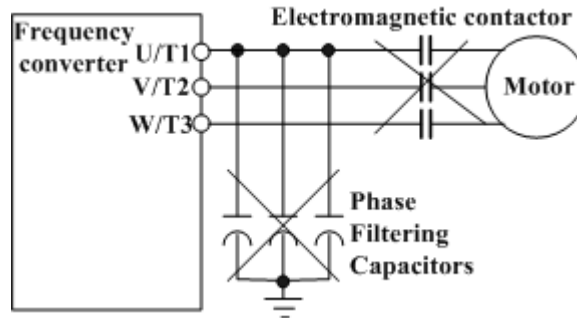

3. Please do not use “electromagnetic contactors” or “no-fuse switches” with an online power to start or stop the motor.
4. Please ensure that the case of the inverter and of the motor are grounded to avoid personnel electric shock.
5. To select appropriate diameter of the main wires and specification of the pressing connection terminal, the no-fuse switch and the electromagnetic contactor, please refer to Section 3.7. If the inverter is far away from the motor, please employ a wire with larger diameter to ensure the voltage drop along the wire is within 2V. (The total length of the wire shall not exceed 500 m)
6. “Pressing connection terminals with insulated sleeve” shall be utilized for the wiring at the power source side and the load side.
7. In a short period after the power supply is shut off, high voltage still exists between terminals (+/P)-(-/N), so do not touch them within 10 minutes to avoid electric shock.

### Control circuit wiring arrangement:

1. For wiring of signal input, use only “insulated wires” with the “metal mesh” corrected grounded.
2. The use of 0.75mm<sup>2</sup> diameter wire is recommended. For stripping the insulating layer, please comply with the instruction of the following picture.

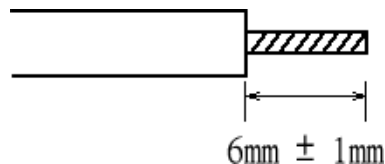

3. Control board wires (including signal input wire) should be far away from the main circuit board wires. Binding the control board wires together with the main circuit wires is strictly forbidden.
4. In the inverter, “terminal SD”, “terminal SE” and “terminal 5” are the referencing grounds for the inner power sources, which are isolated from each other.
5. The best torque force for locking the control line is 2Kgf.cm.


- Note: 1. Terminal blow screws must be fastened tightly. Do not leave any off-cut wire pieces inside the inverter.
2. The installation, wire arrangement, dismounting, and maintenance can only be done by qualified electricians.
  3. Please follow the installation instructions. In the event where installation instructions have not been followed that resulted in damage of the inverter or dangerous accident, the manufacturer shall not be held responsible for any legal responsibility. Please feel free to contact us should you have any question.

## 3.6 Mini Jumper Instruction

Main power isolated from earth:

1. If the inverter is supplied with a non-grounded power supply (IT power), the Mini Jumper must be cut off to prevent circuit damage (according to IEC61800-3) and reduce earth leakage current.
2. Do not cut off the Mini Jumper if the input filter is active. This will increase earth leakage current.
3. Cut off the Mini Jumper if the earth leakage current is overlarge. This will decrease the filtering effect.

The Mini Jumper is shown as follows:

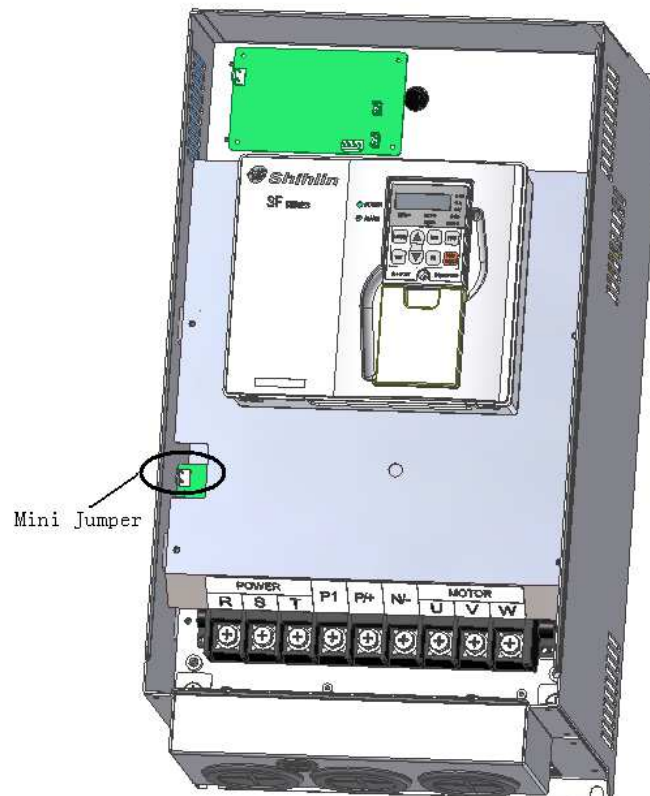

=====**Caution:**=====

1. Do not cut off the Mini jumper after applying power to the inverter. Please make sure that the main power has been switched off before cutting of the Mini Jumper.
2. Electric conductivity of the capacitor will be cut off by cutting off the Mini Jumper. Moreover, the electromagnetic capacitance of the inverter will be reduced by cutting of the Mini Jumper.
3. Do not switch off the Mini Jumper when the main power is a grounded power system. To prevent machine damage, the Mini Jumper shall be cut off if the inverter is installed on an ungrounded power system, a high resistance-grounded (over 30 ohms) power system, or a corner grounded TN system.
4. Mini jumper cannot be cut off when performing the Hi-pot tests.
5. The Mini Jumper is exclusively for frame C, D, E and F corresponded models (Please refer to Section [3.3](#) for frame description).

=====



## 3.7 Selection of Peripheral Equipment

### 3.7.1 No-fuse switch

| Inverter type      | Motor capacity | Power source capacity | Applicable no-fuse switch (NFB/MCCB) type (Shihlin Electric) | Applicable electromagnetic contactor (MC) type (Shihlin Electric) |
|--------------------|----------------|-----------------------|--|---|
| SF-020-5.5K        | 220V 7.5HP     | 12 KVA                | BM60SN3P50A  | S-P25   |
| SF-020-7.5K/5.5K-G | 220V 10HP      | 17 KVA                | BM60SN3P60A  | S-P25   |
| SF-020-11K/7.5K-G  | 220V 15HP      | 20 KVA                | BM100SN3P100A  | S-P35T  |
| SF-020-15K/11K-G   | 220V 20HP      | 28 KVA                | BM160SN3P125A  | S-P50T  |
| SF-020-18.5K/15K-G | 220V 25HP      | 34 KVA                | BM160SN3P160A  | S-P60T  |
| SF-020-22K/18.5K-G | 220V 30HP      | 41 KVA                | BM250SN3P175A  | S-P80T  |
| SF-020-30K/22K-G   | 220V 40HP      | 52 KVA                | BM250SN3P225A  | S-P100T   |
| SF-020-37K/30K-G   | 220V 50HP      | 65 KVA                | BM250SN3P250A  | S-P150T   |
| SF-020-45K/37K-G   | 220V 60HP      | 79 KVA                | BM400SN3P300A  | S-P200T   |
| SF-020-55K/45K-G   | 220V 75HP      | 99 KVA                | BM400SN3P350A  | S-P220T   |
| SF-040-5.5K        | 440V 7.5HP     | 11.5 kVA              | BM30SN3P30A  | S-P21   |
| SF-040-7.5K/5.5K-G | 440V 10HP      | 16 kVA                | BM30SN3P30A  | S-P21   |
| SF-040-11K/7.5K-G  | 440V 15HP      | 20 kVA                | BM60SN3P50A  | S-P30T  |
| SF-040-15K/11K-G   | 440V 20HP      | 27 kVA                | BM60SN3P60A  | S-P40T  |
| SF-040-18.5K/15K-G | 440V 25HP      | 32 kVA                | BM100SN3P75A   | S-P40T  |
| SF-040-22K/18.5K-G | 440V 30HP      | 41 kVA                | BM100SN3P100A  | S-P50T  |
| SF-040-30K/22K-G   | 440V 40HP      | 52 kVA                | BM160SN3P125A  | S-P50T  |
| SF-040-37K/30K-G   | 440V 50HP      | 65 kVA                | BM160SN3P160A  | S-P60T  |
| SF-040-45K/37K-G   | 440V 60HP      | 79 kVA                | BM250SN3P175A  | S-P80T  |
| SF-040-55K/45K-G   | 440V 75HP      | 100kVA                | BM250SN3P175A  | S-P80T  |
| SF-040-75K/55K-G   | 440V 100HP     | 110kVA                | BM250SN3P250A  | S-P100T   |
| SF-040-90K/75K-G   | 440V 120HP     | 137kVA                | BM250SN3P250A  | S-P150T   |
| SF-040-110K/90K-G  | 440V 150HP     | 165kVA                | BM250SN3P250A  | S-P200T   |
| SF-040-132K/110K-G | 440V 175HP     | 198kVA                | BM400SN3P400A  | S-P220T   |
| SF-040-160K/132K-G | 440V 215HP     | 247kVA                | BM400SN3P400A  | S-P300T   |
| SF-040-185K/160K-G | 440V 250HP     | 295kVA                | BM400SN3P400A  | S-P300T   |
| SF-040-220K/185K-G | 440V 300HP     | 367kVA                | BM600SN3P500A  | S-P400T   |
| SF-040-250K/220K-G | 440V 335HP     | 402kVA                | BM600SN3P630A  | M-600C  |
| SF-040-280K/250K-G | 440V 375HP     | 438kVA                | BM600SN3P630A  | M-600C  |
| SF-040-315K/280K-G | 440V 420HP     | 491kVA                | BM800SN3P700A  | M-600C  |
| SF-040-350K/315K-G | 440V 475HP     | 438kVA                | BM800SN3P800A  | M-600C  |

## 3.7.2 Power cable specification / pressing connection terminal specification

| Inverter type      | Power cable specification              |                            |                                      |                            | Pressing connection terminal specification (used by power cables) |                                     |
|--------------------|--|----------------------------|--------------------------------------|----------------------------|---|-------------------------------------|
|                    | Power supply terminal (R/L1.S/L2.T/L3) |                            | Loading terminal (U/T1.V/T2.W/T3)    |                            | Cables for power supply (R/L1.S/L2.T/L3)                          | Cables for loading (U/T1.V/T2.W/T3) |
|                    | Crimping terminal (mm <sup>2</sup> )   | Tightening torque (Kgf.cm) | Crimping terminal (mm <sup>2</sup> ) | Tightening torque (Kgf.cm) |   |                                     |
| SF-020-5.5K        | 5.5                                    | 30                         | 5.5                                  | 30                         | 5.5 - 5   | 5.5 - 5                             |
| SF-020-7.5K/5.5K-G | 14                                     | 30                         | 8                                    | 30                         | 14 - 5  | 8 - 5                               |
| SF-020-11K/5.5K-G  | 14                                     | 30                         | 14                                   | 30                         | 14 - 6  | 14 - 6                              |
| SF-020-15K/11K-G   | 22                                     | 30                         | 22                                   | 30                         | 22 - 6  | 22 - 6                              |
| SF-020-18.5K/15K-G | 38                                     | 30                         | 38                                   | 30                         | 38 - 6  | 38 - 6                              |
| SF-020-22K/18.5K-G | 38                                     | 30                         | 38                                   | 30                         | 38 - 6  | 38 - 6                              |
| SF-020-30K/22K-G   | 60                                     | 200                        | 60                                   | 200                        | 60 - 6  | 60 - 6                              |
| SF-020-37K/30K-G   | 80                                     | 200                        | 80                                   | 200                        | 80 - 10   | 80 - 10                             |
| SF-020-45K/37K-G   | 100                                    | 200                        | 100                                  | 200                        | 100 - 10  | 100 - 10                            |
| SF-020-55K/45K-G   | 100                                    | 200                        | 100                                  | 200                        | 100 - 10  | 100 - 10                            |
| SF-040-5.5K        | 3.5                                    | 30                         | 2                                    | 18                         | 3.5 - 5   | 2 - 5                               |
| SF-040-7.5K/5.5K-G | 3.5                                    | 30                         | 3.5                                  | 30                         | 3.5 - 5   | 3.5 - 5                             |
| SF-040-11K/7.5K-G  | 5.5                                    | 30                         | 5.5                                  | 30                         | 5.5 - 5   | 5.5 - 5                             |
| SF-040-15K/11K-G   | 14                                     | 30                         | 8                                    | 30                         | 14 - 5  | 8 - 5                               |
| SF-040-18.5K/15K-G | 14                                     | 30                         | 8                                    | 30                         | 14 - 6  | 8 - 6                               |
| SF-040-22K/18.5K-G | 22                                     | 30                         | 14                                   | 30                         | 22 - 6  | 14 - 6                              |
| SF-040-30K/22K-G   | 22                                     | 30                         | 22                                   | 30                         | 22 - 8  | 22 - 8                              |
| SF-040-37K/30K-G   | 22                                     | 30                         | 22                                   | 30                         | 22 - 8  | 22 - 8                              |
| SF-040-45K/37K-G   | 38                                     | 30                         | 38                                   | 30                         | 38 - 8  | 38 - 8                              |
| SF-040-55K/45K-G   | 60                                     | 200                        | 60                                   | 200                        | 60 - 10   | 60 - 10                             |
| SF-040-75K/55K-G   | 60                                     | 200                        | 60                                   | 200                        | 60 - 10   | 60 - 10                             |
| SF-040-90K/75K-G   | 60                                     | 200                        | 60                                   | 200                        | 60 - 10   | 60 - 10                             |
| SF-040-110K/90K-G  | 80                                     | 200                        | 80                                   | 200                        | 80 - 10   | 80 - 10                             |
| SF-040-132K/110K-G | 100                                    | 200                        | 125                                  | 300                        | 100 - 10  | 125 - 10                            |
| SF-040-160K/132K-G | 125                                    | 300                        | 125                                  | 300                        | 125 - 10  | 125 - 10                            |
| SF-040-185K/160K-G | 150                                    | 250                        | 150                                  | 250                        | 150-12  | 150-12                              |
| SF-040-220K/185K-G | 2×100                                  | 250                        | 2×100                                | 250                        | 100-12  | 100-12                              |
| SF-040-250K/220K-G | 2×100                                  | 250                        | 2×100                                | 250                        | 100-12  | 100-12                              |
| SF-040-280K/250K-G | 2×125                                  | 250                        | 2×125                                | 250                        | 125-12  | 125-12                              |
| SF-040-315K/280K-G | 2×150                                  | 250                        | 2×150                                | 250                        | 150-12  | 150-12                              |
| SF-040-350K/315K-G | 4×95                                   | 200                        | 4×95                                 | 200                        | 95-12   | 95-12                               |

## 3.7.3 Retrograde Brake Resistor

| Inverter type      | Retrograde brake resistor specification | Inverter type      | Retrograde brake resistor specification |
|--------------------|---|--------------------|---|
| SF-020-5.5K        | 1000W 25Ω or above                      | SF-040-5.5K        | 1000W 75Ω or above                      |
| SF-020-7.5K/5.5K-G | 1200W 20Ω or above                      | SF-040-7.5K/5.5K-G | 1200W 75Ω or above                      |
| SF-020-11K/7.5K-G  | 2400W 13.6Ω or above                    | SF-040-11K/7.5K-G  | 2400W 50Ω or above                      |
| SF-020-15K/11K-G   | 3000W 10Ω or above                      | SF-040-15K/11K-G   | 3000W 40Ω or above                      |
| SF-020-18.5K/15K-G | 4800W 8Ω or above                       | SF-040-18.5K/15K-G | 4800W 32Ω or above                      |
|                    |   | SF-040-22K/18.5K-G | 4800W 27.2Ω or above                    |

Note: 1. For brake resistor whose built-in brake unit offers model options, the capacity of the regenerative brake is based on the condition that the regenerative brake duty is 10% (when braking lasts for 5 seconds, the machine has to be stopped for another 45 seconds must be stopped for heat dissipation). For models without a built-in brake unit, the capacity of the regenerative brake is based on the brake duty of the selected brake unit. The regenerative brake resistor wattage can be reduced according to the user's application (quantity of heat) and the regenerative brake duty. But the resistance must be larger than the value (ohms) listed in the above table (otherwise the inverter will be damaged).

2. In case frequent start and stop operations are required, a larger regenerative brake duty should be set. Meanwhile, a large brake resistor should be employed correspondingly. Please refer to Section 3.4.5 and 3.7.3 for selecting and purchasing the regenerative brake resistors. Please feel free to contact us if there is any problem regarding the selection of brake resistors.

3. Frame C, D, E and F corresponded inverters have no built-in brake unit. Please select and purchase an external brake unit according to the brake unit section in the manual.

## 3.7.4 Reactor

- AC input reactor

3-Phase, 220V, 50/60Hz

| Inverter type      | Recommended reactor |                   |                 |
|--------------------|---------------------|-------------------|-----------------|
|                    | Type                | Rated current (A) | Inductance (mH) |
| SF-020-5.5K        | BAL-5.5K            | 30                | 0.93            |
| SF-020-7.5K/5.5K-G | BAL-7.5K            | 40                | 0.7             |
| SF-020-11K/7.5K-G  | BAL-11K             | 60                | 0.47            |
| SF-020-15K/11K-G   | BAL-15K             | 80                | 0.35            |
| SF-020-18.5K/15K-G | BAL-18.5K           | 90                | 0.31            |
| SF-020-22K/18.5K-G | BAL-22K             | 120               | 0.23            |
| SF-020-30K/22K-G   | BAL-30K             | 150               | 0.19            |
| SF-020-37K/30K-G   | BAL-37K             | 200               | 0.14            |
| SF-020-45K/37K-G   | BAL-45K             | 250               | 0.11            |
| SF-020-55K/45K-G   | BAL-55K             | 250               | 0.11            |

3-Phase, 440V, 50/60Hz

| Inverter type      | Recommended reactor |                   |                 |
|--------------------|---------------------|-------------------|-----------------|
|                    | Type                | Rated current (A) | Inductance (mH) |
| SF-040-5.5K        | BALH-5.5K           | 15                | 1.9             |
| SF-040-7.5K/5.5K-G | BALH-7.5K           | 20                | 1.4             |
| SF-040-11K/7.5K-G  | BALH-11K            | 30                | 0.93            |
| SF-040-15K/11K-G   | BALH-15K            | 40                | 0.7             |
| SF-040-18.5K/15K-G | BALH-18.5K          | 50                | 0.56            |
| SF-040-22K/18.5K-G | BALH-22K            | 60                | 0.47            |
| SF-040-30K/22K-G   | BALH-30K            | 80                | 0.35            |
| SF-040-37K/30K-G   | BALH-37K            | 90                | 0.31            |
| SF-040-45K/37K-G   | BALH-45K            | 120               | 0.23            |
| SF-040-55K/45K-G   | BALH-55K            | 150               | 0.19            |
| SF-040-75K/55K-G   | BALH-75K            | 200               | 0.14            |
| SF-040-90K/75K-G   | BALH-90K            | 250               | 0.11            |
| SF-040-110K/90K-G  | BALH-110K           | 250               | 0.11            |
| SF-040-132K/110K-G | BALH-132K           | 290               | 0.096           |
| SF-040-160K/132K-G | BALH-160K           | 330               | 0.085           |
| SF-040-185K/160K-G | BALH-185K           | 390               | 0.036           |
| SF-040-220K/185K-G | BALH-220K           | 490               | 0.028           |
| SF-040-250K/220K-G | BALH-250K           | 530               | 0.026           |
| SF-040-280K/250K-G | BALH-280K           | 600               | 0.023           |
| SF-040-315K/280K-G | BALH-315K           | 660               | 0.021           |
| SF-040-355K/315K-G | BALH-355K           | 800               | 0.017           |

- AC output reactor

### 3-Phase, 220V, 50/60Hz

| Inverter type      | Recommended reactor |                   |                 |
|--------------------|---------------------|-------------------|-----------------|
|                    | Type                | Rated current (A) | Inductance (mH) |
| SF-020-5.5K        | BAO-5.5K            | 30                | 0.23            |
| SF-020-7.5K/5.5K-G | BAO-7.5K            | 40                | 0.18            |
| SF-020-11K/7.5K-G  | BAO-11K             | 60                | 0.12            |
| SF-020-15K/11K-G   | BAO-15K             | 80                | 0.087           |
| SF-020-18.5K/15K-G | BAO-18.5K           | 90                | 0.078           |
| SF-020-22K/18.5K-G | BAO-22K             | 120               | 0.058           |
| SF-020-30K/22K-G   | BAO-30K             | 150               | 0.047           |
| SF-020-37K/30K-G   | BAO-37K             | 200               | 0.035           |
| SF-020-45K/37K-G   | BAO-45K             | 250               | 0.028           |
| SF-020-55K/45K-G   | BAO-55K             | 250               | 0.028           |

### 3-Phase, 440V, 50/60Hz

| Inverter type      | Recommended reactor |                   |                 |
|--------------------|---------------------|-------------------|-----------------|
|                    | Type                | Rated current (A) | Inductance (mH) |
| SF-040-5.5K        | BAOH-5.5K           | 15                | 0.47            |
| SF-040-7.5K/5.5K-G | BAOH-7.5K           | 20                | 0.35            |
| SF-040-11K/7.5K-G  | BAOH-11K            | 30                | 0.23            |
| SF-040-15K/11K-G   | BAOH-15K            | 40                | 0.18            |
| SF-040-18.5K/15K-G | BAOH-18.5K          | 50                | 0.14            |
| SF-040-22K/18.5K-G | BAOH-22K            | 60                | 0.12            |
| SF-040-30K/22K-G   | BAOH-30K            | 80                | 0.087           |
| SF-040-37K/30K-G   | BAOH-37K            | 90                | 0.078           |
| SF-040-45K/37K-G   | BAOH-45K            | 120               | 0.058           |
| SF-040-55K/45K-G   | BAOH-55K            | 150               | 0.047           |
| SF-040-75K/55K-G   | BAOH-75K            | 200               | 0.035           |
| SF-040-90K/75K-G   | BAOH-90K            | 250               | 0.028           |
| SF-040-110K/90K-G  | BAOH-110K           | 250               | 0.028           |
| SF-040-132K/110K-G | BAOH-132K           | 290               | 0.024           |
| SF-040-160K/132K-G | BAOH-160K           | 330               | 0.021           |
| SF-040-185K/160K-G | BAOH-185K           | 390               | 0.018           |
| SF-040-220K/185K-G | BAOH-220K           | 490               | 0.014           |
| SF-040-250K/220K-G | BAOH-250K           | 530               | 0.013           |
| SF-040-280K/250K-G | BAOH-280K           | 600               | 0.012           |
| SF-040-315K/280K-G | BAOH-315K           | 660               | 0.011           |
| SF-040-355K/315K-G | BAOH-355K           | 800               | 0.0087          |

Note: It is recommended to use the AC input / output reactor which produced by SHANGHAI EAGTOP ELECTRONIC TECHNOLOGY CO., LTD.

- DC reactor specification

### 3-Phase, 220V, 50/60Hz

| Inverter type      | Recommended reactor |                   |                 |
|--------------------|---------------------|-------------------|-----------------|
|                    | Type                | Rated current (A) | Inductance (mH) |
| SF-020-5.5K        | BEL-5.5K            | 33                | 2.0             |
| SF-020-7.5K/5.5K-G | BEL-7.5K            | 40                | 1.3             |
| SF-020-11K/7.5K-G  | BEL-11K             | 65                | 0.80            |
| SF-020-15K/11K-G   | BEL-15K             | 78                | 0.70            |
| SF-020-18.5K/15K-G | BEL-18.5K           | 95                | 0.54            |
| SF-020-22K/18.5K-G | BEL-22K             | 115               | 0.45            |
| SF-020-30K/22K-G   | BEL-30K             | 160               | 0.36            |
| SF-020-37K/30K-G   | BEL-37K             | 180               | 0.33            |
| SF-020-45K/37K-G   | BEL-45K             | 250               | 0.26            |
| SF-020-55K/45K-G   | BEL-55K             | 340               | 0.17            |

### 3-Phase, 440V, 50/60Hz

| Inverter type      | Recommended reactor |                   |                 |
|--------------------|---------------------|-------------------|-----------------|
|                    | Type                | Rated current (A) | Inductance (mH) |
| SF-040-5.5K        | BELH-5.5K           | 23                | 3.6             |
| SF-040-7.5K/5.5K-G | BELH-7.5K           | 23                | 3.6             |
| SF-040-11K/7.5K-G  | BELH-11K            | 33                | 2.0             |
| SF-040-15K/11K-G   | BELH-15K            | 40                | 1.3             |
| SF-040-18.5K/15K-G | BELH-18.5K          | 50                | 1.1             |
| SF-040-22K/18.5K-G | BELH-22K            | 65                | 0.80            |
| SF-040-30K/22K-G   | BELH-30K            | 78                | 0.70            |
| SF-040-37K/30K-G   | BELH-37K            | 95                | 0.54            |
| SF-040-45K/37K-G   | BELH-45K            | 115               | 0.45            |
| SF-040-55K/45K-G   | BELH-55K            | 160               | 0.36            |
| SF-040-75K/55K-G   | BELH-75K            | 180               | 0.33            |
| SF-040-90K/75K-G   | BELH-90K            | 250               | 0.26            |
| SF-040-110K/90K-G  | BELH-110K           | 340               | 0.17            |
| SF-040-132K/110K-G | BELH-132K           | 340               | 0.17            |
| SF-040-160K/132K-G | BELH-160K           | 460               | 0.09            |
| SF-040-185K/160K-G | BELH-185K           | 460               | 0.096           |
| SF-040-220K/185K-G | BELH-220K           | 650               | 0.072           |
| SF-040-250K/220K-G | BELH-250K           | 650               | 0.072           |
| SF-040-280K/250K-G | BELH-280K           | 650               | 0.072           |
| SF-040-315K/280K-G | BELH-315K           | 1000              | 0.062           |
| SF-040-355K/315K-G | BELH-355K           | 1000              | 0.062           |

Note: Frame C, E and F corresponded model have a built-in DC reactor. External reactors can be added, too, by referring to the above specification table. Optional configurations corresponding to fram G and H are external, and the outline diagram of reactor can be referred to in appendix 5.

## 3.7.5 Filter

- AC input filter

3-Phase, 220V, 50/60Hz

| Inverter type      | kW      | HP     | Rated Amps of reactor | Types of filter |
|--------------------|---------|--------|-----------------------|-----------------|
| SF-020-5.5K        | 5.5     | 7.5    | 24                    | NF020-5.5K      |
| SF-020-7.5K/5.5K-G | 7.5/5.5 | 10/7.5 | 32                    | NF020-11K       |
| SF-020-11K/7.5K-G  | 11/7.5  | 15/10  | 45                    | NF020-11K       |
| SF-020-15K/11K-G   | 15/11   | 20/15  | 60                    | NF020-15K       |
| SF-020-18.5K/15K-G | 18.5/15 | 25/20  | 73                    | NF020-18.5K     |
| SF-020-22K/18.5K-G | 22/18.5 | 30/25  | 91                    | NF020-22K       |
| SF-020-30K/22K-G   | 30/22   | 40/30  | 110                   | NF020-37K       |
| SF-020-37K/30K-G   | 37/30   | 50/40  | 150                   | NF020-37K       |
| SF-020-45K/37K-G   | 45/37   | 60/50  | 180                   | NF020-45K       |
| SF-020-55K/45K-G   | 55/45   | 75/60  | 220                   | NF020-55K       |

3-Phase, 440V, 50/60Hz

| Inverter type      | kW      | HP      | Rated Amps of reactor | Types of filter |
|--------------------|---------|---------|-----------------------|-----------------|
| SF-040-5.5K        | 5.5     | 7.5     | 13                    | NF040-7.5K      |
| SF-040-7.5K/5.5K-G | 7.5/5.5 | 10/7.5  | 18                    | NF040-7.5K      |
| SF-040-11K/7.5K-G  | 11/7.5  | 15/10   | 24                    | NF040-15K       |
| SF-040-15K/11K-G   | 15/11   | 20/15   | 32                    | NF040-15K       |
| SF-040-18.5K/15K-G | 18.5/15 | 25/18.5 | 38                    | NF040-22K       |
| SF-040-22K/18.5K-G | 22/18.5 | 30/25   | 45                    | NF040-22K       |
| SF-040-30K/22K-G   | 30/22   | 40/30   | 60                    | NF040-37K       |
| SF-040-37K/30K-G   | 37/30   | 50/40   | 73                    | NF040-37K       |
| SF-040-45K/37K-G   | 45/37   | 60/50   | 91                    | NF040-55K       |
| SF-040-55K/45K-G   | 55/45   | 75/60   | 110                   | NF040-55K       |
| SF-040-75K/55K-G   | 75/55   | 100/75  | 150                   | NF040-75K       |
| SF-040-90K/75K-G   | 90/75   | 120/100 | 180                   | NF040-90K       |
| SF-040-110K/90K-G  | 110/90  | 150/120 | 220                   | NF040-110K      |
| SF-040-132K/110K-G | 132/110 | 175/150 | 260                   | NF040-132K      |
| SF-040-160K/132K-G | 160/132 | 215/175 | 310                   | NF040-160K      |
| SF-040-185K/160K-G | 185/160 | 250/215 | 340                   | NF040-185K      |
| SF-040-220K/185K-G | 220/185 | 300/250 | 425                   | NF040-220K      |
| SF-040-250K/220K-G | 250/220 | 335/300 | 480                   | NF040-250K      |
| SF-040-280K/250K-G | 280/250 | 375/335 | 530                   | NF040-280-K     |
| SF-040-315K/280K-G | 315/280 | 420/375 | 620                   | NF040-315K      |
| SF-040-355K/315K-G | 355/315 | 475/420 | 683                   | NF040-355K      |

Note: Products of LCR Electronics (Kunshan) Co., Ltd are recommended for the filter used here.

## 4. Primary Operation

### 4.1 Operating Modes of the Inverter

The operation modes are related to the reference source of the target frequency and the signal source of the motor starting. The Shihlin SF-TYPE inverter has a total of nine kinds of operation modes, namely, "PU mode", "JOG mode", "external mode", "communication mode", "combined mode 1", "combined mode 2", "combined mode 3", "combined mode 4" and "combined mode 5".

You can use DU01 operation panel to monitor the output frequency, the output voltage and the output current, as well as to view the alarm message, the parameter setting and the frequency setting. The operator has four work modes, namely, "operation mode", "monitoring mode", "frequency setting mode" and "parameter setting mode".

| Related parameters            | Values        | Operation mode                             | The reference source of target frequency   | The signal source of motor starting                       | Remarks  |
|-------------------------------|---------------|--|--|---|--|
| Operation mode selection P.79 | 0             | PU mode                                    | <b>DU01 operation panel</b>  | The <b>FWD</b> or <b>REV</b> key of DU01 operation panel. | The "PU mode", "JOG mode" and "external mode" are interchangeable. |
|                               |               | JOG mode                                   | The set value of P.15  | The <b>FWD</b> or <b>REV</b> key of DU01 operation panel. |  |
|                               |               | External mode                              | "External voltage/current signal", "combination of multi-speed stage levels" and external JOG (P.15) | <b>External forward and reverse terminals</b>             |  |
|                               |               |  | <b>Frequency of each section in the programmed operation mode (P.131~P.138)</b>                      | <b>External STF terminal</b>                              |  |
|                               | 1             | PU mode                                    | Equal to the "PU mode" when <u>P.79</u> = 0  |   | The "PU mode" and "JOG mode" are interchangeable.                  |
|                               |               | JOG mode                                   | Equal to the "PU mode" when P.79 = 0   |   |  |
| 2                             | External mode | Equal to the "External mode" when P.79 = 0 |  |   |  |



# Primary Operation

Primary operation

| Related parameters            | Values | Operation mode     | The reference source of target frequency  | The signal source of motor starting                       | Remarks |
|-------------------------------|--------|--------------------|---|---|---------|
| Operation mode selection P.79 | 3      | Communication mode | <b>Communication</b>  | <b>Communication</b>                                      |         |
|                               | 4      | Combined Mode 1    | <b>DU01 operation panel</b>   | <b>External forward and reverse terminals</b>             |         |
|                               | 5      | Combined Mode 2    | “External voltage / current signal” and “combination of multi-speed stage levels”       | The <b>FWD</b> or <b>REV</b> key of DU01 operation panel. |         |
|                               | 6      | Combined Mode 3    | Communication, “combination of multi-speed stage levels” and External JOG (P.15)        | <b>External forward and reverse terminals</b>             |         |
|                               | 7      | Combined Mode 4    | “External voltage / current signal” and “combination of multi-speed stage levels”       | <b>Communication</b>                                      |         |
|                               | 8      | Combined Mode 5    | DU01 operation panel, “combination of multi-speed stage levels” and External JOG (P.15) | <b>External forward and reverse terminals</b>             |         |


When P.79=0, the external mode is the default mode after the inverter is turned on. Use P.79 to switch the operation mode.

# Primary Operation


## 4.1.1 The flow chart for switching the operation mode using DU01 operation panel

### panel

When P.79=0:

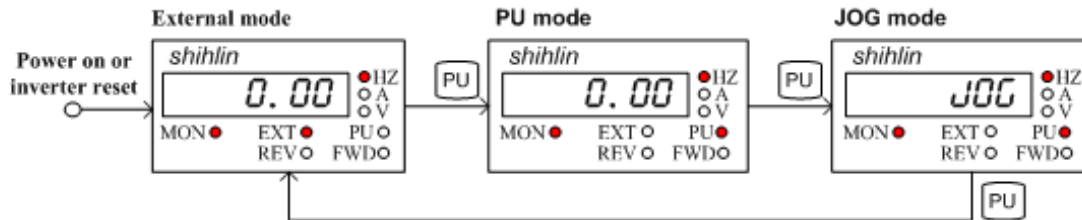


When P.79 = 1:

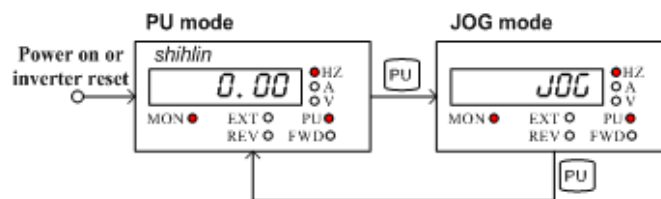

- Note: 1. In “PU mode,” the indicating lamp **PU** will light up on the operation panel.  
 2. In “external mode,” indicating lamp **EXT** will light up on the operation panel.  
 3. In “combined mode 1, 2, 3, 4, or 5,” the indicating lamp **PU** and **EXT** will light up.  
 4. In “JOG mode,” the indicating lamp **PU** will light up, and at the same time, the display screen will display *JOG* while the motor is not running.  
 5. No flow chart when P.79=2, 3, 4, 5, 6, 7 or 8 because the operation mode will be constant.


## 4.1.2 The flow chart for switching the working mode using DU01 operation panel

### panel

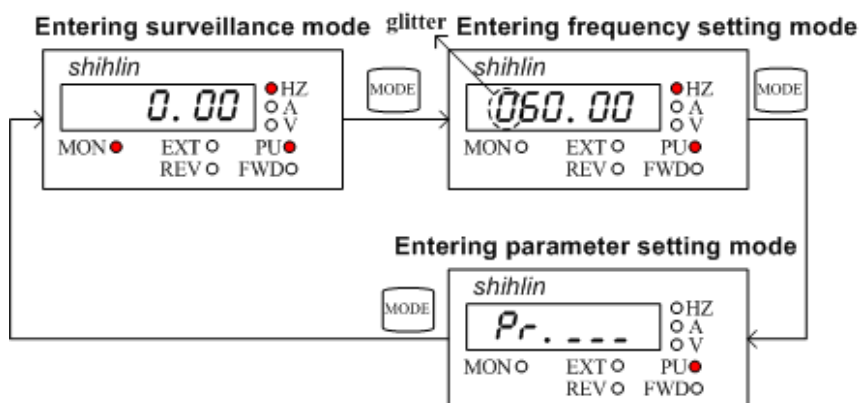

- Note: 1. Please refer to section 4.1.3 for the detailed operation flow under the monitoring mode.  
 2. Please refer to section 4.1.4 for the detailed operation flow under the frequency setting mode.  
 3. Please refer to section 4.1.5 for the detailed operation flow under the parameter setting mode.  
 4. Please refer to Section 4.1.2 for detailed operation flow under the switching operation mode.


## 4.1.3 Operation flow charts for monitoring mode with DU01

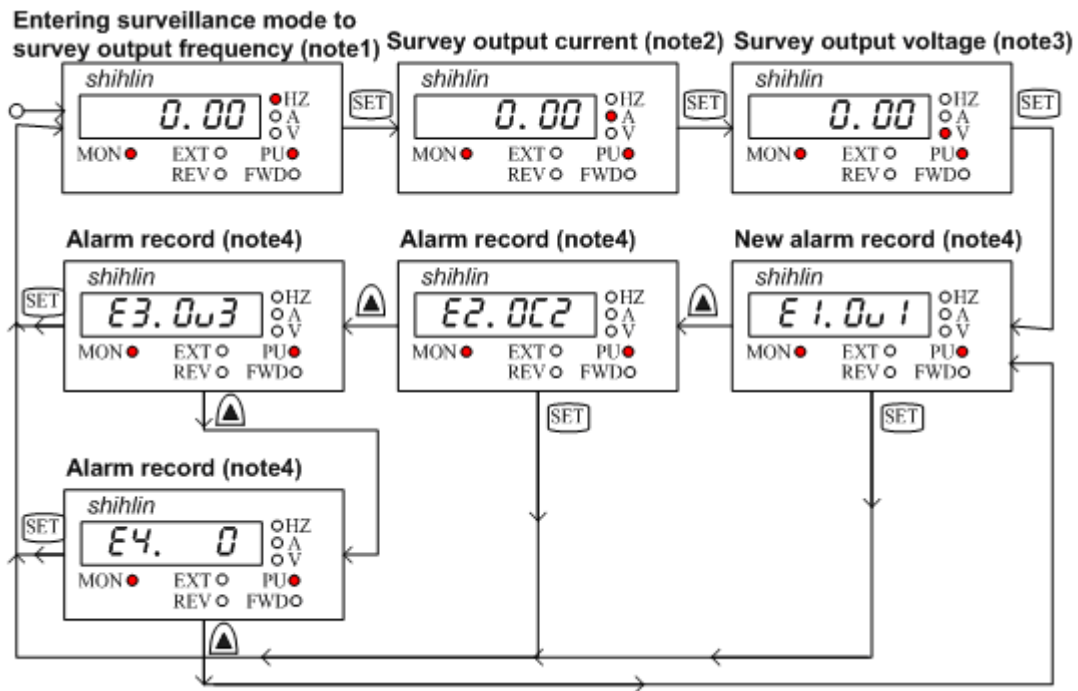


- Note: 1. In the “monitoring output frequency mode”, indicating lamp **MON** and **Hz** will light up, and the screen will display the current output frequency.
2. In the “monitoring output current mode”, indicating lamp **MON** and **A** will light up, and the screen will display the current output current.
3. In the “monitoring output voltage mode”, indicating lamp **MON** and **V** will light up, and the screen will display the current output voltage.
4. When in the “browsing alarm record mode,” indicating lamp **MON** will light up, and the screen will display the current alarm code.
5. For alarm codes, please refer to [Appendix 2](#).

## 4.1.4 Operation flow charts for frequency setting mode with DU01

Use ▲ or ▼ key for setting up the frequency.

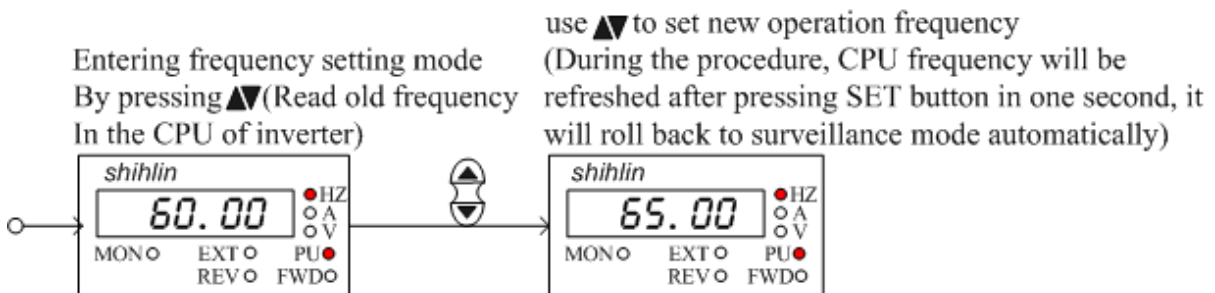


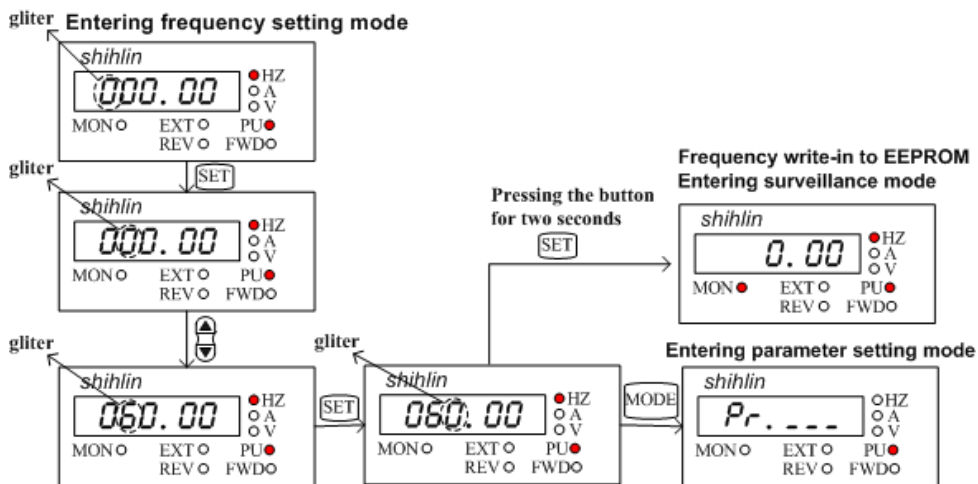

Press the MODE key to enter the frequency setting mode.





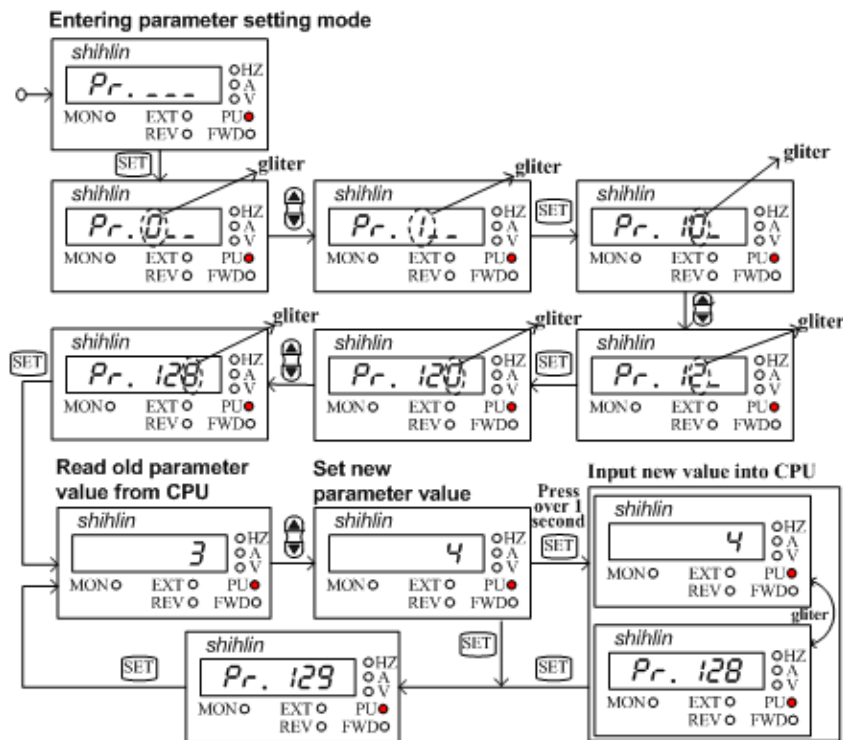


- Note: 1. Use ▲ or ▼ to change the frequency when the inverter is running.
2. Indicating lamp ●Hz will light up, but not ●MON under the frequency setting mode.
3. When setting the frequency under the PU mode, the set value can not exceed the upper frequency. When high frequency is needed, the upper frequency should be changed first.
4. When using the MODE key for setting the frequency, the operation panel will stay in the frequency setting mode if the SET key is not pressed within one second to save in input. The user will not return to the parameter setting mode and the monitoring mode until pressing the MODE key.

## 4.1.5 Operation flow charts for parameter setting mode with DU01











Note: 1. Indicating lamp  Hz will light up, but not  MON under the parameter setting mode.


2. When entering the value of a parameter, make sure to press the  key for longer than 1 second.
3. When the parameter is set as 99999, the actual corresponded CPU value will be 65535. Therefore, if the value is set below 99999, the CPU value will gradually decrease from 65535. If so, the operation panel should display 65534, 65533... and so forth.
4. Similar to setting parameters, button  and  are used to increase or decrease the value. The panel will stop when the parameter reaches 99999(0). If there is a need to surpass this value, the user must press button  and  so the parameter value will then either increase to 0 or decrease to 99999.
5. When parameter setting is 99999, "9999" will be displayed on the operation panel of SF-PU series, while "99999" will be displayed on the operation panel of the DU series.

## 4.2 Basic Operation Procedures for Different Modes

### 4.2.1 Basic operation procedures for PU mode (P.79=0 or 1)

| Step | Description  |
|------|--|
| 1    | Change the operation mode to PU mode, and indicating lamp <b>PU</b>  will light up.<br>Note: 1. When P.79=0, the inverter will first go into the external mode after the power is switched on or the inverter is reset.<br>2. For selecting and switching the operation mode, please refer to Section 4.1.  |
| 2    | Enter the frequency setting mode and enter the target frequency into memory.<br>Note: For detailed setting procedures, please refer to Section 4.1.4.  |
| 3    | Press  or  to run the motor. At this point, indicating lamp <b>FWD</b>  or <b>REV</b>  will light up, indicating that the motor is running. The DU01 operation panel will automatically go into the monitoring mode and display the current output frequency.<br>Note: 1. For detailed operation flow for the monitoring mode, please refer to Section 4.1.3.<br>2. While the motor is running, the user can enter the frequency setting mode to change the target frequency for regulating the motor speed. |
| 4    | Press  and the motor will begin to decelerate until it comes to a full stop.<br>Indicating lamp <b>FWD</b>  or <b>REV</b>  will not turn off until the inverter stops the output voltage.   |

### 4.2.2 Basic operation procedures for external mode (P.79=0 or 2)

| Step | Description   |
|------|---|
| 1    | Change the operation mode to external mode, and indicating lamp <b>EXT</b>  will light up.<br>Note: 1. When P.79=0, the inverter will first go into the external mode after the power is switched on or the inverter is reset.<br>2. When P.79=2, external mode will be the default for the inverter.<br>3. For selecting and switching the operation mode, please refer to Section 4.1.   |
| 2    | If the target frequency is set by the input signal across terminal 4-5, please refer to <a href="#">P.39</a> in Chapter 5<br>If the target frequency is set by multi-speed stage levels, please refer to <a href="#">P.4</a> in Chapter 5.<br>If the target frequency is set by the input signal across terminal 2-5, please refer to <a href="#">P.39</a> in Chapter 5.<br>If the programmable operating mode is chosen, please refer to the multi-function terminals <a href="#">P.80~P.84</a> , <a href="#">P.86</a> , <a href="#">P.126~P.128</a> in Chapter 5. |

| Step | Description   |
|------|---|
| 3    | <p>Turn on STF or STR to run the motor.</p> <p>At this point, indicating lamp <b>FWD</b> or <b>REV</b> will light up, indicating that the motor is running.</p> <p>Note: 1. For setting up the starting terminals STF and STR, please refer to <a href="#">P.78</a> and multi-function terminal <a href="#">P.80~P.84</a>, <a href="#">P.86</a>, <a href="#">P.126~P.128</a> in Chapter 5.</p> <p>2. For detailed operation flow for the monitoring mode, please refer to Section <a href="#">4.1.4</a>.</p> <p>3. If programmed operation mode is chosen, then STF and STR will be come the starting signal and the pause signal, respectively, instead of being the Run Forward or Run Reverse terminals.</p> |
| 4    | <p>Turn off STF or STR to decelerate the motor until it comes to a full stop.</p> <p>Indicating lamp <b>FWD</b> or <b>REV</b> will not turn off until the inverter stops the output voltage.</p>  |

### 4.2.3 Basic operation procedures for JOG mode (P.79=0 or 1)

| Step | Description   |
|------|---|
| 1    | <p>Change the operation mode to the JOG mode and indicating lamp <b>PU</b> will light up. At this point, the screen will display <math>\overline{JOG}</math> before the motor starts to run.</p> <p>Note: For selecting and switching the operation mode, please refer to Section <a href="#">4.1</a>.</p>  |
| 2    | <p>Press <b>FWD</b> or <b>REV</b> to run the motor. At this point, indicating lamp <b>FWD</b> or <b>REV</b> will light up, indicating that the motor is running.</p> <p>Release <b>FWD</b> or <b>REV</b> to decelerate the motor until it comes to a full stop. Indicating lamp <b>FWD</b> or <b>REV</b> will not turn off until the inverter stops the output.</p> <p>Note: 1. For detailed operation flow for the monitoring mode, please refer to Section <a href="#">4.1.4</a>.</p> <p>2. In the JOG mode, the target frequency is the value of <a href="#">P.15</a>, and the acceleration / deceleration time is the value of <a href="#">P.16</a>. Please refer to <a href="#">PR15</a> in Chapter 5.</p> |

### 4.2.4 Basic operation procedures for communication mode (P.79=0 or 2)

In the communication mode, the user can set the parameters and run/stop or reset the inverters by communication. Please refer to [P.33](#) for details.

## 4.2.5 Basic operation procedures for combined mode 1 (P.79=4)

| Step | Description  |
|------|--|
| 1    | In Combined Mode 1, indicating lamp <b>PU</b> and <b>EXT</b> will light up.<br>Note: For selecting and switching the operation mode, please refer to Section 4.1.  |
| 2    | Enter the frequency setting mode and enter the target frequency into memory.<br>Note: For detailed frequency setting procedures, please refer to Section 4.1.4.  |
| 3    | Set the target frequency via DU01 operation panel and start the inverter by the external terminals.<br>At this point, indicating lamp <b>FWD</b> or <b>REV</b> will light up, indicating that the motor is running.<br>Note: For detailed operation flow for the monitoring mode, please refer to Section 4.1.4. |
| 4    | When the external terminals stop the output signals, the motor will decelerate until it comes to a full stop.<br>Indicating lamp <b>FWD</b> or <b>REV</b> will not turn off until the inverter stops the output.   |

## 4.2.6 Basic operation procedures for combined mode 2 (P.79=5)

| Step | Description  |
|------|--|
| 1    | In Combined Mode 2, indicating lamp <b>PU</b> and <b>EXT</b> will light up.<br>Note: For selecting and switching the operation mode, please refer to Section 4.1.  |
| 2    | The target frequency is set by the external terminals:<br>If the target frequency is set by the input signal across terminal 4-5, please refer to P.39 in Chapter 5.<br>If the target frequency is set by multi-speed stage levels, please refer to P.4 in Chapter 5.<br>If the target frequency is set by the input signal across terminal 2-5, please refer to P.39 in Chapter 5.  |
| 3    | Press <b>FWD</b> or <b>REV</b> of DU01 operation panel to run the motor. At this point, indicating lamp <b>FWD</b> or <b>REV</b> will light up, indicating that the motor is running.<br>Note: 1. For detailed operation flow for the monitoring mode, please refer to Section 4.1.4.<br>2. While the motor is running, the user can enter the frequency setting mode to change the target frequency for regulating the motor speed. |
| 4    | Press <b>STOP/RESET</b> and the motor will begin to decelerate until it comes to a full stop.<br>Indicating lamp <b>FWD</b> or <b>REV</b> will not turn off until the inverter stops the output.   |



## 4.2.7 Basic operation procedures for combined mode 3 (P.79=6)

The target frequency is determined by communication. When RL, RM, RH and REX of multi-speed stage levels are “on”, the target frequency is determined by combination of multi-speed stage levels (Please refer to P.4~P.6, P.80~P.84, P.86, P.126~P.128). When external JOG is “on”, the target frequency is determined by P.15. Acceleration / deceleration time is set by the value of P.16. The inverter starting is activated by external terminals. The functions of P.996, P.998, and P.999 can be accomplished by communication.

## 4.2.8 Basic operation procedures for combined mode 4 (P.79=7)

The target frequency of the inverter is determined by the external terminals’ “external voltage signal”, “external current signal”, or “combination of multi-speed stage levels”. The inverter starting is activated by communication (including “Reset”).






## 4.2.9 Basic operation procedures for combined mode 5 (P.79=8)

The target frequency is determined by DU01 operating panel. When RL, RM, RH and REX of multi-speed stage levels are “on”, the target frequency is determined by combination of multi-speed stage levels (Please refer to P.4~P.6, P.80~P.84, P.86, P.126~P.128). When external JOG is “on”, the target frequency is determined by P.15. Acceleration / deceleration time is set by the value of P.16. The inverter starting is activated by the external forward and reverse terminals.

## 4.3 Operation






### 4.3.1 Pre-operation checks and preparation

Before starting the operation, the following shall be examined:

1. Check if the wiring is correct. Check especially the ac motor driver output terminals (U/T1, V/T2, W/T3), which cannot be connected to the power. Confirm that grounding terminal  is well grounded.
2. Check if there is a short circuit at the terminals or charged exposure.
3. Verify all terminal connections, and check if plug connectors (optional) and screws are all fastened.
4. Verify that no mechanical device is connected to the motor.
5. All switches must be disconnected before power on. Make sure that the inverter will not start and there is no abnormal activity when power on.
6. Turn on the power only after the cover is well placed.
7. Do not operate the switch with a wet hand.
8. Make sure of the following after power on:
  - (1). On the cover of machine, power indicating lamp  will light up but not alarm indicating lamp .
  - (2). On the DU01 operation panel, indicating lamp  Hz and EXT  will both light up.

### 4.3.2 Operation methods


For various operation methods, please refer to basic operation procedures in chapter 4 and parameter description in Chapter 5. Select the most appropriate operation methods according to the application requirements and regulations. The most commonly used operation methods are shown below:
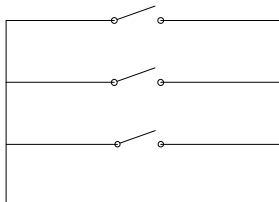
| Operation method                   | Source of the target frequency  | Source of the operating signal   |
|------------------------------------|---|--|
| DU01 operation panel operation     |  or   |  or  |
| External terminal signal operation |  <div style="display: inline-block; vertical-align: middle; margin-left: 10px;">                     RH<br/>RM<br/>RL<br/>SD                 </div> <div style="display: inline-block; vertical-align: middle; margin-left: 10px;">                     Parameter setting:<br/>P.4=40<br/>P.5=30<br/>P.6=10                 </div> | Input by external terminals: STF-SD<br>STR-SD  |
|                                    | 2-5、4-5   |  |





Note: RH, RM and RL mentioned in this section are function names of the “multi-function control terminal”. Please refer to P.80~P.84, P.86, P.126~P.128 for function selection and purposes of the multi-function control terminal. For related wiring, please refer to Section 3.5.

## 4.3.3 Trial run

Check cables and abnormalities before the trial run. After power on, the inverter is in the external mode.

1. After power on, make sure that the indicating lamp power  is on.
2. Connect a switch between STF and SD or STR and SD.
3. Connect a potentiometer between 2-5-10 or provide 0~5V dc between 2 and 5.
4. Adjust potentiometer or 0~5V dc to a minimum value (under 1V).
5. If STF is on, forward rotation is activated. If STR is on, reverse rotation is activated. Turn off STF or STR to decelerate the motor until it stops completely.
6. Check the following:
  - 1) Whether the direction of motor rotation is correct.
  - 2) Whether the rotation is smooth (check for any abnormal noise and vibration).
  - 3) Whether the acceleration / deceleration is smooth.

If there is an optional keyboard panel, do the following:

1. Make sure that the keyboard panel is connected to the inverter properly.
2. Change the operation mode to PU mode after power on, and the screen will display 50/60Hz.
3. Press  button to set the target frequency at about 5Hz.
4. Press  for forward rotation and  for reverse rotation. Press  to decelerate the motor until it stops completely.
5. Check the following:
  - 1). Whether the direction of motor rotation is correct.
  - 2). Whether the rotation is smooth (check for any abnormal noise and vibration).
  - 3). Whether the acceleration / deceleration is smooth.

If no abnormal condition is found, continue the trial run by increasing the frequency and go through the above procedure. Put the machine into operation if no abnormal condition is found.

Note: Stop working immediately if abnormalities are found when running the inverter or the motor. Check for possible causes according to "fault diagnosis". After inverter output is stopped and the power terminals (R/L1, S/L2, and T/L3) of the main circuit are disconnected, electric shock may occur if one touches the inverter's output terminals (U/T1, V/T2, and W/T3). Even if the major loop power is cut off, there is still recharging voltage in the filter capacitors. As a result, discharge takes time. Once the major loop power is disconnected, wait for the power indicating lamp to go off before testing the intermediate dc loop with a dc voltage meter. Once the voltage is confirmed to be below the safe value, it is safe to touch the circuit inside the inverter.

## 5. Parameter Description

### **(1) Sensorless vector control and closed loop control**

|   |     |
|---|-----|
| 5.75 Motor Control Mode (P.300 and P.301) .....           | 153 |
| 5.76 Motor Parameter (P.302~P.312) .....                  | 155 |
| 5.77 Gain Adjustment at Speed Control (P.320~P.325) ..... | 156 |
| 5.79 Feedback Control Parameters (P.350~P.354) .....      | 151 |

### **(2) Adjusting the output torque of motor**

|   |     |
|---|-----|
| 5.1 Torque Boost (P.0, P.46) .....                  | 51  |
| 5.11 Stall Prevention (P.22, P.23 and P.66) .....   | 61  |
| 5.40 Slip Compensation Coefficient (P.89) .....     | 118 |
| 5.47 Zero-Speed Function (P.151~P.152) .....        | 124 |
| 5.48 OverTorque Detection (P.155~P.156,P.260) ..... | 124 |
| 5.65 Modulation Coefficient (P.246) .....           | 144 |

### **(3) Output frequency limit**

|   |     |
|---|-----|
| 5.2 The Range of the Output Frequency (P.1, P.2 and P.18) ..... | 52  |
| 5.39 Frequency Jump (P.91~P.96) .....                           | 114 |

### **(4) V/F curve setting**

|  |    |
|--|----|
| 5.3 Base Frequency and Base Frequency Voltage (P.3, P.19 and P.47) ..... | 52 |
| 5.9 Load Pattern Selection (P.14, P.98~P.99, P.162~P.169) .....          | 58 |

### **(5) Setting frequency by external terminal**

|  |     |
|--|-----|
| 5.4 Multi-speed (P.4~P.6, P.24~P.27 and P.142~P.149) ..... | 53  |
| 5.10 JOG Mode (P.15 and P.16) .....                        | 61  |
| 5.27 Remote Setting Function (P.61) .....                  | 100 |

### **(6) The setting of acceleration and deceleration time or mode**

|   |     |
|---|-----|
| 5.5 Acceleration / Deceleration Time (P.7, P.8, P.20, P.21,P.44 and P.45) .....           | 55  |
| 5.8 Starting Frequency (P.13) .....   | 58  |
| 5.13 Acceleration / Deceleration Pattern Selection (P.29) .....                           | 63  |
| 5.44 Programmed Operation Mode (P.100~P.108, P.111~P.118, P.121~P.123, P.131~P.138) ..... | 120 |

### **(7) The selection and protection of motor**

|   |    |
|---|----|
| 5.6 Electronic Thermal Relay Capacity (P.9) ..... | 56 |
|---|----|

### **(8) Braking and stopping of the motor**

|  |     |
|--|-----|
| 5.7 DC Injection Brake (P.10, P.11 and P.12) .....         | 57  |
| 5.14 Regenerative Brake (P.30 and P.70) .....              | 65  |
| 5.30 Brake Selection (P.71) .....                          | 105 |
| 5.63 DC Brake Function before Starting (P.242~P.244) ..... | 143 |

## **(9) Distribution and control of the external terminal's function**

|  |     |
|--|-----|
| 5.21 Multi-function Output (P.40, P.85, P.129, P.130, P.120)                   | 92  |
| 5.22 Up-to-frequency Sensitivity (P.41)  | 95  |
| 5.23 Output Frequency Detection (P.42 and P.43)                                | 95  |
| 5.24 FM/AM Terminal (P.54~P.56, P.64, P.187, P.190 and P.191)                  | 96  |
| 5.28 Zero Current Detection (P.62 and P.63)                                    | 103 |
| 5.32 FR/10X Frequency Output Terminal Selection (P.74)                         | 107 |
| 5.37 Multi-function Terminal Function Selection (P.80~P.84, P.86, P.126~P.128) | 110 |
| 5.49 External Terminals Filter Adjusting Function (P.157)                      | 125 |

## **(10) The monitor display and output signal**

|   |     |
|---|-----|
| 5.12 Output Frequency Filter Constant (P.28)      | 63  |
| 5.18 Speed Display (P.37)                         | 87  |
| 5.45 Operation Panel Monitoring Selection (P.110) | 123 |
| 5.52 Multi-Function Display (P.161)               | 127 |

## **(11) The motion selection when the power cuts out in the moment**

|   |    |
|---|----|
| 5.25 Restart Function (P.57, P.58, P.150 and P.160) | 99 |
|---|----|

## **(12) The motion setting when something unusual happened**

|   |     |
|---|-----|
| 5.29 Retry Function (P.65, P.67, P.68, P.69)              | 103 |
| 5.53 4-5 Terminal Disconnection Handling Function (P.184) | 133 |
| 5.70 Vibration Inhibition Factor (P.285 and P.286)        | 150 |
| 5.71 Short Circuit Protection Function (P.287)            | 150 |

## **(13) Running with energy saving**

|   |     |
|---|-----|
| 5.51 Energy-Saving Control Function (P.159) | 126 |
|---|-----|

## **(14) The noise reducing of motor and electromagnetism**

|   |     |
|---|-----|
| 5.15 Carrier Operation Selection (P.31) | 65  |
| 5.31 Carrier Frequency (P.72)           | 105 |

## **(15) The setting of analog input frequency and torque (terminal 2 and 4)**

|   |     |
|---|-----|
| 5.19 Voltage Signal Selection and Target Frequency (P.38, P.73, P.139, P.140 and P.141) | 88  |
| 5.20 The Input Signal across Terminal 4-5 and the Target Frequency (P.39)               | 92  |
| 5.26 Input Signal Filter Constant (P.60)  | 100 |
| 5.57 2-5 Terminal Input Signal (P.192~P.195)  | 135 |
| 5.58 4-5 Terminal Input Signal (P.196~P.199)  | 137 |
| 5.62 Auxiliary Frequency Function (P.240)   | 142 |

## **(16) Misoperation prevention and frequency setting limit**

|   |     |
|---|-----|
| 5.33 Stop or Reset Function Selection (P.75) .....              | 108 |
| 5.34 Parameters Write Protection (P.77) .....                   | 108 |
| 5.35 Forward/Reverse Rotation Prevention Selection (P.78) ..... | 109 |
| 5.56 Factory Setting Function (P.189) .....                     | 134 |
| 5.74 Password Protection Function (P.294 and P.295) .....       | 152 |

## **(17) The selection of the running mode and the operation site**

|   |     |
|---|-----|
| 5.36 Operation Mode Selection (P.79) .....                      | 109 |
| 5.50 External Terminal Power Enable Function (P.158) .....      | 126 |
| 5.53 4-5 Terminal Disconnection Handling Function (P.184) ..... | 133 |

## **(18) The communicational running and setting**

|  |    |
|--|----|
| 5.16 Communication Function (P.32, P.33, P.36, P.48~P.53, P.153 and P.154) ..... | 66 |
|--|----|

## **(19) Specific running and frequency control**

|   |     |
|---|-----|
| 5.52 PID Control (P.170~P.183, P.223~P.225) .....   | 128 |
| 5.59 Multi-machine Constant Pressure System Function (P.200, P.209, P.210, P.213~P.217) ..... | 138 |
| 5.60 Backlash Compensation Function (P.229~P.233) .....                                       | 140 |
| 5.61 Triangular Wave Function (P.234~P.239) .....   | 141 |
| 5.66 Commercial Power Supply Frequency Operation Function (P.247~P.250) .....                 | 145 |
| 5.67 Injection Molding Machine Specific Functions (P.251~P.254) .....                         | 148 |

## **(20) Convenient function**

|   |     |
|---|-----|
| 5.55 Firmware version (P.188) .....   | 134 |
| 5.64 Options for Stopping the Cooling Fan (P.245) .....   | 144 |
| 5.72 Alarm History Parameters (P.288~P.291) .....   | 151 |
| 5.73 Accumulative Motor Operation Time Function (P.292 and P.293) .....                               | 152 |
| 5.80 Parameter Copy Function (P.994 and P.995) (a PU series operation panel needs to be purchased) .. | 159 |

## **(21) Clearing away the abnormal alarm record**

|  |     |
|--|-----|
| 5.81 Alarm History Clear (P.996) ..... | 160 |
|--|-----|

## **(22) Resetting the inverter**

|                                   |     |
|-----------------------------------|-----|
| 5.82 Inverter Reset (P.997) ..... | 160 |
|-----------------------------------|-----|

## **(23) Restoring the parameter to a default value**

|  |     |
|--|-----|
| 5.83 Restoration of the Parameters to the Default Values (P.998 and P.999) ..... | 160 |
|--|-----|

## 5.1 Torque Boost (P.0, P.46)

P.0 “Torque boost”


P.46 “The second torque boost”

Related parameters

P.3 “Base frequency”  
 P.19 “Base frequency voltage”  
 P.47 “The second base frequency”  
 P.80~P.84, P.86, P.126~P.128  
 “Multi-function terminals selection”

- For an inverter controlled by V/F mode, when the motor starts up, the starting torque is usually inadequate since the output voltage of the inverter is inadequate. In this case, the output voltage can be elevated by properly setting the torque boost (P.0), and thus a better starting torque can be acquired.

| Parameter | Factory setting     | Setting range | Remarks                 |
|-----------|---------------------|---------------|-------------------------|
| 0         | 3% (7.5kW or below) | 0~30%         | ---                     |
|           | 2% (11kW~55kW)      |               |                         |
|           | 1% (75kW or above)  |               |                         |
| 46        | 99999               | 0~30%, 99999  | 99999: Function invalid |

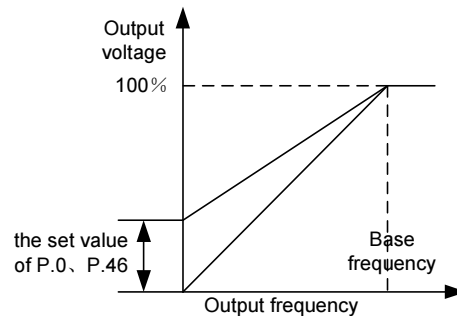

### <Setting>

- If P.0=6% and P.19=220V, and when output frequency of the inverter is 0.2Hz, the output voltage is:

$$P.19 \times \left( \frac{100\% - P.0}{P.3} \times f + P.0 \right) = 220V \times \left( \frac{100\% - 6\%}{50Hz} \times 0.2Hz + 6\% \right) = 14.03V$$

- If RT is “on,” “The Second Torque Boost” on P.46 is valid (Note 2).

Note: 1. If the set value of P.0 is too high, it will activate current inverter protection or the activation will be impeded.  
 2. The second function is valid on when P.44≠99999.  
 3. RT mentioned in this section is the function name of the “multi-function control terminal”. Please refer to P.80~P.84, P.86, P.126~P.128 for function selection and purposes of the multi-function control terminal. For related wiring, please refer to Section 3.5.

## 5.2 The Range of the Output Frequency (P.1, P.2 and P.18)

P.1 “Maximum frequency”


P.2 “Minimum frequency”

P.18 “High-speed maximum frequency”

Related parameters  
P.13 “Starting frequency”

- The upper and lower limits of the output frequency can be restricted.

| Parameter | Factory setting      | Setting range | Remarks |
|-----------|----------------------|---------------|---------|
| 1         | 120Hz(55kW or below) | 0~120Hz       | ---     |
|           | 60Hz(75kW or above)  |               |         |
| 2         | 0Hz                  | 0~120Hz       | ---     |
| 18        | 120Hz                | 120~400Hz     | ---     |

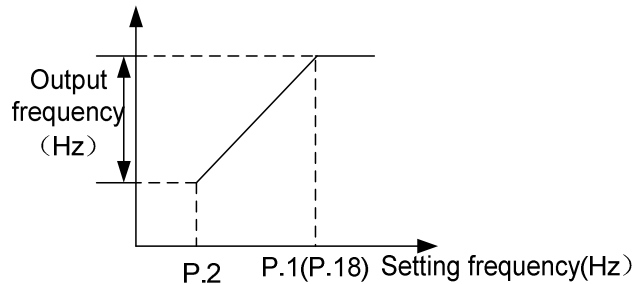

### <Setting>

- If the target frequency  $\leq P.2$ , the steady output frequency equals to P.2.
- If  $P.2 < \text{target frequency} \leq P.1$  (P.18), the steady output frequency equals target frequency.
- If  $P.1$  (P.18)  $< \text{target frequency}$ , the steady output frequency equals P.1.

Note: 1. The “maximum frequency” and the “high-speed maximum frequency” are interrelated. If the target upper limit frequency is set below 120Hz, use P.1 as the maximum frequency (the setting range of P.1 is 0~120 Hz). If the target frequency limited to between 120~400 Hz, use P.18 as the maximum frequency (the setting range of P.18 is 120~400 Hz).

2. If  $P.1 < P.2$ , the steady output frequency will be clamped to P.1.

3. The set frequency value cannot exceed the value of P.1.

## 5.3 Base Frequency and Base Frequency Voltage (P.3, P.19 and P.47)

P.3 “Base frequency”

P.19 “Base frequency voltage”


P.47 “The second base frequency”

Related parameters  
P.14 “Load pattern selection”  
P.80~P.84, P.86, P.126~P.128  
“Multi-function terminals selection”  
P.189 “Factory setting function”



- The maximal output voltage of the inverter is called “base frequency voltage”.
- If the output frequency is lower than the base frequency, the output voltage of the inverter will increase with output frequency. If the output frequency has reached the base frequency (P.3/P.47), the output voltage will just be equal to the base frequency voltage. If the output frequency exceeds the base frequency and increase continuously, the output voltage will be clamped to the base frequency voltage.

| Parameter | Factory setting | Setting range  | Remarks   |
|-----------|-----------------|----------------|---|
| 3         | 50Hz            | 0~400Hz        | P.189=1   |
|           | 60Hz            |                | P.189=0   |
| 19        | 99999           | 0~1000V, 99999 | 99999: Change according to the power source voltage |
| 47        | 99999           | 0~400Hz, 99999 | 99999: Function invalid                             |

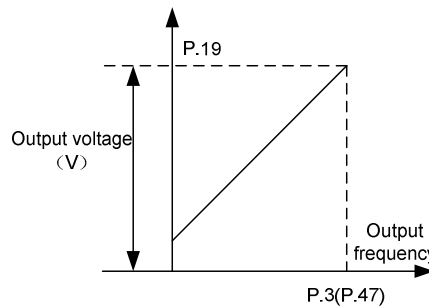

## <Setting>

- Use P.3 and P.47 to set up the base frequency.
- If RT is on, P.47 “The Second Base Frequency” is valid.(Note 1)
- Set up the base frequency voltage using P.19.(Note 2)

Note: 1. The second function is valid on when P.44≠99999.  
 2. If P.19=99999, the maximum output voltage of the inverter will depend on the value of the power supply voltage.  
 3. RT mentioned in this section is the function name of the “multi-function control terminal”. Please refer to P.80~P.84, P.86, P.126~P.128 for function selection and purposes of the multi-function control terminal. For related wiring, please refer to Section 3.5.

## 5.4 Multi-speed (P.4~P.6, P.24~P.27 and P.142~P.149)

P.4 “Speed 1 (high speed)”

P.5 “Speed 2 (medium speed)”

P.6 “Speed 3 (low speed)”

P.24~P.27 “speed 4 to 7”

P.142~P.149 “speed 8 to 15”

### Related parameters


- P.1 “Maximum frequency”
- P.2 “Minimum frequency”
- P.29 “Acceleration/deceleration curve selection”
- P.79 “Operation mode selection”
- P.80~P.84, P.86, P.126~P.128 “Multi-function terminals selection”

# Parameter Description

| Parameter | Factory setting | Setting range  | Remarks             |
|-----------|-----------------|----------------|---------------------|
| 4         | 60Hz            | 0~400Hz        | ---                 |
| 5         | 30Hz            | 0~400Hz        | ---                 |
| 6         | 10Hz            | 0~400Hz        | ---                 |
| 24~27     | 99999           | 0~400Hz, 99999 | 99999: not selected |
| 142       | 0Hz             | 0~400Hz,99999  | 99999: not selected |
| 143~149   | 99999           | 0~400Hz, 99999 | 99999: not selected |

## <Setting>

- If all the set values of P.24~P.27 and P.142~P.149 are not 99999, “16-speed operation” is active. It means that with the combination of RL, RM, RH and REX, there are 16 speeds in total. For setting up the target frequency of the inverter, please refer to the figure below:

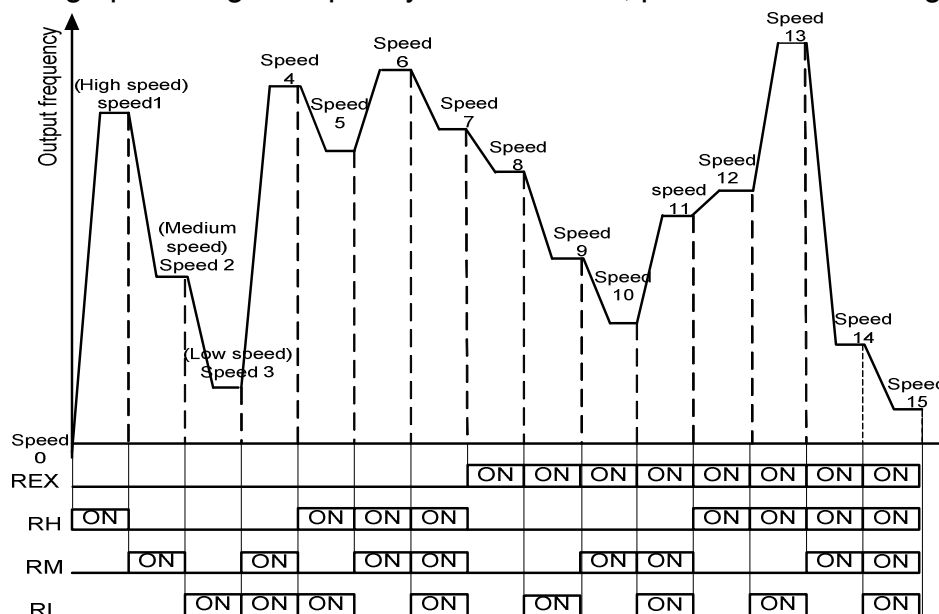

- Provided that the parameter set values of P.24~P.27 and P.142~P.149 are all 99999, the target frequency will be determined by RL, RM and RH these three speeds. See the table below (the priority of the terminals is RL>RM>RH):

| Parameters<br>Target<br>frequency | P.24=<br>99999 | P.25=<br>99999 | P.26=<br>99999 | P.27=<br>99999 | P.142=<br>99999 | P.143=<br>99999 | P.144=<br>99999 | P.145=<br>99999 | P.146=<br>99999 | P.147=<br>99999 | P.148=<br>99999 | P.149=<br>99999 |
|-----------------------------------|----------------|----------------|----------------|----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|
| RL (P.6)                          | ○              | ○              |                | ○              | ○               | ○               |                 | ○               |                 | ○               |                 | ○               |
| RM (P.5)                          |                |                | ○              |                |                 |                 | ○               |                 |                 |                 | ○               |                 |
| RH (P.4)                          |                |                |                |                |                 |                 |                 |                 | ○               |                 |                 |                 |

For example, When P.26=99999, the target frequency is determined by RM (the set value of P.5).

Note: 1. The multi-speed is only valid in the “external mode”, “combination mode 2” or “combined mode 4”.  
 2. RL, RM, RH, and REX mentioned in this section are the function names of the “multi-function control terminal”. (For example, when P.80=2, select the RL terminal to perform the RL (function). Please refer to P.80~P.84, P.86, P.126~P.128 for function selection and purposes of the multi-function control terminal. For related wiring, please refer to Section 3.5.

## 5.5 Acceleration / Deceleration Time (P.7, P.8, P.20, P.21, P.44 and P.45)

P.7 “Acceleration time”

P.8 “Deceleration time”

P.20 “Acceleration / deceleration

reference frequency”

P.21 “Acceleration / deceleration time  
increments”

P.44 “The second acceleration time”

P.45 “The second deceleration time”

—Related parameters—

P. 3 “Base frequency”

P. 29 “Acceleration / deceleration  
curve selection”

P. 47 “The second base frequency”

P. 80~P.84, P.86, P.126~P.128

“Multi-function terminal selection”

P. 189 “Factory setting function”

- When the output frequency of the inverter is accelerated from 0Hz to P.20 (P.3), the required time is defined as “acceleration time”.
- When the output frequency of the inverter is decelerated from 0Hz to P.20 (P.3), the required time is defined as “deceleration time”.

| Parameter | Factory setting      | Setting range | Remarks  |
|-----------|----------------------|---------------|--|
| 7         | 20s                  | 0~360s        | P.21=0   |
|           |                      | 0~3600s       | P.21=1   |
| 8         | 10s (7.5kW or below) | 0~360s        | P.21=0   |
|           | 30s (11kW or above)  | 0~3600s       | P.21=1   |
| 20        | 50Hz                 | 1~400Hz       | <u>P.189=1</u>   |
|           | 60Hz                 |               | P.189=0  |
| 21        | 0                    | 0, 1          | 0 The acceleration / deceleration time increment is 0.01s. |
|           |                      |               | 1 The acceleration / deceleration time increment is 0.1s.  |
| 44,45     | 99999                | 0~360s        | P.21=0   |
|           |                      | 0~3600s       | P.21=1   |
|           |                      | 99999         | Not selected   |

## <Setting>

- If P.21=0, minimum acceleration / deceleration time (P.7, P.8, P.16, P.44, P.45, P.111~P.118) increments is 0.01s.
- If P.21=1, minimum acceleration / deceleration time (P.7, P.8, P.16, P.44, P.45, P.111~P.118) increments is 0.1s.
- When RT is “on”, the second function is valid. For the operation characteristics of the motor, please refer to the second function.
- In this case, even though RT is “on”, the acceleration time is still the set value of P.7, the deceleration time is still the set value of PR8, the torque boost is still the set value of P.0, and the base frequency is still the set value of P.3.
- If P.44≠99999 and P.45=99999, when RT is “on”, the acceleration /deceleration time is the “set value of P.44”.
- If P.44≠99999, P.46=99999, when RT is “on”, the torque boost is the “set value of P.0”.  
If P.44≠99999 and P.46≠99999, when RT is “on”, the torque boost is the “set value of P.46”.
- If P.44≠99999, P.47=99999, when RT is “on”, the base frequency is the “set value of P.3”.  
If P.44≠99999 and P.47≠99999, when RT is “on”, the base frequency is the “set value of P.47”.

Note: RT mentioned in this section is the function name of the “multi-function control terminal”. Please refer to P.80~P.84, P.86, P.126~P.128 for function selection and purposes of the multi-function control terminal. For related wiring, please refer to Section 3.5.

## 5.6 Electronic Thermal Relay Capacity (P.9)

### P.9 “Electronic thermal relay capacity”

Related parameters  
P.80~P.84, P.86,P.126~P.128  
“Multi-function terminals selection”

- The “electronic thermal relay” uses the program of the inverter to simulate a thermal relay for preventing the motor from overheating.

| Parameter | Factory setting                                  | Setting range                                   | Remarks |
|-----------|--|---|---------|
| 9         | Rated current<br>(Refer to note 1 in appendix 1) | 0~500A/5000A<br>(Refer to note 5 in appendix 1) | ---     |

## <Setting>

- Please set P.9 as the rated current of the motor at its rated frequency. The rated frequency of a squirrel-cage inductive motor made in different countries and areas is different. Please refer to the nameplate instruction on the motor.
- If P.9=0, the electronic thermal relay is disabled.
- In case the calculated heat by the electronic thermal relay exceeds the upper limit, an alarm will go off and the DU01 screen will display  $f_{HN}$ , and the output will be stopped.

- Note: 1. After the inverter is reset; the thermal accumulating record of the electronic thermal relay will be reset to zero. Please pay attention in this area.
2. When two or more motors are connected to the inverter, they cannot be protected by the electronic thermal relay. Install an external thermal relay for each motor.
3. When a special motor is employed, the electronic thermal relay is no longer valid. Install an external thermal relay for each motor.
4. About wiring for an external thermal relay, please refer to P.80~P.84, P.86, P.126~P.128.

## 5.7 DC Injection Brake (P.10, P.11 and P.12)

### P.10 “DC injection brake operation frequency”

### P.11 “DC injection brake operation time”


### P.12 “DC injection brake operation voltage”

| Parameter | Factory setting     | Setting range | Remarks |
|-----------|---------------------|---------------|---------|
| 10        | 3Hz                 | 0~120Hz       | ---     |
| 11        | 0.5s                | 0~60s         | ---     |
| 12        | 4% (7.5kW or below) | 0~30%         | ---     |
|           | 2% (11kW~55kW)      |               |         |
|           | 1% (75kW or above)  |               |         |

#### <Setting>

- After a stop signal is put in (please refer to Chapter 4 for the primary operation of motor activation and stop), the output frequency of the inverter will decrease gradually. In case the output frequency reaches the “DC injection brake operation frequency (P.10),” the DC injection brake will be activated.
- During DC injection brake, a DC voltage will be injected into the motor windings by the inverter, which is used to lock the motor rotor. This voltage is called “DC injection brake operation voltage (P.12)”. The larger the P.12 is, the higher the DC brake voltage is, and the stronger the brake capability is.
- The DC brake operation will last a period (the set value of P.11) to overcome the motor inertia.

See the figure below:

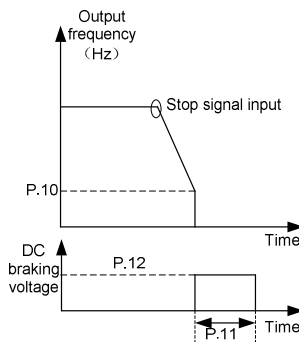

Note: To achieve the optimum control characteristics, P.11 and P.12 should be set properly.

## 5.8 Starting Frequency (P.13)

### P.13 "Starting frequency"


Related parameters  
P.2 "Minimum frequency"

- When the motor starts up, the instantaneous output frequency of the inverter is called "starting frequency".

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 13        | 0.5Hz           | 0~60Hz        | ---     |

#### <Setting>

- If the target frequency of the inverter is lower than the setting value of P.13, the motor will not run. When the signal of the motor starts, the output frequency will go up from the value of P.13.

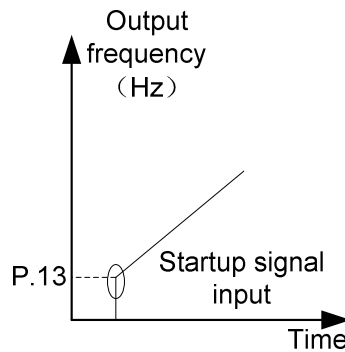

## 5.9 Load Pattern Selection (P.14, P.98~P.99, P.162~P.169)

P.14 "Load pattern selection"

P.98 "Middle frequency 1"

P.99 "Output voltage 1 of middle frequency"

P.162 "Middle frequency 2"

P.163 "Output voltage 2 of middle frequency"

P.164 "Middle frequency 3"

P.165 "Output voltage 3 of middle frequency"

P.166 "Middle frequency 4"

P.167 "Output voltage 4 of middle frequency"

P.168 "Middle frequency 5"


P.169 "Output voltage 5 of middle frequency"






Related parameters  
P. 0 "Torque boost"  
P. 46 "The second torque boost"  
P. 80~P. 84, P. 86  
"Multi-function terminals selection"

| Parameter | Factory setting | Setting range  | Remarks                              |
|-----------|-----------------|----------------|--------------------------------------|
| 14        | 0               | 0~13           | 4~13 are different VF curve options. |
| 98        | 3Hz             | 0~400Hz        | ---                                  |
| 99        | 10%             | 0~100%         | ---                                  |
| 162       | 99999           | 0~400Hz, 99999 | ---                                  |
| 163       | 0%              | 0~100%         | ---                                  |
| 164       | 99999           | 0~400Hz, 99999 | ---                                  |
| 165       | 0%              | 0~100%         | ---                                  |
| 166       | 99999           | 0~400Hz, 99999 | ---                                  |
| 167       | 0%              | 0~100%         | ---                                  |
| 168       | 99999           | 0~400Hz, 99999 | ---                                  |
| 169       | 0%              | 0~100%         | ---                                  |

## <Setting>

- If P.14=4, suppose that P.19=220V, P.98=5Hz and P.99=10%, when the inverter is running at 5Hz, the output voltage equals  $P.19 \times P.99 = 220V \times 10\% = 22V$ .
- If RT is “on”, P.46 “The Second Torque Boost” is valid.

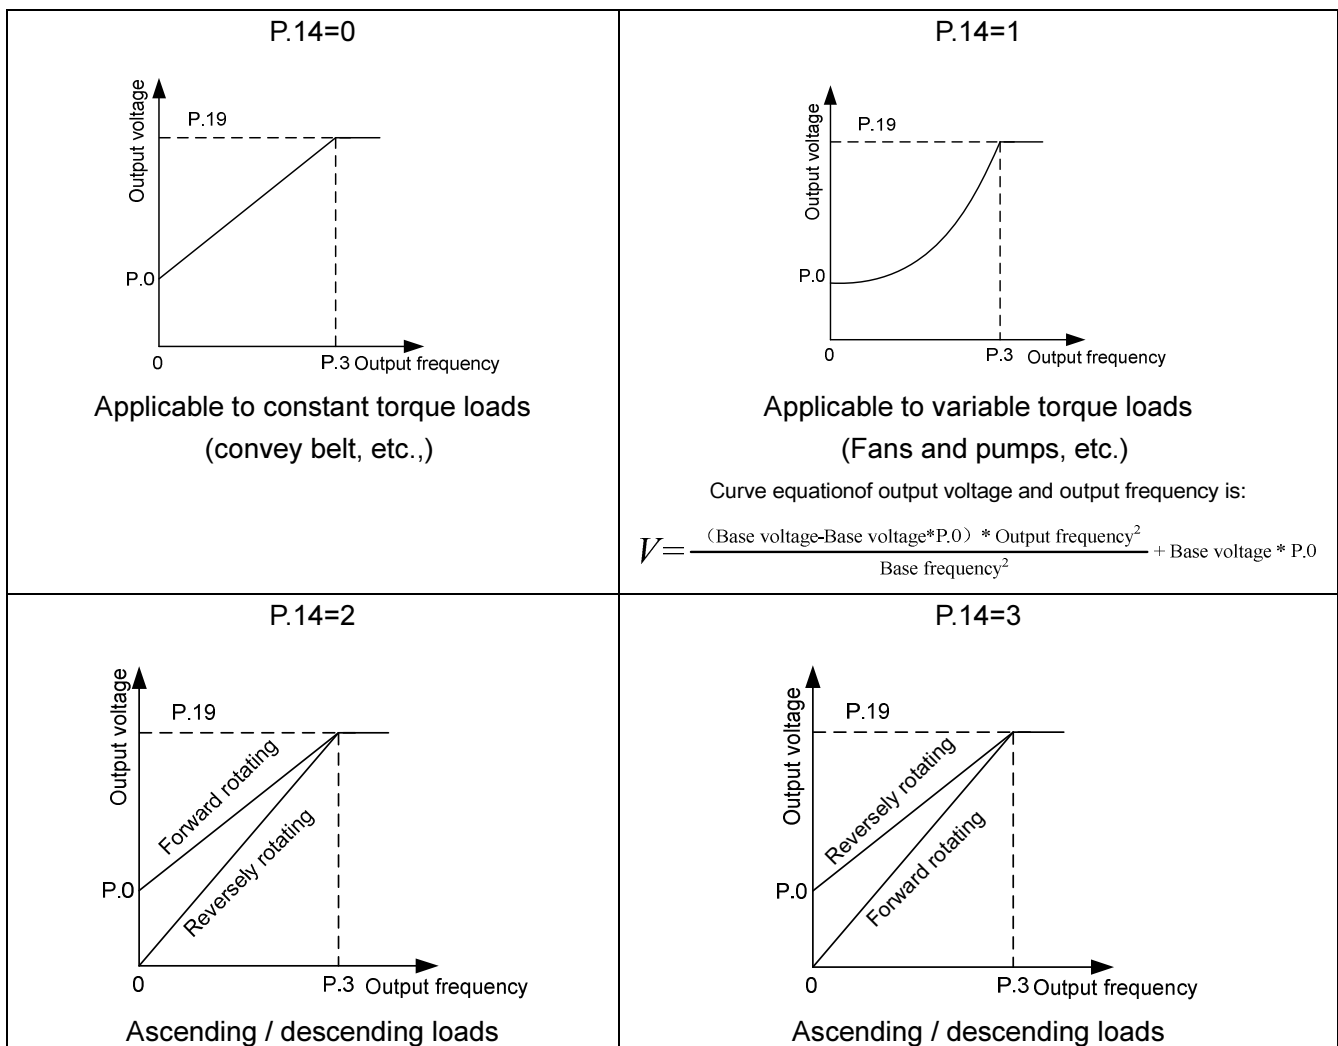

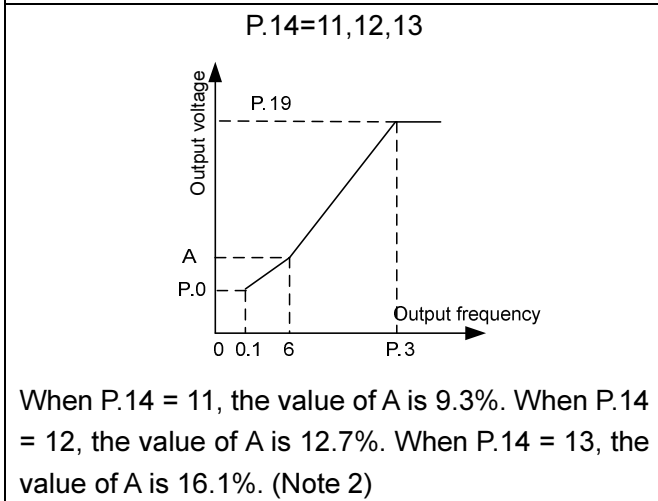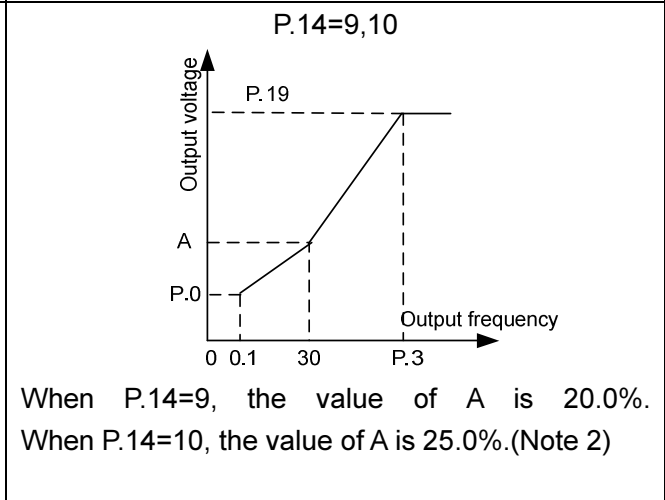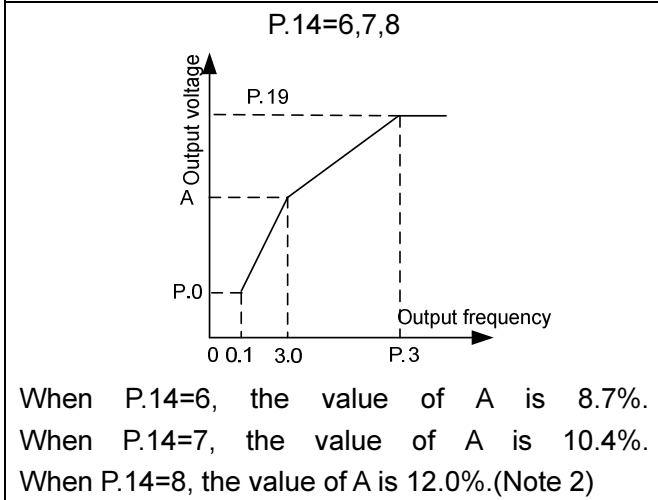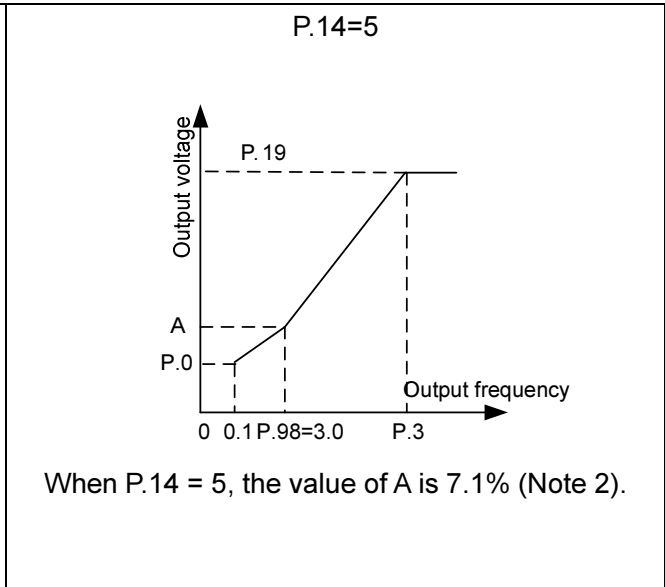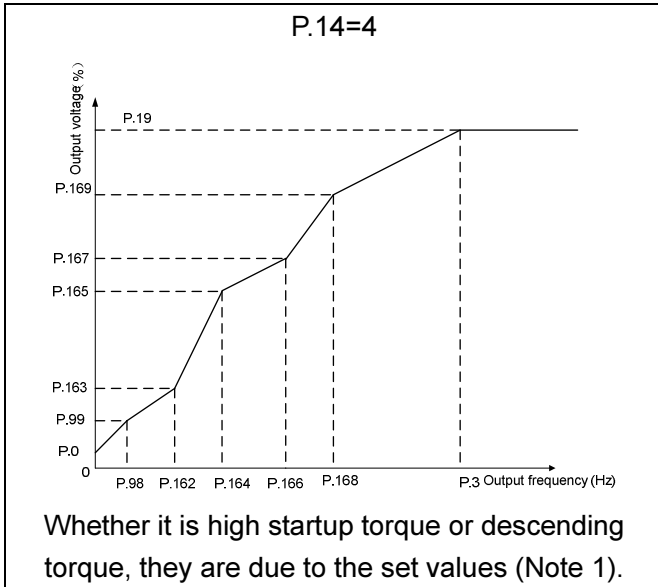

Note: 1. Referring to the diagrams above, set P.98 and P.99 if one point is needed. Set P.98, P.99, P.162 and P.163 if two points are needed. Set P.98, P.99, P.162, P.163, P.164 and P.165 if three points are needed.

2. If you set P.14 between 4 and 13, the curve will be invalid when P.0 is larger than the point A, where point A equals to P.0.



## 5.10 JOG Mode (P.15 and P.16)


P.15 “JOG frequency”

P.16 “JOG acceleration / deceleration time”

Related parameters  
 P.20 “Acceleration/deceleration reference frequency”  
 P.21 “Acceleration/deceleration time increments”

- In JOG mode, the output frequency is the set value of P.15, and the acceleration / deceleration time is the set value of P.15.

| Parameter | Factory setting | Setting range | Remarks       |
|-----------|-----------------|---------------|---------------|
| 15        | 5Hz             | 0~400Hz       | ---           |
| 16        | 0.5s            | 0~360s        | <u>P.21=0</u> |
|           |                 | 0~3600s       | P.21=1        |

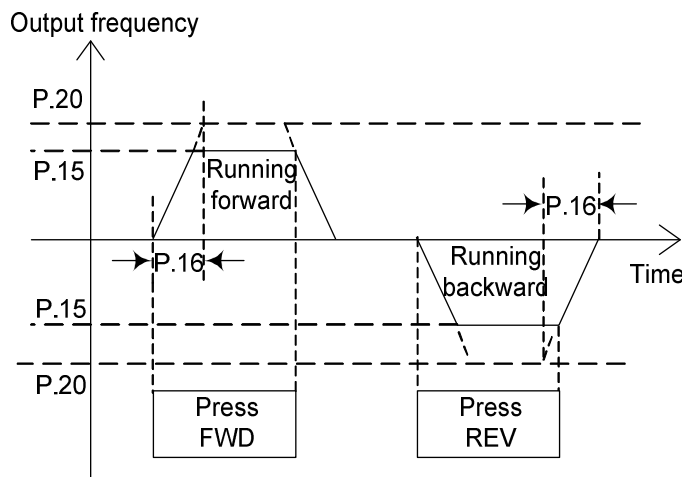

Note: Please refer to Section 4.1.1 for how to enter the JOG mode.

## 5.11 Stall Prevention (P.22, P.23 and P.66)

P.22 “Stall prevention operation level”

reduction starting frequency”

P.23 “Compensation factor at level reduction”

P.66 “Stall prevention operation

Related parameters  
 P.189 “Factory setting function”


# Parameter Description

- When the motor starts or target frequency is adjusted (increasing) under a heavy load, the motor speed is often unable to follow the output frequency closely. If the motor speed is lower than the output frequency, the output current will increase to improve the output torque. However, if the difference between the output frequency and the motor speed is too great, the motor torque will decrease, a phenomenon known as “stall”.

| Parameter | Factory setting                 | Setting range    | Remarks   |
|-----------|---------------------------------|------------------|---|
| 22        | 120%<br>( Note 3 of Appendix 1) | 0~400%           | P.186=0   |
|           | 150%<br>( Note 3 of Appendix 1) |                  | P.186=1   |
| 23        | 99999                           | 0~150%,<br>99999 | When P.23=99999, stall prevention operation level is the set value of P.22. |
| 66        | 50Hz                            | 0~400Hz          | P.189=1   |
|           | 60Hz                            |                  | P.189=0   |

## <Setting>

- During the time when a motor starts or the output frequency increases, the output current of the inverter will increase. Once the output current exceeds the curve in the diagram below, output frequency adjustment will be paused automatically until the motor attains the output frequency (at this moment, the output current of the inverter will decrease accordingly).

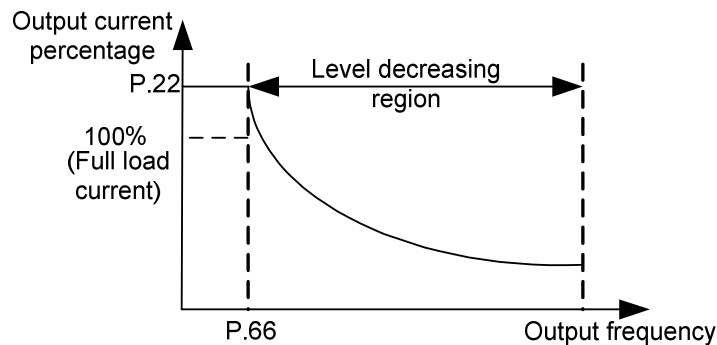

$$\text{Level percentage} = A + B \times \frac{P.22 - A}{P.22 - B} \times \frac{P.23 - 100}{100}$$

$$A = \frac{P.66 \times P.22A}{\text{Output frequency}} \quad B = \frac{P.66 \times P.22A}{400}$$

Note: When P.300=3 for sensorless vector control is selected from P.300 control method, P.22 will be used for the torque limited horizontal operation.

## 5.12 Output Frequency Filter Constant (P.28)

### P.28 “Output frequency filter constant”

- When the acceleration or deceleration time decreases and the output frequency switches from high-frequency to log-frequency, it may produce machine vibration which will affect product quality.
- When output frequency filtering constant P.28 is set, the inverter can filter out the output frequency to reduce machine vibration upon high-frequency and low-frequency is switched. The bigger the P.28 is, the better the filtering effect is. But the corresponding response delay will also increase. If P.28 is set to 0, the filtering function is invalid.

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 28        | 0               | 0~31          | ---     |

## 5.13 Acceleration / Deceleration Pattern Selection (P.29)

### P.29 “Acceleration / deceleration curve selection”

Related parameters

- P. 3 “ Base frequency ”
- P. 7 “ Acceleration time ”
- P. 8 “ Deceleration time ”
- P. 20 “ Acceleration / deceleration reference frequency ”
- P. 44 “ The second acceleration time ”
- P. 45 “ The second deceleration time ”


| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 29        | 0               | 0~2           | ---     |

<Setting>

• **When P.29=0, “linear acceleration /deceleration curve”**

An acceleration slope is constructed by the combination of P.7 and P.20. A deceleration slope is constructed by the combination of P.7 and P.20.

When the target frequency varies, it increases with the “acceleration slope” or decreases with the “deceleration slope” linearly. See the figure below:

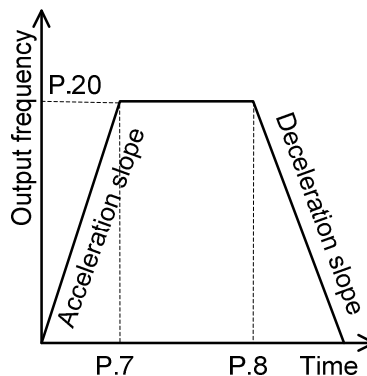

• **When P.29=1, “S pattern acceleration /deceleration curve 1”**

An acceleration slope is constructed by the combination of P.7 and P.20. A deceleration slope is constructed by the combination of P.7 and P.3.


The acceleration / deceleration curve has an S-shape change according to the “acceleration / deceleration slope”. The S-shape equation between 0 and P.3 is:

$$f = [1 - \cos(\frac{90^\circ \times t}{P.7})] \times P.3$$

The S-shape equation of P.3 or above is:

$$t = \frac{4}{9} \times \frac{P.7}{(P.3)^2} \times f^2 + \frac{5}{9} \times P.7$$

t: time; f: output frequency

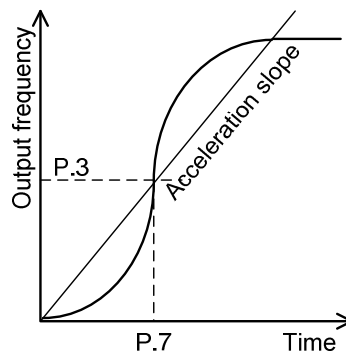


Note: This pattern is applicable to main shafts of the working machines.

• **When P.29=2, “S pattern acceleration /deceleration curve 2”**

An acceleration slope is formed by the combination of P.7 and P.20. A deceleration slope is formed by the combination of P.8 and P.20.

When the target frequency varies, the acceleration curve has an S-shape ascending according to the “acceleration slope”. The deceleration curve on the other hand has an S-shape deceleration according to the “deceleration slope”. As shown in the figure below, when the setting value of the inverter is adjusted from f0 to f2, an S-shape acceleration is undertaken once, and the time is P.7 x (f2-f0)/P.20. Then if the frequency is set from f2 to f3, a second S-shape acceleration is experienced, and the time is P.7 x (f3-f2) / P.20.

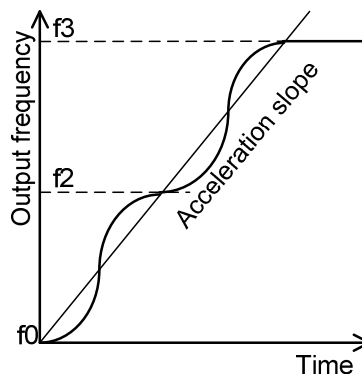

Note: this pattern can effectively reduce motor vibration during the acceleration / deceleration, and thus prevent the belts and gears from broken.

## 5.14 Regenerative Brake (P.30 and P.70)

### P. 30 “Regenerative brake function selection”

### P. 70 “Special regenerative brake duty”

- At the moment of the inverter output frequency switching from high to low, the rotation speed of the motor will be higher than the output frequency of the inverter due to load inertia, resulting in generator effect. This effect will cause a high voltage between the main-circuit terminals P and N, which will damage the inverter. Therefore, a proper brake resistor shall be mounted between terminals P and PR to dissipate the feedback energy.
- There is a built-in transistor inside the inverter. The conducting time ratio of the transistor is called “regenerative brake duty”. The higher the regenerative brake duty is, the more energy the brake resistor consumes, and the stronger the brake capability is.

| Parameter | Factory setting               | Setting range | Remarks |  |
|-----------|-------------------------------|---------------|---------|--|
| 30        | 0<br>(22 kw and below models) | 0~2           | 0       | If regenerative brake duty is fixed at 3%, parameter P.70 will be invalid. |
|           | 2<br>(30 kw and above model)  |               | 1       | Regenerative brake duty is set value of P.70.                              |
|           |                               |               | 2       | External brake unit protection function                                    |
| 70        | 0                             | 0~60%         |         |  |

Note: 1. In occasions where frequency starts or stops, a high capacity brake resistor is required.

2. Please refer to Section 3.7.3 for brake resistor selection.

## 5.15 Carrier Operation Selection (P.31)

### P.31 “Carrier operation selection”

- Soft-PWM is a control method that turns motor noises into pleasant complex tones.
- Motor noise modulation control is when the inverter varies its carrier frequency from time to time during the operation. The metal noises generated by the motor are not a single frequency. This function selection is to improve the high peak single frequency noises.
- This function is only valid under the V/F mode; i.e., it is effective when P.300=0.

| Parameter | Factory setting | Setting range | Remarks   |
|-----------|-----------------|---------------|---|
| 31        | 0               | 0             | Rated current decreases with rated carrier change(note 1)   |
|           |                 | 1             | when <u>P.72</u> < 5, Soft-PWM is valid (only apply to V/F control )  |
|           |                 | 2             | When <u>P.72</u> > 9(note 2), module temperature is higher than 60 °C carrier will decrease to 9k automatically (note 2); after temperature drops to lower than 40°C , carrier will restore the setting value of P.72 automatically |

Note: 1. For function of rated current decreasing with rated carrier change, please refer to figure P.72.

2. The decreasing level of carrier is different from different frames, the details: frame A/B is 9K; frame D/E is 4k; frame F is 2K.

## 5.16 Communication Function (P.32,P.33,P.34,P.36,P.48~P.53,P.153 . P.154)

P.32 “Serial communication Baud rate selection”

P.34 “Writing Selection of Communication EEPROM”

P.36 “Inverter station number”

P.51 “CR & LF selection”

P.53 “Communication check time interval”

P.153 “Communication error handling”

P. 49 “Stop bit length”

P.33 “Communication protocol selection”

P.48 “Data length”

P.50 “Parity check selection”

P.52 “Number of communication retries”

P.154 “Modbus communication data format”

- When the communication parameters are revised, please reset the inverter. The SF-type inverters have two communication protocols for selection, namely, Shihlin protocol and Modbus protocol. Parameter P.32, P.36, P.52, P.55 and P.153 are suitable for both protocols. P.48~P.51 is only suitable for the Shihlin protocol, while P.154 is only suitable for the Modbus protocol. Please refer to communication protocols for more details.
- Writing the parameter the RS-485 terminal of the inverter, you can change the by parameter storage device form EEPROM to RAM . If (p.34) =1(only RAM data writing), If the inverter is power off, the parameter will be lost when the value of 07-11(p.34) is set as 1(only RAM data writing.)
- If you want to change parameter frequently, please make the setting value of (p.34) communication EEPROM writing selection as 1. But if you set it as 0, the EEPROM life will. If the setting the value of EEPROM data writing is 0, the life of EEPROM will be shortened by frequent EEPROM data writing.

| Parameter | Factory setting | Setting range | Remarks  |                        |
|-----------|-----------------|---------------|----------|------------------------|
| 32        | 1               | 0, 1, 2,      | 0        | Baud rate: 4800bps     |
|           |                 |               | 1        | Baud rate: 9600bps     |
|           |                 |               | 2        | Baud rate: 19200bps    |
| 33        | 1               | 0, 1          | 0        | Modbus protocol        |
|           |                 |               | 1        | Shihlin protocol       |
| 36        | 0               | 0~254         | (Note 1) |                        |
| 48        | 0               | 0, 1          | 0        | Data length: 8 bit     |
|           |                 |               | 1        | Data length: 7 bit     |
| 49        | 0               | 0, 1          | 0        | Stop bit length: 1 bit |
|           |                 |               | 1        | Stop bit length: 2 bit |

# Parameter Description

| Parameter | Factory setting | Setting range   | Remarks  |   |
|-----------|-----------------|-----------------|----------|---|
| 50        | 0               | 0, 1, 2         | 0        | No parity verification                                |
|           |                 |                 | 1        | Odd   |
|           |                 |                 | 2        | Even  |
| 51        | 1               | 1, 2            | 1        | CR only   |
|           |                 |                 | 2        | Both CR and LF  |
| 52        | 1               | 0~10            | (Note 2) |   |
| 53        | 99999           | 0~999.8s, 99999 | 0~999.8  | Use the set value for the communication overtime test |
|           |                 |                 | 99999    | 99999: No communication overtime test (Note 3)        |
| 153       | 0               | 0, 1            | 0        | Warn and call to stop                                 |
|           |                 |                 | 1        | No warning and keep running                           |
| 154       | 4               | 0~5             | 0        | Protocol, 1, 7, N and 2 (Modbus, ASCII) (Note 4)      |
|           |                 |                 | 1        | 1, 7, E, 1 (Modbus, ASCII)                            |
|           |                 |                 | 2        | 1, 7, O, 1 (Modbus, ASCII)                            |
|           |                 |                 | 3        | 1, 8, N, 2 (Modbus, RTU)                              |
|           |                 |                 | 4        | 1, 8, E, 1 (Modbus, RTU)                              |
|           |                 |                 | 5        | 1, 8, O, 1 (Modbus, RTU)                              |

Note: 1. The number of inverters is practically determined by the wiring method and impedance matching. If Modbus protocol is used, please set the value to a nonzero value.

2. If the frequency of communication error exceeds the set value of P.52, and P.153 is set to 0, the alarm will go off and display OPT.

3. When P.53=99999, there is no time limit.

4. Modbus protocol. Displayed according to the starting bit, the data bit, parity check bit, and the stop bit. N: no parity check. E: 1-bit parity check. O: 1-bit odd parity check.

## 1. SF RS-485 Communication interface constituents and wiring


- SF RS-485 communication interface terminal arrangement

SF-RS485  
communications interface




| Terminal name | Description            |
|---------------|------------------------|
| A             | Inverter transceiver + |
| B             | Inverter transceiver - |
| GND           | Signal ground          |

- Communication between the position machine and single inverter (take computer as an example).

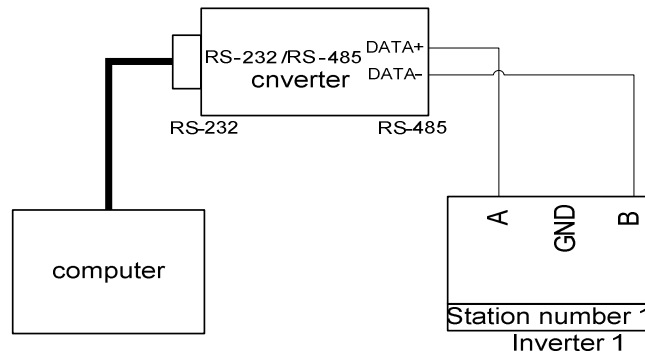

- Communication between the position machine and multiple inverters (take computer as an example).

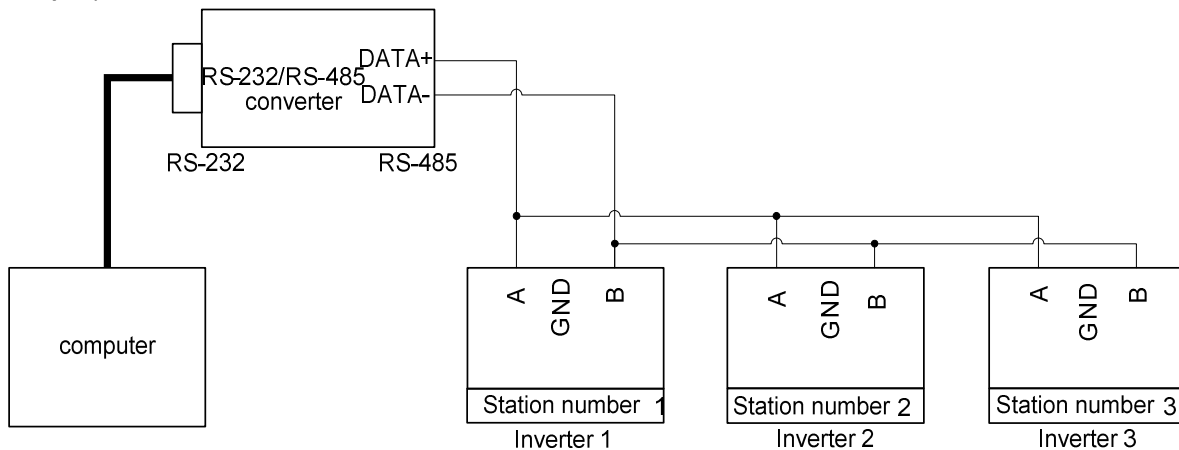


- SF series inverters have two types of communication protocols: Shihlin communication protocol and MODBUS communication protocol.

## 2. Shihlin communication protocol

- Automatically switch the position machine and the inverter to ASCII codes (hexadecimal) for communication.
- Please follow the following steps for data communication between the position machine and the inverter.



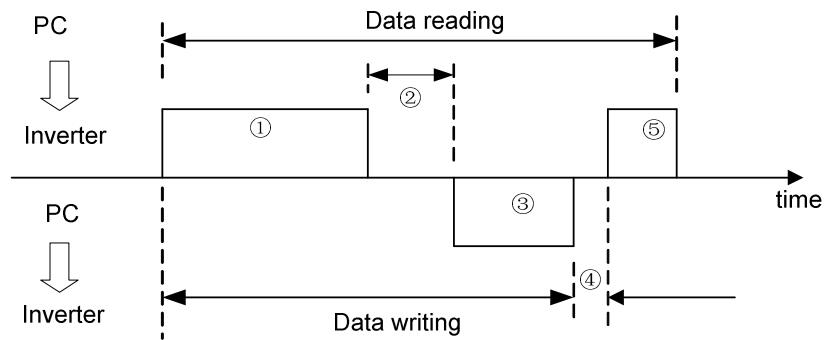

The above steps concerning communication actions and communication data format are explained below:

| No. | Action content   | Operation command                 | Frequency write-in | Parameter write-in | Inverter reset | Monitoring | Parameters Read-out |     |
|-----|--|-----------------------------------|--------------------|--------------------|----------------|------------|---------------------|-----|
| ①   | Use the position machine's user procedure to send communication request to the inverter. | A                                 | A                  | A                  | A              | B          | B                   |     |
| ②   | Inverter data processing time  | Yes                               | Yes                | Yes                | No             | Yes        | Yes                 |     |
| ③   | Inverter's replay data (check data ① error)  | No error (Accept the request)     | (C)                | (C)                | (C)            | No         | E                   | E   |
|     |  | Error exists (Refuse the request) | D                  | D                  | D              | No         | D                   | D   |
| ④   | Position machine's processing delay time   | No                                | No                 | No                 | No             | No         | No                  |     |
| ⑤   | Reply from the position machine regarding reply data ③ (Check data ③ error)              | No error (No processing)          | No                 | No                 | No             | No         | (C)                 | (C) |
|     |  | Error exists (Output ③)           | No                 | No                 | No             | No         | F                   | F   |

# Parameter Description

①. Data of the communication request sent by the position machine to the inverter.

| Format               | Data number |                         |   |              |   |              |   |                          |   |                |                          |    |                |    |
|----------------------|-------------|-------------------------|---|--------------|---|--------------|---|--------------------------|---|----------------|--------------------------|----|----------------|----|
|                      | 1           | 2                       | 3 | 4            | 5 | 6            | 7 | 8                        | 9 | 10             | 11                       | 12 | 13             | 14 |
| A<br>(Data write-in) | ENQ *1)     | Inverter station number |   | Command code |   | Waiting time |   | Data                     |   |                | Check code Sum check *7) |    | End symbol *3) |    |
| B<br>(Data read-out) | ENQ *1)     | Inverter station number |   | Command code |   | Waiting time |   | Check code Sum check *7) |   | End symbol *3) |                          |    |                |    |

③. Inverter reply data  
Data write-in

| Format                 | Data number |                         |   |                |   |                |
|------------------------|-------------|-------------------------|---|----------------|---|----------------|
|                        | 1           | 2                       | 3 | 4              | 5 | 6              |
| (C)<br>(No data error) | ACK *1)     | Inverter station number |   | End symbol *3) |   |                |
| D<br>(With data error) | NAK *1)     | Inverter station number |   | Error code *5) |   | End symbol *3) |

Data read-out

| Format                 | Data number |                         |   |                |   |                |   |          |     |                          |    |                  |    |
|------------------------|-------------|-------------------------|---|----------------|---|----------------|---|----------|-----|--------------------------|----|------------------|----|
|                        | 1           | 2                       | 3 | 4              | 5 | 6              | 7 | 8        | 9   | 10                       | 11 | 12               | 13 |
| E<br>(No data error)   | STX *1)     | Inverter station number |   | Data read-out  |   |                |   | Unit *4) | ETX | Check code Sum check *7) |    | Check symbol *3) |    |
| D<br>(With data error) | NAK *1)     | Inverter station number |   | Error code *5) |   | End symbol *3) |   |          |     |                          |    |                  |    |

⑤. Reply data from the position machine to the inverter during data read-out.

| Format                 | Data number |                         |   |                |   |
|------------------------|-------------|-------------------------|---|----------------|---|
|                        | 1           | 2                       | 3 | 4              | 5 |
| (C)<br>(No data error) | ACK *1)     | Inverter station number |   | End symbol *3) |   |
| F<br>(With data error) | NAK *1)     | Inverter station number |   | End symbol *3) |   |

# Parameter Description

\*1). Control code

| signal | ASCII Code | Content                         | signal | ASCII Code | Content                            |
|--------|------------|---------------------------------|--------|------------|------------------------------------|
| NUL    | H00        | NULL (Empty)                    | ACK    | H06        | Acknowledge (No data error)        |
| STX    | H02        | Start of Text (Data begin)      | LF     | H0A        | Line Feed (Change line)            |
| ETX    | H03        | End of Text (Data end)          | CR     | H0D        | Carriage Return                    |
| ENQ    | H05        | Enquiry (Communication request) | NAK    | H15        | Negative Acknowledge (Data errors) |

\*2). Set the waiting time between 0 and 15 with a 10ms unit. Example: 5 → 50ms

\*3). End symbol (CR, LF codes)

When carrying out data communication from the position machine to the inverter, CR and LF codes at the end of the text are automatically set according to method of the position machine. At this time, the inverter has to be set according to the position machine, too. If only CR is selected, only one register will be occupied; if both CR and LF are selected, two registers will be occupied.

\*4). Unit: 0---> Unit 1, 1---> Unit 0.1, 2---> Unit 0.01, 3---> Unit 0.001.

\*5). Error code

| Error code | Error item                   | Communication error and abnormality   |
|------------|------------------------------|---|
| H01        | Error                        | The parity check of the data received by the inverter is different from the parity check set initially.   |
| H02        | Sum check Error              | The Sum Check calculated by the inverter according to the received data is different from the received Sum Check.   |
| H03        | Communication protocol error | The syntax of the data received by the inverter has errors. The data is not completely received during the assigned period of time. CR and LF codes are different from the initial setting. |
| H04        | Frame error                  | The stop bit of the data received by the inverter does not match to the stop bit set initially.   |
| H05        | Overflow error               | When the inverter is receiving data, the position machine sends the next set of data before the inverter finishes receiving the current one.  |
| H0A        | Abnormal mode                | The running inverter or the operation of the inverter disqualifies the requirements of the mode setting.  |
| H0B        | Command code error           | The user assigns a command code that cannot be processed by the inverter.   |
| H0C        | Data range error             | When setting the parameters and frequencies, the set values are outside the set range of the data.  |

\*6). When the parameter has the characteristics of 99999, the write-in or read-out of 99999 will be replaced by HFFFF.

# Parameter Description

\*7). Request the sum check code

The converted ASCII codes of the data are summed up in binary digit format. The lower bits (the lower eight bits) of the result (the sum) converted into ASCII binary digits (hexadecimal) are termed as the Sum Check Code.

● Communication example

*Example 1.* The position machine sends a forward rotation command to the inverter:

Step 1. Use the position machine to send a FA command in Format A:

| ENQ | Inverter station number | Command code | Waiting time | Data            | Check code | CR  |
|-----|-------------------------|--------------|--------------|-----------------|------------|-----|
|     | 0                       | HFA          |              | H0002           | Sum check  |     |
| H05 | H30 H30                 | H46 H41      | H30          | H30 H30 H30 H32 | H44 H39    | H0D |

Sum Check calculation is:  $H30 + H30 + H46 + H41 + H30 + H30 + H30 + H30 + H32 = H1D9$ ; take the lower eight bits D9 to convert to ASCII code H44 and H39.

Step 2. After receiving and processing the data without error, the inverter will send a reply to the position machine in Format C:

| ACK | Inverter station number | CR  |
|-----|-------------------------|-----|
|     | 0                       |     |
| H06 | H30 H30                 | H0D |

*Example 2.* The position machine sends a stop rotation command to the inverter:

Step 1. Use the position machine to send a FA command in Format A:

| ENQ | Inverter station number | Command code | Waiting time | Data            | Check code | CR  |
|-----|-------------------------|--------------|--------------|-----------------|------------|-----|
|     | 0                       | HFA          |              | H0000           | Sum check  |     |
| H05 | H30 H30                 | H46 H41      | H30          | H30 H30 H30 H30 | H44 H37    | H0D |

Step 2. After receiving and processing the data without error, the inverter will send a reply to the position machine in Format C:

| ACK | Inverter station number | CR  |
|-----|-------------------------|-----|
|     | 0                       |     |
| H06 | H30 H30                 | H0D |

*Example 3.* The read-out value of the position machine P.195:

Step1. The position machine sends the write-in page break command to the inverter using Format A:

# Parameter Description

|     |                              |                     |              |                 |                         |     |
|-----|------------------------------|---------------------|--------------|-----------------|-------------------------|-----|
| ENQ | Inverter station number<br>0 | Command code<br>HFF | Waiting time | Data<br>H0001   | Check code<br>Sum check | CR  |
| H05 | H30 H30                      | H46 H46             | H30          | H30 H30 H30 H31 | H44 H44                 | H0D |

↓  
P.195 is on page 1.

Step 2. After receiving and processing the data without error, the inverter will send a reply to the position machine in Format C

|     |                              |     |
|-----|------------------------------|-----|
| ACK | Inverter station number<br>0 | CR  |
| H06 | H30 H30                      | H0D |

Step 3. The position machine requests the inverter for reading the value P.195 using Format B:

|     |                              |                     |              |                         |     |
|-----|------------------------------|---------------------|--------------|-------------------------|-----|
| ENQ | Inverter station number<br>0 | Command code<br>H5F | Waiting time | Check code<br>Sum check | CR  |
| H05 | H30 H30                      | H35 H46             | H30          | H30 H42                 | H0D |



First 195 minus 100 equals to 95, then convert 95 to H5F hexadecimal digits. Next convert 5 and into H35 and H46, respectively, in ASCII code.

Step 4. Once the inverter receives and processes the data without error, the value of P.195 will be sent to the position machine in Format E:

|     |                              |                              |      |     |                         |     |
|-----|------------------------------|------------------------------|------|-----|-------------------------|-----|
| STX | Inverter station number<br>0 | Read-out data<br>H1770(60Hz) | Unit | ETX | Check code<br>Sum check | CR  |
| H02 | H30 H30                      | H31 H37 H37 H30              | H32  | H03 | H36 H31                 | H0D |

*Example 4.* Change the content of P.195 to 50 (the original factory setting is 60).

Step 1 to 2: Omitted (Same as Step 1 to 2 of Example 3);

# Parameter Description

Step 3: The position machine requests the inverter to write 50 in P.195 in Format A:

|     |                              |                     |              |                 |                         |     |
|-----|------------------------------|---------------------|--------------|-----------------|-------------------------|-----|
| ENQ | Inverter station number<br>0 | Command code<br>HDF | Waiting time | Data<br>H1388   | Check code<br>Sum check | CR  |
| H05 | H30 H30                      | H44 H46             | H30          | H31 H33 H38 H38 | H45 H45                 | H0D |



First, 195 minus 100 equals to 95;  
Concert 95 to H5F hexadecimal digits,  
H5F+H80=HDF

because the smallest unit of P.195 is 0.01,  
50 x 100 = 5000; then convert 5000 to hexadecimal  
digits H13888; Then covert 1, 3, 8 and 8 to ASCII  
codes for transmission.

Step 4. After receiving and processing the data without error, the inverter will send a reply to the position machine in Format C:

|     |                              |     |
|-----|------------------------------|-----|
| ACK | Inverter station number<br>0 | CR  |
| H06 | H30 H30                      | H0D |

*Example 5. Write P.195 into 500 (this parameter range is set between 0 and 400)*

Step 1 to 2: Omitted (same as Step 1 and 2 of Example 3);

Step 3: The position machine requests the inverter to write 500 in P.195 in Format A:

|     |                              |                     |              |                 |              |     |
|-----|------------------------------|---------------------|--------------|-----------------|--------------|-----|
| ENQ | Inverter station number<br>0 | Command code<br>HDF | Waiting time | Data<br>HC350   | SUM<br>CHECK | CR  |
| H05 | H30 H30                      | H44 H46             | H30          | H43 H33 H35 H30 | H46 H35      | H0D |


Step 4. After the inverter receives and processes the information, because the data exceed the set range of P.195, the data range is incorrect. The inverter will reply the error to the position machine in Format D:

|     |                              |                   |     |
|-----|------------------------------|-------------------|-----|
| NAK | Inverter station number<br>0 | Error code<br>H0C | CR  |
| H15 | H30 H30                      | H43               | H0D |

### 3. MODBUS communication protocol

1). Message format

- MODBUS serial transmission can be divided into two types: ASCII (American Standard Code for Information Interchange) and RTU (Remote Terminal Unit).

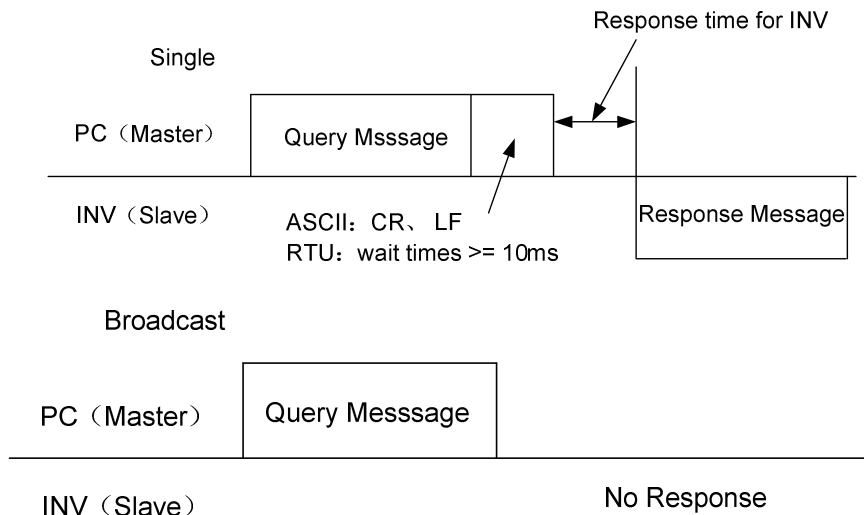

(1). Query

Position machine (main address) sends messages to the inverter of the assigned address (from the address).

(2). Normal response

After receiving the query from the Master, the Slave will execute the requested function and ask the Master to send the normal response.

(3). Error response

When receiving invalid function codes, address or data, the inverter will send the response to the Master.

(4). Broadcast

The Master will assign the address 0, and the slave will send the message to all the Slaves. Once receiving a message from the Master, all the Slaves will execute the requested function without responding to the Master.

2). Communication format

- Basically, the Master will send Query Message to the inverter, which will send the response message to the Master. The address and function codes are duplicated for regular communication. Bit 7 of functional code during abnormal communication is positioned as "1" (=H80). The data baste is set to be the error code.
- Message constituents :

| Format | Start              | ①Address | ②Function | ③Data    | ④Error check | Stop               |
|--------|--------------------|----------|-----------|----------|--------------|--------------------|
| ASCII  | H3A                | 8 bits   | 8 bits    | n×8 bits | 2×8 bits     | 0D 0A              |
| RTU    | $\geq 10\text{ms}$ |          |           |          |              | $\geq 10\text{ms}$ |

| Message                   | Content  |   |               |                      |                         |     |   |                       |     |  |                    |     |   |                          |     |   |
|---------------------------|--|---|---------------|----------------------|-------------------------|-----|---|-----------------------|-----|--|--------------------|-----|---|--------------------------|-----|---|
| ①Address message set      | <p>Set range: 0~254.0 is the broadcasting address; 1~254 are the equipment (inverter) address.</p> <p>The setup of P.36 is based on the equipment address. The set up is carried out when the main equipment sends messages to the equipments and when the equipment sends reply message to the main equipment.</p>  |   |               |                      |                         |     |   |                       |     |  |                    |     |   |                          |     |   |
| ②Function message set     | <p>Only three functions have been done so far. The equipment carries out actions according to the request from the equipment. The main equipment sets functional codes excluded from the table below. The equipment returns error response. It is determined by the response from the equipment; regular function codes are the response for regular responses; H80 + function codes are the response for error responses.</p> <table border="1"> <thead> <tr> <th>Function name</th> <th>Function code</th> <th>Function description</th> </tr> </thead> <tbody> <tr> <td>Read multiple registers</td> <td>H03</td> <td>Read slave machine's continuous register content.</td> </tr> <tr> <td>Write single register</td> <td>H06</td> <td>Write data into slave machine's single register.</td> </tr> <tr> <td>Function diagnosis</td> <td>H08</td> <td>Function diagnosis (only for communication calibration)</td> </tr> <tr> <td>Write multiple registers</td> <td>H10</td> <td>Write data into slave machine's multiple registers.</td> </tr> </tbody> </table> | Function name   | Function code | Function description | Read multiple registers | H03 | Read slave machine's continuous register content. | Write single register | H06 | Write data into slave machine's single register. | Function diagnosis | H08 | Function diagnosis (only for communication calibration) | Write multiple registers | H10 | Write data into slave machine's multiple registers. |
| Function name             | Function code  | Function description                                    |               |                      |                         |     |   |                       |     |  |                    |     |   |                          |     |   |
| Read multiple registers   | H03  | Read slave machine's continuous register content.       |               |                      |                         |     |   |                       |     |  |                    |     |   |                          |     |   |
| Write single register     | H06  | Write data into slave machine's single register.        |               |                      |                         |     |   |                       |     |  |                    |     |   |                          |     |   |
| Function diagnosis        | H08  | Function diagnosis (only for communication calibration) |               |                      |                         |     |   |                       |     |  |                    |     |   |                          |     |   |
| Write multiple registers  | H10  | Write data into slave machine's multiple registers.     |               |                      |                         |     |   |                       |     |  |                    |     |   |                          |     |   |
| ③Data message set         | Changes, including the starting address, the number of the write-in or read-out registers, and the write-in data, are made according to the function codes.  |   |               |                      |                         |     |   |                       |     |  |                    |     |   |                          |     |   |
| ④ Error check message set | ASCII is the check method for LRC, while RTU is the check method for CRC.(For more details concerning the verification calculation for LRC and CRC, please refer to Standard MODBUS Protocol specification.)   |   |               |                      |                         |     |   |                       |     |  |                    |     |   |                          |     |   |

ASCII mode's LRC check value calculation:

LRC check is simpler and it is used in the ASCII mode for checking the content of the message domain, excluding the colon at the beginning and the line change enter symbol at the end. It only sums up all the data to be transmitted according to the bite (not the ASCII code). If the result is greater than H100 of the hexadecimal digit, remove the exceeded part (e.g., if the result is H136 of the hexadecimal digit, then take H36 only) and add one.

RTU mode, CRC check value calculation:

1. Add one hexadecimal digit register. All the digits are 1.
2. Carry out XOR calculation for the higher bit of the hexadecimal digit register and the eight bits. The calculated result is entered to the hexadecimal digit register.
3. Shift this hexadecimal digit register one bit to the right.
4. If the right shifted bit (the marked bit) is 1, then polynomial 101000000000001 and this register will carry out the XOR calculation. If the right shifted bit is 0, then it will return to 3.
5. Repeat 3 and 4 until 8 bits are shifted.
6. The other eight bits and the hexadecimal register carry out the XOR calculation.



# Parameter Description

7. Repeat 3~7 until all the bytes of the text carries out the XOR calculation with the hexadecimal register and was shifted for eight times.
8. The hexadecimal register content is the 2-byte CRC error checking, and it is added to the highest valid bit of the text.

When CRC is added to the message, lower bytes are added first, followed by the higher bytes.

● Communication format:

(1). Data read-out (H03)

| Mode  | Start  | Address *1) | Function*2) | Start Address *3) | Number of register *4) | Check | Stop   |
|-------|--------|-------------|-------------|-------------------|------------------------|-------|--------|
| ASCII | H3A    | 2char       | 2char       | 4char             | 4char                  | 2char | 0D 0A  |
| RTU   | >=10ms | 1byte       | 1byte       | 2byte             | 2byte                  | 2byte | >=10ms |

Regular response

| Mode  | Start  | Address *1) | Function *2) | Read-out data number *5) | Read-out data *6) | Check | Stop   |
|-------|--------|-------------|--------------|--------------------------|-------------------|-------|--------|
| ASCII | H3A    | 2char       | 2char        | 2char                    | ...2N×1char       | 2char | 0D 0A  |
| RTU   | >=10ms | 1byte       | 1byte        | 1byte                    | ...2N×1byte       | 2byte | >=10ms |

| Message                 | Content   |
|-------------------------|---|
| 1) Address              | Set up the address for the to-be delivered message; 0 for invalid.              |
| 2) Function code        | H03   |
| 3) Starting address     | Set up the address of the register for reading the message.                     |
| 4) Number of register   | Set up the number of register for reading. Maximum number: 12.                  |
| 5) Amount of data to be | Twice the amount of 4)  |
| 6) Data to-be read      | Set the data for 4); the data will be read according to the descending sequence |

(2). Data write-in (H06)

| Mode  | Start  | Address *1) | Function *2) | Start Address *3) | Write-in data *4) | Check | Stop   |
|-------|--------|-------------|--------------|-------------------|-------------------|-------|--------|
| ASCII | H3A    | 2char       | 2char        | 4char             | 4char             | 2char | 0D 0A  |
| RTU   | >=10ms | 1byte       | 1byte        | 2byte             | 2byte             | 2byte | >=10ms |

Regular response

| Mode  | Start  | Address *1) | Function *2) | Start Address *3) | Write-in data *4) | Check | Stop   |
|-------|--------|-------------|--------------|-------------------|-------------------|-------|--------|
| ASCII | H3A    | 2char       | 2char        | 4char             | 4char             | 2char | 0D 0A  |
| RTU   | >=10ms | 1byte       | 1byte        | 2byte             | 2byte             | 2byte | >=10ms |

# Parameter Description

| Message             | Content   |
|---------------------|---|
| 1) Address          | Set up the address for the to-be delivered message; 0 for invalid.                  |
| 2) Function code    | H06   |
| 3) Starting address | Set up the starting address of the register to be engaged in the write-in function. |
| 4) Write-in data    | Write the data in the assigned register. The data have to be 16bit (fixed).         |

Note: Regular response content and the inquired message are the same.

### (3). Write multiple registers (H10)

| Mode  | Start  | Address *1) | Function *2) | Starting Address *3) | Number of register *4) | Data *5) | Write-in data *6) |             | Check | Stop   |
|-------|--------|-------------|--------------|----------------------|------------------------|----------|-------------------|-------------|-------|--------|
| ASCII | H3A    | 2char       | 2char        | 4char                | 4char                  | 2char    | 4char             | ...2N×1char | 2char | 0D 0A  |
| RTU   | >=10ms | 1byte       | 1byte        | 2byte                | 2byte                  | 1byte    | 2byte             | ...2N×1byte | 2byte | >=10ms |

### Regular response

| Mode  | Starting | Address *1) | Function *2) | Start Address *3) | Number of register *4) | Check | Stop   |
|-------|----------|-------------|--------------|-------------------|------------------------|-------|--------|
| ASCII | H3A      | 2char       | 2char        | 4char             | 4char                  | 2char | 0D 0A  |
| RTU   | >=10ms   | 1byte       | 1byte        | 2byte             | 2byte                  | 2byte | >=10ms |

| Message               | Content   |
|-----------------------|---|
| 1) Address            | Set up the address for the to-be delivered message; 0 for invalid.  |
| 2) Function code      | H10   |
| 3) Starting address   | Set up the starting address of the register to be engaged in the write-in function.   |
| 4) Number of register | Set up the number of register for reading. Maximum number: 12.  |
| 5) Amount of data     | The range should be between 2 and 24. Set Twice the amount of *4).  |
| Write-in data         | Set the assigned data in *4), write the data according to the sequence of the Hi byte and the Lo byte and the data of the starting address: According to the order of the data of the starting address +1, data of the starting address +2..., etc. |

### (4). Function Diagnosis (H08)

By sending query information and getting the same query information back (the function of the subroutine code H00), it can do communication calibration.

The subroutine code H00 (for inquiring the return of data)

# Parameter Description

The query information

| Mode  | Start  | Address *1) | Function *2) | Subroutine *3) | Data *4) | Check | End    |
|-------|--------|-------------|--------------|----------------|----------|-------|--------|
| ASCII | H3A    | 2char       | 2char        | 4char          | 4char    | 2char | 0D 0A  |
| RTU   | >=10ms | 1byte       | 1byte        | 2byte          | 2byte    | 2byte | >=10ms |

Normal response

| Mode  | Start  | Address *1) | Function *2) | Subroutine *3) | Data *4) | Check | End    |
|-------|--------|-------------|--------------|----------------|----------|-------|--------|
| ASCII | H3A    | 2char       | 2char        | 4char          | 4char    | 2char | 0D 0A  |
| RTU   | >=10ms | 1byte       | 1byte        | 2byte          | 2byte    | 2byte | >=10ms |

Setting of the query information

| Information        | Content  |
|--------------------|--|
| *1) Address        | Set the address for the information to be sent to, not able to radio communications(0 invalid) |
| *2)Function code   | H08  |
| *3)Subroutine code | H0000  |
| *4) Data           | If the data is 2 byte, it can be set arbitrarily. Set range from H0000 to HFFFF.               |

(5). Error response

Carry out error response according to the error in the function, address and data of the query message received by the equipment.

There will be no errors if one or more addresses can be operated when they are accessed by the function code H03 or H10.

| Mode  | Starting | Address *1) | Function*2) H80+function | Error code * 3) | Check | Stop   |
|-------|----------|-------------|--------------------------|-----------------|-------|--------|
| ASCII | H3A      | 2char       | 2char                    | 2char           | 2char | 0D 0A  |
| RTU   | >=10ms   | 1byte       | 1byte                    | 1byte           | 2byte | >=10ms |

| Message          | Content  |
|------------------|--|
| 1) Address       | Set up the address for the to-be delivered message; 0 for invalid. |
| 2) Function code | The function code set for the main equipment + H80                 |
| 3) Error code    | Set the codes listed in the table below.                           |

# Parameter Description

The list of error codes:

| Source      | Code | Meaning               | Remarks  |
|-------------|------|-----------------------|--|
| Slave reply | H01  | Invalid function code | Set up function codes that cannot be handled by the equipment in the query message sent by the main equipment. Function codes that are not H03, H06, H08 and H10 (temporarily).  |
|             | H02  | Invalid data address  | Set up addresses that cannot be handled by the equipment in the query message sent by the main equipment (Asides from the addresses listed in the address table of the register; preserve the parameters, prohibit parameter reading, prohibit parameter writing). |
|             | H03  | Invalid data value    | Set up data that cannot be handled by the equipment in the query message sent by the main equipment (parameters written outside the range, exist assigned mode, other errors, etc.).   |

Note: When performing multi-parameter reading, reading a preserved parameter is not a mistake.

Data sent to the main equipment will be tested by the inverter for the following mistakes, but the inverter will make no response for any detected error.

The list of the error test items:

| Error item     | Error content  |
|----------------|--|
| Parity error   | The parity test for data received by the inverter is different from the parity test set at the initial stage.                                |
| Frame error    | The stop byte of the data received by the inverter mismatches the stop byte set at the initial stage.  |
| Overflow error | When the inverter is receiving data, the position machine sends the next set of data before the inverter finishes receiving the current one. |
| Error test     | The LRC/CRC calculated by the inverter according to the received data is different from the received LRC/CRC.                                |

● Communication example

*Example 1.* The operation mode written by the communication is the CU (communication) mode.

Step 1: The position machine modifies the mode of the inverter.

| Mode  | Starting | Address | Function | Starting address |         | Write-in data |         | Check   | Stop   |
|-------|----------|---------|----------|------------------|---------|---------------|---------|---------|--------|
| ASCII | H3A      | H30 H31 | H30 H36  | H31H30           | H30 H30 | H30 H30       | H30 H30 | H45 H39 | 0D 0A  |
| RTU   | >=10ms   | 01      | 06       | 10               | 00      | 00            | 00      | 8D 0A   | >=10ms |

Step 2. After receiving and processing the data without error, the inverter will send a reply to the position machine:

# Parameter Description

| Mode  | Starting | Address | Function | Starting address |         | Write-in data |         | Check   | Stop   |
|-------|----------|---------|----------|------------------|---------|---------------|---------|---------|--------|
| ASCII | H3A      | H30 H31 | H30 H36  | H31H30           | H30 H30 | H30 H30       | H30 H30 | H45 H39 | 0D 0A  |
| RTU   | >=10ms   | 01      | 06       | 10               | 00      | 00            | 00      | 8D 0A   | >=10ms |

*Example 2.* Read the parameter P.195 value by the position machine

Step 1. The position machine sends message to the inverter for reading the value of P.195. The address of P.195 is H00C3.

| Mode  | Starting | Address | Function | Starting address |         | Number of registers |         | Check   | Stop   |
|-------|----------|---------|----------|------------------|---------|---------------------|---------|---------|--------|
| ASCII | H3A      | H30 H31 | H30 H33  | H30H30           | H43 H33 | H30 H30             | H30 H31 | H33 H38 | 0D 0A  |
| RTU   | >=10ms   | 01      | 03       | 00               | C3      | 00                  | 01      | 74 36   | >=10ms |

Step 2. Once the message is received and processed without mistake, the inverter will send the content of P.195 to the position machine.

| Mode  | Starting | Address | Function | Number of data read | Read-out data |            | Check      | Stop   |
|-------|----------|---------|----------|---------------------|---------------|------------|------------|--------|
| ASCII | H3A      | H30 H31 | H30 H33  | H30 H32             | H31<br>H37    | H37<br>H30 | H37<br>H33 | 0D 0A  |
| RTU   | >=10ms   | 01      | 03       | 02                  | 17            | 70         | B6 50      | >=10ms |

Because the decimal form of H1770 is 6000 and the unit of P.195 is 0.01, P.195 is 60 (6000 x 0.01 = 60).

*Example 3.* Change the content of P.195 to 50.

Step 1. The position machine sends message to the inverter for writing 50 into P.195.

| Mode  | Starting | Address | Function | Starting address |         | Write-in data |         | Check   | Stop   |
|-------|----------|---------|----------|------------------|---------|---------------|---------|---------|--------|
| ASCII | H3A      | H30 H31 | H30 H36  | H30H30           | H43 H33 | H31 H33       | H38 H38 | H39 H42 | 0D 0A  |
| RTU   | >=10ms   | 01      | 06       | 00               | C3      | 13            | 88      | 74 A0   | >=10ms |

Step 2. After receiving and processing the data without error, the inverter will send a reply to the position machine:

| Mode  | Starting | Address | Function | Starting address |         | Write-in data |         | Check   | Stop   |
|-------|----------|---------|----------|------------------|---------|---------------|---------|---------|--------|
| ASCII | H3A      | H30 H31 | H30 H36  | H30H30           | H43 H33 | H31 H33       | H38 H38 | H39 H42 | 0D 0A  |
| RTU   | >=10ms   | 01      | 06       | 00               | C3      | 13            | 88      | 74 A0   | >=10ms |

*Example 4.* Read the values of parameters P.0~P.11 by the position machine

Step 1. The position machine sends message to the inverter for reading the value of P.0~P.11. Starting address is H0000.

| Mode  | Starting | Address | Function | Starting address |         | Number of registers |         | Check   | Stop   |
|-------|----------|---------|----------|------------------|---------|---------------------|---------|---------|--------|
| ASCII | H3A      | H30 H31 | H30 H33  | H30H30           | H30 H30 | H30 H30             | H30 H43 | H46 H30 | 0D 0A  |
| RTU   | >=10ms   | 01      | 03       | 00               | 00      | 00                  | 0C      | 45 CF   | >=10ms |

# Parameter Description

Step 2. After receiving and processing the data without error, the inverter will send a reply to the position machine:

| Mode  | Starting | Address | Function | Number of data read | Read-out data | Check | Stop   |
|-------|----------|---------|----------|---------------------|---------------|-------|--------|
| ASCII | H3A      | H30 H31 | H30 H33  | H31 H38             | ... 12×4 char | 4char | 0D 0A  |
| RTU   | >=10ms   | 01      | 03       | 18                  | ... 12×2 byte | 2byte | >=10ms |

*Example 5.* Rewrite the values of parameters P.0~P.11 by the inverter

Step 1. The position machine sends message to the inverter for writing the value of P.0~P.11.

| Mode  | Starting | Address | Function | Starting address   | Number of registers | Data volume | Write-in data | Check | Stop   |
|-------|----------|---------|----------|--------------------|---------------------|-------------|---------------|-------|--------|
| ASCII | H3A      | H30 H31 | H31 H30  | H30 H30<br>H30 H30 | H30 H30<br>H30 H43  | H31 H38     | ...N×4 char   | 4char | 0D 0A  |
| RTU   | >=10ms   | 01      | 10       | 00 00              | 00 0C               | 18          | ...N×2 byte   | 2byte | >=10ms |

Step 2. After receiving and processing the data without error, the inverter will send a reply to the position machine:

| Mode  | Starting | Address | Function | Starting address | Number of registers | Check              | Stop          |
|-------|----------|---------|----------|------------------|---------------------|--------------------|---------------|
| ASCII | H3A      | H30 H31 | H31 H30  | H30H30           | H30 H30             | H30 H30<br>H30 H43 | H45 H33 0D 0A |
| RTU   | >=10ms   | 01      | 10       | 00 00            | 00 0C               | 00 18              | >=10ms        |

## 4. The list of communication commands

- The following commands and data are set for carrying out assorted operation control and monitoring.

| Modbus Command code | Item                       | Shihlin protocol Command code | Data content and function description  | Modbus address |
|---------------------|----------------------------|-------------------------------|--|----------------|
| H03                 | Operation mode read-out    | H7B                           | H0000: Communication mode;<br>H0001: External mode;<br>H0002: JOG Mode;<br>H0003: Combination 1, combination 3 and combination 5 modes;<br>H0004 : Combination 2 and combination 4 modes   | H1000          |
| H06/H10             | Operation mode write-in    | HFB                           |  |                |
| H03                 | Inverter status monitoring | H7A                           | H0000~H00FF<br>b8~b15: Preservation<br>b7: Abnormality occurred<br>b6: Frequency test<br>b5: Ended by restoring the default value of the parameter<br>b4: Overloaded<br>b3: Reached the frequency<br>b2: During reverse rotation<br>b1: During forward rotation<br>b0: During rotation | H1001          |

# Parameter Description

| Modbus Command code | Item                                     |        | Shihlin protocol Command code | Data content and function description  | Modbus address      |    |    |    |    |                |     |     |     |     |       |
|---------------------|--|--------|-------------------------------|--|---------------------|----|----|----|----|----------------|-----|-----|-----|-----|-------|
| H03                 | Inverter status monitoring               |        | H7A                           | H0000~H00FF<br>b8~b15: Preservation<br>b7: Abnormality occurred<br>b6: Frequency test<br>b5: Ended by restoring the default value of the parameter<br>b4: Overloaded<br>b3: Reached the frequency<br>b2: During reverse rotation<br>b1: During forward rotation<br>b0: During rotation   | H1001               |    |    |    |    |                |     |     |     |     |       |
| H06/H10             | Target frequency write-in                | EEPROM | HEE                           | H0000~ H9C40: 0~400Hz  | H1009               |    |    |    |    |                |     |     |     |     |       |
|                     |  | RAM    | HED                           |  | H1002               |    |    |    |    |                |     |     |     |     |       |
| H03                 | Special monitor select codes read out    |        | H7D                           | H0000~H000D: Monitor selected information<br>Special monitor select read out codes as described in the special monitoring code table (H0009 is reserved)   | H1013               |    |    |    |    |                |     |     |     |     |       |
| H06/H10             | Special monitor select codes write in    |        | HF3                           |  |                     |    |    |    |    |                |     |     |     |     |       |
| H03                 | Monitor the external operation condition |        | H7C                           | H0000~H000F: <table border="1" style="display: inline-table; vertical-align: middle;"><tr><td style="text-align: center;">b15-b4</td><td style="text-align: center;">b3</td><td style="text-align: center;">b2</td><td style="text-align: center;">b1</td><td style="text-align: center;">b0</td></tr><tr><td style="text-align: center;">0000 0000 0000</td><td style="text-align: center;">MRS</td><td style="text-align: center;">STR</td><td style="text-align: center;">STF</td><td style="text-align: center;">RES</td></tr></table>   | b15-b4              | b3 | b2 | b1 | b0 | 0000 0000 0000 | MRS | STR | STF | RES | H1012 |
| b15-b4              | b3                                       | b2     | b1                            | b0   |                     |    |    |    |    |                |     |     |     |     |       |
| 0000 0000 0000      | MRS                                      | STR    | STF                           | RES  |                     |    |    |    |    |                |     |     |     |     |       |
| H03                 | Monitor the INV real-time data           |        | ---                           | The corresponding monitoring value of each Modbus Address is as follows:<br>H1014: external terminal input state<br>H1015: external terminal output state<br>H1016: 2-5 terminal input voltage<br>H1017: 4-5 terminal input current/voltage<br>H1018: AM-5 terminal output voltage<br>H1019: DC bus voltage<br>H101A: rate of heat accumulated by inverter electronic<br>H101B: inverter output power<br>H101C: rate of temperature rising accumulated by inverter<br>H101D: temperature of inverter module<br>H101E: rate of the heat accumulated by motor electronic<br>H101F: target pressure when PID control<br>H1020: feedback pressure when PID control<br>H1021: rotating speed fed back by PG<br>H1022-H1024: preservation<br>H1025: inverter output torque | H1014<br>~<br>H1025 |    |    |    |    |                |     |     |     |     |       |

# Parameter Description

| Modbus Command code | Item                       |                  | Shihlin protocol Command code | Data content and function description  | Modbus address  |       |
|---------------------|----------------------------|------------------|-------------------------------|--|---|-------|
| H06/H10             | Operation command write-in |                  | HFA                           | H0000~HFFFF<br>b8~b15: Preservation<br>b7: Inverter emergency stop (MRS)<br>b6: The second function (RT)<br>b5: High speed (RH)<br>b4: Medium speed (RM)<br>b3: Low speed (RL)<br>b2: Reverse rotation (STR)<br>b1: Forward rotation (STF)<br>b0: Preservation | H1001   |       |
| H03                 | Monitoring                 | Frequency setup  | RAM                           | H6D  | H0000~H9C40 (Two decimal points when P.37=0; One decimal point when non-zero.)  | H1002 |
|                     |                            |                  | EEPROM                        | H73  |   | H1009 |
|                     |                            | Output frequency |                               | H6F  | H0000~H9C40 (Same as above)   | H1003 |
|                     |                            | Output current   |                               | H70  | H0000~HFFFF (two decimal points)  | H1004 |
|                     |                            | Output voltage   |                               | H71  | H0000~HFFFF (two decimal points)  | H1005 |
|                     |                            | Abnormal content |                               | H74  | H0000~HFFFF: Abnormal codes from the last two times<br>H0000~HFFFF:<br>H74: Error code 1 and 2<br>b15                      b8 b7                      b0<br>Error code 2              Error code 1                                      | H1007 |
|                     |                            |                  |                               | H75  | H75: Error code 3 and 4<br>b15                      b8 b7                      b0<br>Error code 4              Error code 3<br>For abnormal codes, please refer to the abnormal code list in the abnormal record parameter P.288~P.291. | H1008 |
| H06/H10             | Inverter reset             |                  | HFD                           | H9696: P.997 function<br>When communicating with the position machine, resetting the inverter will cause the inverter to be incapable of sending data back to the position machine.  | H1101   |       |
| H06/H10             | Parameter delete           |                  | HFC                           | For details, please refer to the parameter restoration status table.   | H5A5A   | H1104 |
|                     |                            |                  |                               |  | H9966   | H1103 |
|                     |                            |                  |                               |  | H9696   | H1106 |
|                     |                            |                  |                               |  | H55AA   | H1105 |
|                     |                            |                  |                               | HA5A5  | H1102   |       |



# Parameter Description

| Modbus Command code | Item  |       | Shihlin protocol Command code | Data content and function description   | Modbus address      |
|---------------------|---|-------|-------------------------------|---|---------------------|
| H03                 | Parameter read-out                            |       | H00~H63                       | For <u>P.0</u> ~ <u>P.499</u> , the data range and the position of the decimal point, please refer to the parameter table. The MODBUS address of each parameter corresponds to the hexadecimal digit of the parameter number. For example, the MODBUS address of <u>P.138</u> is H008A. | H0000<br> <br>H01F3 |
| H06/H10             | Parameter write-in                            |       | H80~HE3                       |   |                     |
| ---                 | Page change for parameter reading and writing | Read  | H7F                           | H0000: P.0~P.99;<br>H0001: P.100~P.199;<br>H0002: P.200~P.299;<br>H0003: P.300~P.399;<br>H0004: P.400~P.499.  | ---                 |
|                     |   | Write | HFF                           |   |                     |

● Parameter restoration condition table

| Data content | Parameter P operation | Communication Parameter P (Note) | <u>P.21, P.125, P.186, P.188~P.199, P.292, P.293, P.300~P.321</u> and communication parameter P excluded | Other P parameters | Error codes |
|--------------|-----------------------|----------------------------------|--|--------------------|-------------|
| H5A5A        | <u>P.999</u>          | o                                | o  | x                  | x           |
| H9966        | <u>P.999</u>          | o                                | o  | o                  | x           |
| H9696        | Communication 999     | x                                | o  | x                  | x           |
| H55AA        | Communication 998     | x                                | o  | o                  | x           |
| HA5A5        | <u>P.999</u>          | x                                | x  | x                  | o           |

Note: Communication P parameters include P.32, P.33, P.36, P.48~P.53, P.79, P.153 and P.154.


● The table of the special monitor code

| Information | Content   | Unit       |
|-------------|---|------------|
| H0000       | Monitor the external terminal input port state.                     | Note1      |
| H0001       | Monitor the external terminal output port state.                    | Note2      |
| H0002       | Monitor the voltage which can be input across terminal 2-5.         | 0.1V       |
| H0003       | Monitor the voltage/current which can be input across terminal 4-5. | 0.01A/0.1V |
| H0004       | Monitor the voltage which can be output across terminal AM-5.       | 0.1V       |

# Parameter Description

| Information | Content  | Unit   |
|-------------|--|--------|
| H0005       | Monitor the busbar voltage value.                      | 0.1V   |
| H0006       | Monitor the electronic thermal rate                    | ---    |
| H0007       | The rate of temperature rising accumulated by inverter | 0.01   |
| H0008       | The inverter output power                              | 0.01Kw |
| H0009       | Inverter NTC temperature accumulation                  | 0.01   |
| H000A       | The rate of heat accumulate by motor electronic        | ---    |
| H000B       | Target pressure when PID control                       | 0.1%   |
| H000C       | Feedback pressure when PID control                     | 0.1%   |
| H000D       | The rotating speed fed back by PG                      | 0.01Hz |
| H000E~H0010 | Reserve  |        |
| H0011       | Inverter output torque                                 |        |

Note: 1. Details of the external terminal input port state.

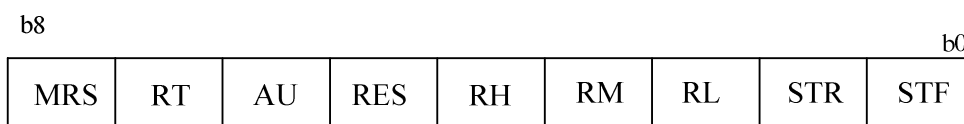

2. Details of the external terminal output port state.



## 5.17 Communication mode operation command and speed command selection (P.35)

P.35 "Communication mode operation command and speed command selection"

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 35        | 0               | 0,1           | ---     |

<Setting >

when P.79=3 and select communication mode:

if P.35=0, both operation command and speed command are given by communication.

If P.35=1, both operation command and speed command are given by the external.

## 5.18 Speed Display (P.37, P.259)

P.37 “Speed display”

P.259 “Speed unit selection”

- In the “output frequency monitoring mode” of DU01 operation panel, the screen will display the corresponding mechanical speed.

| Parameter | Factory setting | Setting range | Remarks         |                  |
|-----------|-----------------|---------------|-----------------|------------------|
| 37        | 0 r/min         | 0~5000.0r/min | 0               | Output frequency |
|           |                 | 0~9999 r/min  | 0.1~5000.0r/min | P.259=1          |
|           |                 |               | 1~9999 r/min    | P.259=0          |
| 259       | 1               | 0, 1          | ---             |                  |

### <Setting>

- The set value of P.37 is the mechanical speed of the inverter when its output frequency is 60Hz.  
For example: If the transmitting belt speed is 950 m/minute when the inverter output frequency is 60Hz, P.37 shall be set to 950. In the “output frequency monitoring mode” of DU01 operation panel, the screen will display the speed of the transmitting belt.

Note: 1. There's minute discrepancy between the displayed mechanical speed and the actual one.  
2. Please refer to Section [4.1.2](#) for detailed operation of the “operation panel working mode.”

## 5.19 Voltage Signal Selection and Target Frequency

**(P.38, P.73, P.139, P.140 and P.141)**

P.38 “The maximum output frequency (the target frequency is set by the input signal across terminal 2-5)”

P.73 “Voltage signal selection”

P.139 “Voltage signal bias”

P.140 “Voltage signal gain”

P.141 “Voltage signal bias direction and rotational direction setup”

Related parameters


P. 79 “Operation mode selection”  
 P. 80~ P.84, P. 86, P.126~P.128  
 “Multi-function terminals selection”  
 P. 189 “Factory setting function”

- The set value of P.38 is the target frequency value of the inverter when the input signal of terminal 2-5 is 5V (10V).

| Parameter | Factory setting | Setting range | Remarks   |
|-----------|-----------------|---------------|---|
| 38        | 50Hz            | 1~400Hz       | P.189=1   |
|           | 60Hz            |               | P.189=0   |
| 73        | 0               | 0, 1          | 0 The valid range of signal sampling (terminal 2-5) is 0~5V.          |
|           |                 |               | 1 The valid range of voltage signal sampling (terminal 2-5) is 0~10V. |
| 139       | 0%              | 0~100%        | ---   |
| 140       | 100%            | 0.1~200%      | ---   |
| 141       | 0               | 0~11          | ---   |


### <Setting>

- P.141 is set by two digits, and each digit has the following meaning:

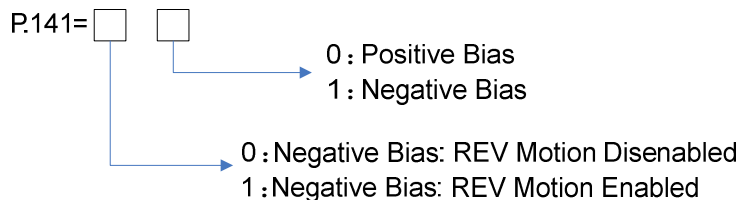


- The benefit of using the negative bias voltage for frequency setup is to prevent noise interference. Under a poor application environment, the user should avoid using signals below 1V for setting up the operation frequency of the inverter.
- The following examples illustrate impacts from voltage signals on rated frequency for each parameter setting.


Example 1: This example is the most commonly used method of adjustment. It is used when the inverter is in the “external mode”, “combined mode 2” or “combined mode 4”, and the frequency are set by terminal 2-5.

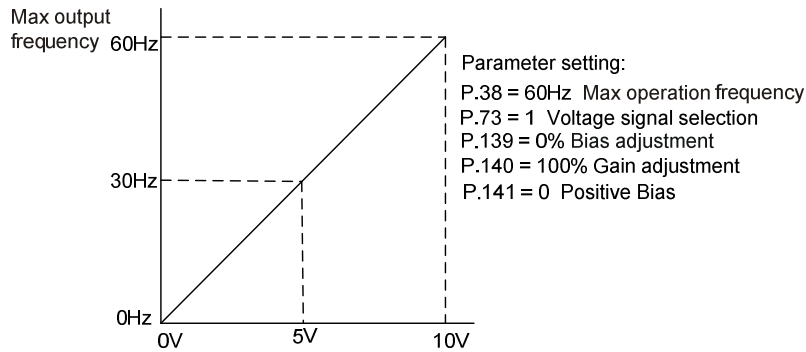


Example 2: This example is used by the industry for operating the ac motor drive. The goal is to have the set potentiometer equals to 10Hz when rotating to the far left. In other words, when activating, the lowest output of the ac motor drive has to be 10Hz. Other frequencies can be adjusted by the industry freely. It can be found from the figure below that the relationship between the output voltage and current signal and the set frequency has been changed from 0~10V corresponding to 0~60Hz to 0~8.33V corresponding to 10~60Hz. Therefore, the center of the potentiometer is 40Hz, and the latter zone of the potentiometer is consistently 60Hz. For the latter zone of the potentiometer to be operational, please refer to Example 3.

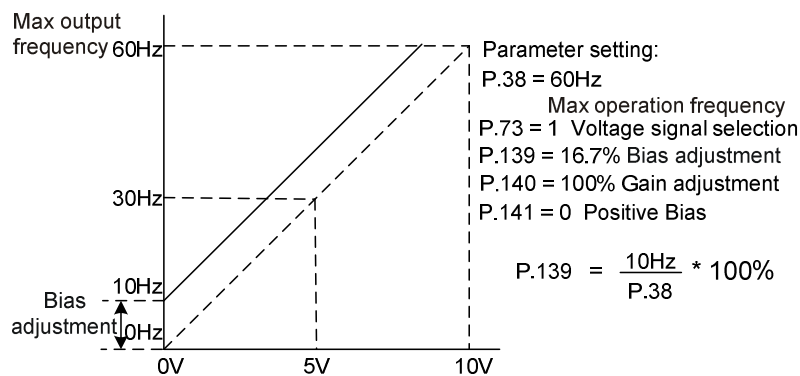


Example 3: This example is also frequently used by the industry. The comprehensive usage for all domain of the potentiometer setup elevates the flexibility.

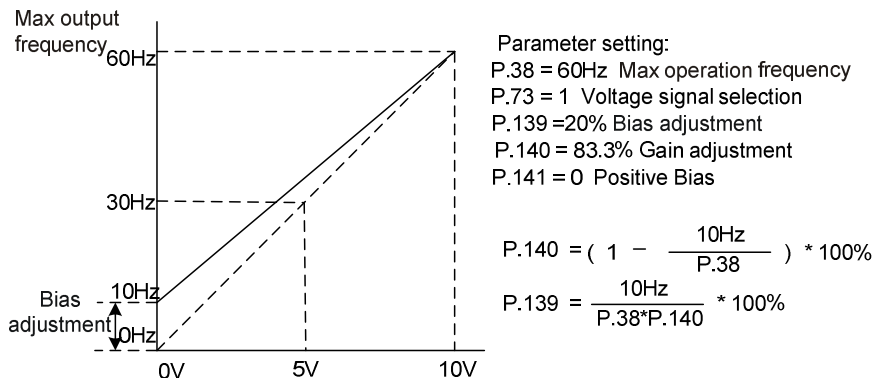


Example 4: This example uses 0~5V to set the frequency. Besides adjusting the method of gain, the user can also set P.38 to 120Hz or P.73 to zero to attain the same operation.

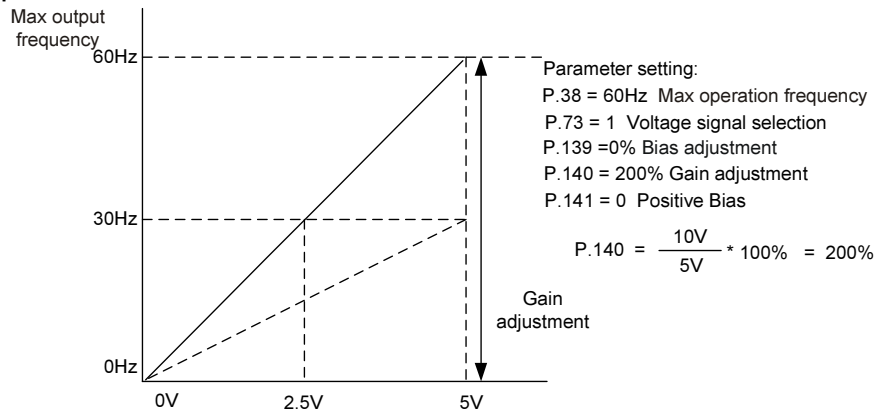


Example 5: This example is a typical negative bias application. An advantage of using negative bias is its anti-noise interference effect. Under an unfavorable application environment, it is recommended to avoid using a signal that is less than 1V to set up the operation frequency of the AC motor drive.

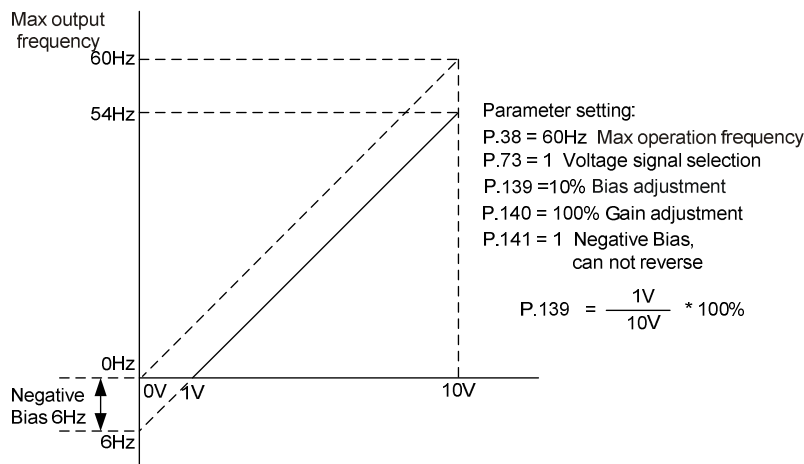


Example 6: This example is an extension of Example 5. The maximum operation frequency can be obtained by including the gain calibration. The wide application of this example offers the users good flexibility.

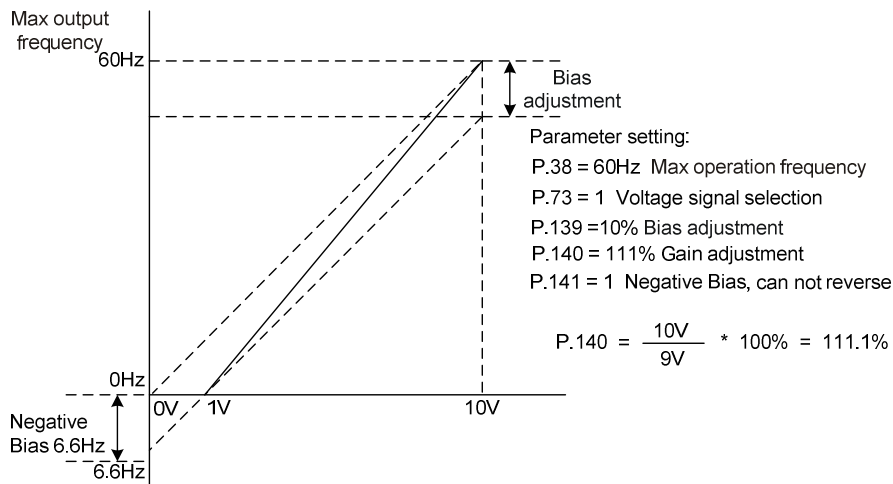

Example 7: This example integrates all the application of potentiometer. Together with the application of forward and reverse rotation, it fits in the system easily for assorted complicated application. Please be cautious that when setting up this application, the forward and reverse rotation commands of the external terminal will be disabled automatically.

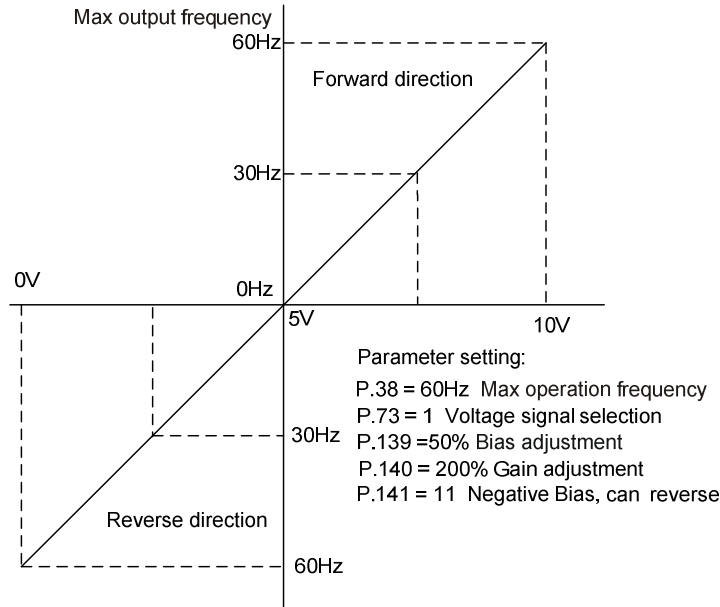

Example 8: This example is an application of negative slope setup. The industry often uses sensors for pressure, temperature or flow control. Some of the sensors output a 10V signal at high voltage or high flow. This signal acts as a command for the AC motor drive to decelerate or to stop. The setup presented in Example 8 can satisfy this type of application. Please be cautious that one limitation of this application is that the direction of rotation cannot be modified. For AC motor drive per se, only reverse rotation is possible.

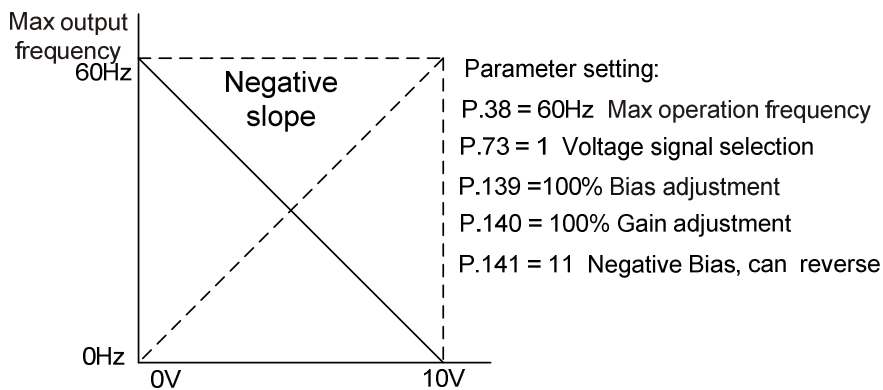

Note: 1. In "External mode", "combined mode 2" or "combined mode 4", the target frequency of the inverter will be determined by the signal between 2-5/4-5 terminal when RH, RM, RL and REX are all "off."

2. RL, RM, RH, REX, AU, RT and RUN mentioned at the end of this section are the function names of "multi-function control terminal". For the options and functions of multi-function control terminals, please refer to [P.80~P.84](#), [P.86](#), [P.126~P.128](#). For related wiring, please refer to Section [3.5](#).


## 5.20 The Input Signal across Terminal 4-5 and the Target Frequency

### (P.39)

P.39 “The maximum operation frequency (the target frequency is set by the input signal of terminal 4-5)”

- The set value of P.39 is the target frequency value of the inverter when the input signal of terminal 4-5 is 20mA (10V).

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 39        | 50Hz            | 1~400Hz       | P.189=1 |
|           | 60Hz            |               | P.189=0 |

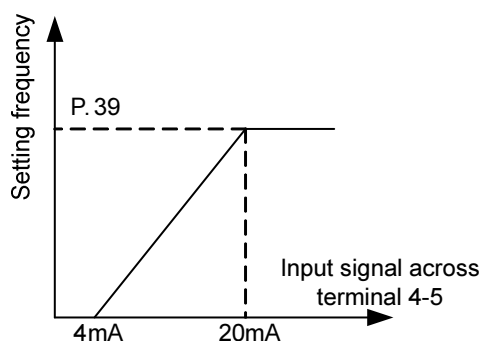

Note: 1. In “external mode”, “combined mode 2” or “combined mode 4”, if AU is “on”, target frequency of the inverter will be set by the input signal across terminal 4-5.

2. In “external mode”, “combined mode 2” or “combined mode 4”, if AU and either one of RH, RM, RL and REX are valid concurrently, multi-speed has higher priority.

3. RL, RM, RH, REX, AU, RT and RUN mentioned at the end of this section are the function names of “multi-function control terminal”. For the options and functions of multi-function control terminals, please refer to [P.80~P.84](#), [P.86](#), [P.126~P.128](#). For related wiring, please refer to Section [3.5](#).

## 5.21 Multi-function Output (P.40, P.85, P.129, P.130, P.120)

P.40 “Multi-function output terminal SU function selection”

P.85 “Function selection for multi-function relay”

P.129 “Multi-function RUN output terminal pattern”

P.130 “Multi-function FU/10X output terminal pattern”

P.120 “Output signal delay time”



# Parameter Description


| Parameter | Factory setting | Setting range | Remarks |   |
|-----------|-----------------|---------------|---------|---|
| 40        | 1               | 0~19          | 0       | RUN (Inverter running): Signals will be sent out when the output frequency is equal to or higher than the starting frequency.   |
|           |                 |               | 1       | SU (Reaching the output frequency): Signals will be sent out once the output frequency reaches the set frequency.   |
|           |                 |               | 2       | FU (Output frequency detection): It is the output signal when detecting the frequency exceeding the assigned frequency during the operation.  |
| 85        | 5               |               | 3       | OL (Overload detection): It is the output signal when the current limit function is triggered. (When P.260=1 and OL2 alarm is output, OL is output)   |
|           |                 |               | 4       | OMD (Zero current detection): If the current output percentage of the inverter is less than the set value of <u>P.62</u> and has exceeded <u>P.63</u> for a period of time, OMD will output the signal. |
|           |                 |               | 5       | ALARM (Alarm detection): An alarm signal detected.  |
| 129       | 0               |               | 6       | PO1 (Section detection): In the programmed operation mode, the signal will be sent out at the end of each frequency operation.  |
|           |                 |               | 7       | PO2 (Periodical detection): In the programmed operation mode, the signal will be sent out at the end of each operation cycle.   |
|           |                 |               | 8       | PO3 (Pause detection): In the programmed operation mode, the signal will be sent out when the operation is suspended.   |
| 130       | 2               |               | 9       | BP (Inverter output): Switch between the inverter operation and the commercial power-supply operation function; in inverter operation, BP will send out signals.  |
|           |                 |               | 10      | GP (Commercial power-supply output): Switch between the inverter operation and the commercial power-supply operation function; in the commercial power-supply operation, GP will send out signals.      |
|           |                 |               | 11      | AUX (Aux output): If multimachine constant pressure system function selected, when the second water pump is operating, AUX will output signal.  |
|           |                 |               | 12~15   | Please refer to the manual for the fan's water pump multiple cards.   |
|           |                 |               | 16      | Abnormal signal of fan  |

| Parameter | Factory setting | Setting range | Remarks |  |
|-----------|-----------------|---------------|---------|--|
| 130       | 2               | 0~19          | 17      | RY (the inverter running preparation accomplishment): After the inverter is powered on, the signal is output when the reset operation is completed (the starting signal ON is in the started state). |
|           |                 |               | 18      | Maintenance Alarm detection  |
|           |                 |               | 19      | OL2(Over torque alarm output): please refer to P.260   |
| 120       | 0 s             | 0.1~3600s     | ---     |  |

## <Setting>

- When P.120=0, the signal will be sent out directly when the set condition of P.40 (P.85) is met. the signal will be output directly.
- When P.120=0.1~3600, the signal will be sent out after the set time if the set condition of P.40 (P.85, P.129~P.130) is satisfied.

For example, FU (Output frequency detection) function (e.g., P.42/P.43=40Hz)

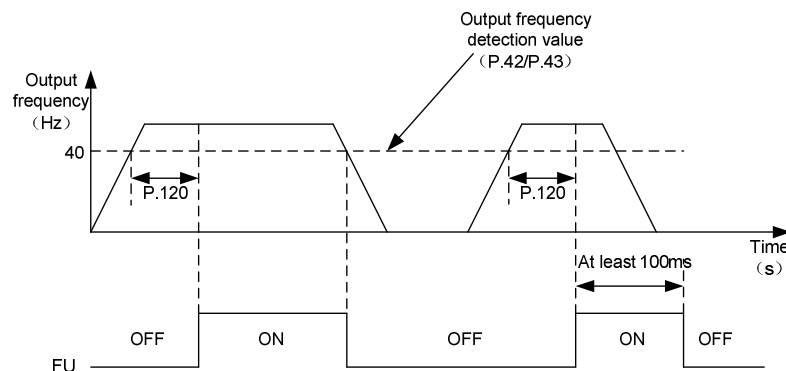

- Note: 1. For the multi-function output terminal SU-SE, P.40=1 means the “SU” function. When changing the value of P.40, the corresponding function will change as shown in the above table.
2. The internal structures for multi-function output terminals SU, RUN and FU/10X are “open collector output.” Please refer to Section 3.5.6 and Section 3.5.7.
3. For multi-function relay A-B-C, the default set value of P.85 is 5 (i.e., the alarm function). When the value of P.85 is revised, its function will change respectively according to the function listed in the table above.

## 5.22 Up-to-frequency Sensitivity (P.41)

### P.41 “Up-to-frequency sensitivity”


Related parameters

- P. 40 “Multi-function output terminal SU function selection”
- P. 85 “Function selection for multi-function relay”
- P. 129 “Multi-function terminal RUN function selection”
- P. 130 “Multi-function terminal FU/10X function selection”

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 41        | 10%             | 0~100%        | ---     |

#### <Setting>

- If P.41=5%, SU will send out signals when the output frequency enters the “5% region near the target frequency”. For example, when the target frequency is set to 60Hz and P.41=5%, then if the output frequency is between  $60 \pm 60 \times 5\% = 57\text{Hz}$  and 63Hz, a SU signal will be sent out.

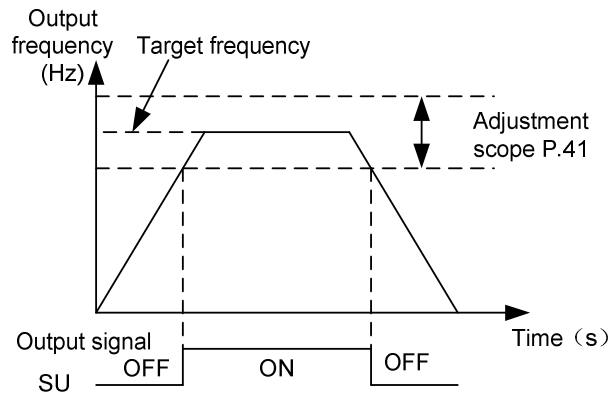

Note: In this paragraph, SU is the function name for “multi-function output terminal”. Please refer to [P.40](#), [P.85](#), [P.129](#) and [P.130](#). For wiring, please refer to [Section 3.5](#).

## 5.23 Output Frequency Detection (P.42 and P.43)

### P.42 “Output frequency detection for forward rotation”

### P.43 “Output frequency detection for reverse rotation”


Related parameters

- P. 40 “Multi-function output terminal SU function selection”
- P. 85 “Function selection for multi-function relay”
- P. 129 “Multi-function terminal RUN function selection”
- P. 130 “Multi-function terminal FU/10X function selection”

| Parameter | Factory setting | Setting range  | Remarks                     |
|-----------|-----------------|----------------|-----------------------------|
| 42        | 6Hz             | 0~400Hz        | ---                         |
| 43        | 99999           | 0~400Hz, 99999 | 99999; same as P.42 setting |

## <Setting>

- If P.42=30 and P.43=20, then FU/10X will send signals when the forward rotation output frequency exceeds 30Hz or when the reverse rotation output frequency exceeds 20Hz.
- If P.42=30 and P.43=99999 (factory default), then FU/10X will send out signals when the forward or reverse rotation output frequency exceeds 30Hz.

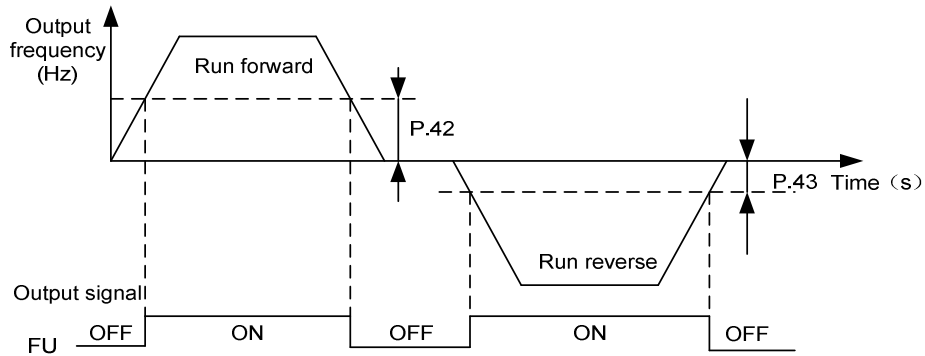

Note: In this paragraph, FU/10X is the function name for “multi-function output terminal”. Please refer to [P.40](#). For wiring, please refer to Section [3.5](#).

## 5.24 FM/AM Terminal (P.54~P.56, P.64, P.187, P.190 and P.191)

[P.54 “FM/AM terminal function selection”](#)

[P.190 “AM output bias”](#)

[P.191 “AM output gain”](#)

[P.55 “Frequency display reference”](#)

[P.187 “FM calibration parameter”](#)

[P.56 “Current monitoring reference”](#)

[P.64 “FM/AM output terminal selection \(requires hardware switch SW1\)”](#)

Related parameters


[P. 89 “ Slip compensation coefficient ”](#)

[P.74 FU/10times frequency output terminal selection \(requiring slot cover for switching\)”](#)







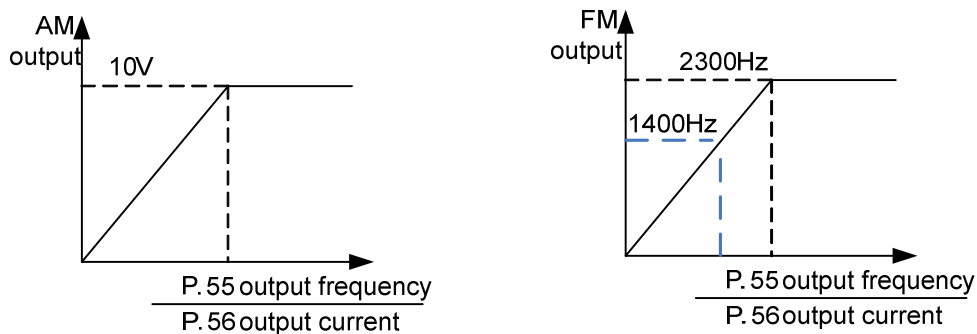




| Parameter | Factory setting                              | Setting range                                   | Remarks                 |
|-----------|--|---|-------------------------|
| 54        | 0  | 0~5   | ---                     |
| 55        | 50Hz   | 0~400Hz   | <a href="#">P.189=1</a> |
|           | 60Hz   |   | <a href="#">P.189=0</a> |
| 56        | Rated current                                | 0~500A/5000A<br>(refer to note 5 in appendix 1) | ---                     |
| 64        | 0  | 0, 1  | ---                     |
| 187       | 166  | 0~9998  | ---                     |
| 190       | 0( <a href="#">Note 4 of Appendix 1</a> )    | 0~1400  | ---                     |
| 191       | 1335( <a href="#">Note 4 of Appendix 1</a> ) | 0~1400  | ---                     |

## <Setting>

- When P.64=0, the function of external terminal FM/AM is AM function. A voltage between 0~10V can be output across terminal FM/AM and 5.
- When P.64=1, the function of external terminal FM/AM is FM function. The user can insert an electricity meter (current load: 1mA) between terminal FM/AM and SD to display the output frequency or the output current of the inverter.
- When P.54=0 and if the output frequency of the inverter is set as P.55, a voltage of 10V is produced at terminal FM/AM if AM terminal function is selected. If FM terminal function is selected, a pulse of 1440 Hz will be produced at terminal FM/AM.
- When P.54=1 and if the output frequency of the inverter is set as P.55, a voltage of 10V is produced at terminal FM/AM if the AM terminal function is selected. If FM terminal function is selected, a pulse of 1440 Hz is produced at terminal FM/AM.



- When P.54=2, the output corresponds to the busbar voltage value. If the voltage between P-N reaches the OV alarm level and the function of external terminal FM/AM is AM function, terminal FM/AM will output a voltage of 10V. If the function of external terminal FM/AM is FM function, terminal FM/AM will output a 1440Hz pulse.
- When P.54=3, the output corresponds to the accumulation rate of temperature increase of the inverter. If the temperature of the IGBT module of the inverter is too high and reaches the NTC level, the function of external terminal FM/AM will be AM function and a voltage of 10V will be sent out. If the function of external terminal FM/AM is FM function, terminal FM/AM will output a 1440Hz pulse.
- When P.54=4, the output corresponds to the electronic thermal rate. If either the electronic thermal relay (when P.9≠0) or the electronic thermal relay of the inverter's IGB module (when P.9=0) is running, the function of external terminal FM/AM will be AM function, and a voltage of 10V will be sent out. If the function of external terminal FM/AM is FM function, terminal FM/AM will output a 1440Hz pulse.
- When P.54=5, the output corresponding to a set frequency. Set the frequency of frequency converter for p. 55 set value and the function of external terminal FM/AM is set as AM , so a voltage of 10V will be sent out. If the function of external terminal FM/AM is FM function, terminal FM/AM will output a 1440Hz pulse.
- AM terminal calibration procedures:
  1. Insert an electric meter with a full graduation of 10V across terminal FM/AM and terminal 5. Set P.64 and P.54 to 0. Calibrate the header due to accessory variation.
  2. Set P.13 to 0. Start the motor. Fix the output frequency of the inverter to 0 Hz.

3. Read the set value of P.190, and the screen will display the output bias voltage of AM.
  4. Press  to adjust the value of P.190. The screen will display the accumulated output bias voltage of AM. Press  for more than 1 second, and the pointer will move upward. Press  to reduce the value of P.190, and the screen will display the progressively decreased output bias voltage of AM. Press  for more than 1 second, and the pointer will move downward. When the pointer is adjusted to 0, the calibration of AM output bias voltage is completed.
  5. Adjust and fix the output frequency of the inverter at 60 Hz.
  6. Read the set value of P.191, and the screen will display the current output gain of AM.
  7. Press  or  to adjust the output gain of AM. Press  for more than 1 second, and the pointer will move upward or downward. When the pointer moves to the full-scale position, the calibration is completed.
- FM terminal calibration procedures:
    1. Insert an electric meter with a full graduation of 1mA across terminal FM/AM and terminal SD, and set P.64 to 1 and P.54 to 0. Calibrate the header for accessory variation.
    2. Start the motor and fix the output frequency of the inverter to 60 Hz.
    3. When the motor runs steadily, read the set value of P.187. At this point, the screen will display the FM correction index. Press  to adjust the value of P.187. The screen will display a progressively increase of the FM correction index. Press  for more than 1 second, and the pointer will move upward. Press  to adjust the value of P.187 downward, and the screen will display a progressively decrease of the FM correction index. Press  for more than 1 second and the pointer will move downward.

Note: 1. Functions of FM and AM share a same terminal. Change the value of P.64 can change the function. SW1 on the control panel has to be switched off/on concurrently. The factory value is AM function.

2. When the value of P.74 is nonzero, FM and Am function will be invalid.

## 5.25 Restart Function (P.57, P.58, P.150 and P.160)

P.57 “Restart coasting time”

P.58 “Restart cushion time”


P.150 “Restart mode selection”

P.160 “Stall prevention operation level when restart”

| Parameter | Factory setting     | Setting range | Remarks  |
|-----------|---------------------|---------------|--|
| 57        | 99999               | 0~30s, 99999  | 99999: No restart function                                   |
| 58        | 5s (7.5kW or below) | 0~60s         | ---  |
|           | 10s (11kW~55kW)     |               |  |
|           | 20s (75kW or above) |               |  |
| 150       | 0                   | 0~221         | ---  |
| 160       | 100%                | 0~150%        | Stall prevention operation level when restarting the machine |

### <Setting>


- Once the driving power is interrupted while the motor is still running, voltage output will be stopped instantly. When the power is recovered and P.57=99999, the inverter will not restart automatically. When P.57=0.1~30, the motor will coast for a while (the set value of P.57) before the inverter restarts the motor automatically.
- Once the motor is restarted automatically, the output frequency of the inverter will be the target frequency, but the output voltage will be zero. Then the voltage will be increased gradually to the expected voltage value. The period for voltage increase is called “Restart cushion time (P.58)”.

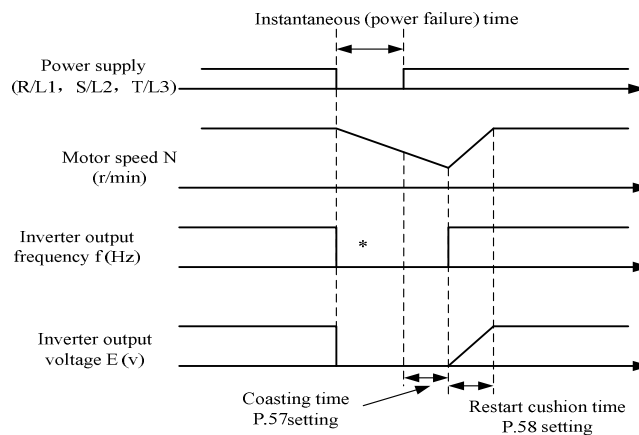

\* The output shut off timing differs according to the load condition

# Parameter Description

- There are four digits in P.150, and every digit has a different meaning and relevant position as following:

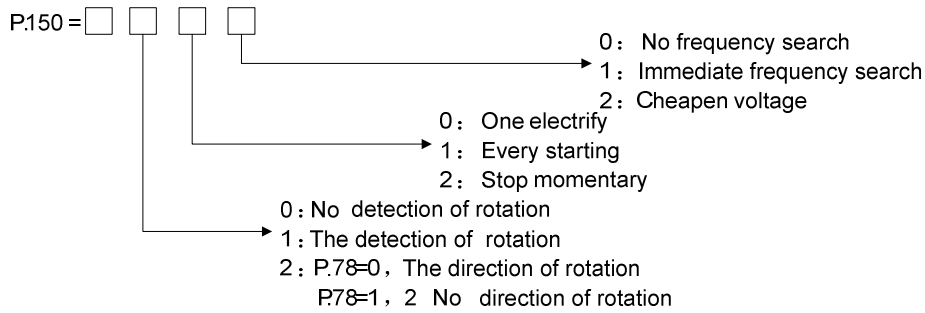

- Note: 1. When one needs an instant restart function, P.150 must be set.  
 2. When P.150 is nonzero, linear acceleration / deceleration curve is the default.  
 3. The direction detection position of P.150 is only valid for direct frequency search.  
 4. This function is only valid under the V/F mode; i.e., it is effective when P.300=0.

## 5.26 Input Signal Filter Constant (P.60)

### P.60 “Input signal filter constant”

- When the running frequency is set by a voltage signal or a current signal, the voltage / current signal would be processed by an A/D converter. Due to the effect of device accuracy or noises, the external voltage signal or current signal may fluctuate, and cause a fluctuating operation frequency. This will make the output frequency unstable.
- The “Input signal filter constant setting P.60” is used to filter the fluctuation of the running frequency caused by the above factors. A larger P.60 set value can improve the filter performance yet delay the effect.

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 60        | 31              | 0~2047        | ---     |

## 5.27 Remote Setting Function (P.61)

### P.61 “Remote setting function

#### selection”


Related parameters

- P. 1 “Maximum frequency”
- P. 7 “Acceleration time”
- P. 8 “Deceleration time”
- P. 18 “High-speed maximum frequency”
- P. 44 “The second acceleration time”
- P. 45 “The second deceleration time”

- If the operation box is located away from the control box, one can use contact signals to perform variable-speed operation without using analog signals under the external mode, PU mode, combined mode 1 and combined mode 4.



| Parameter | Factory setting | Setting range | Remarks |                         |   |
|-----------|-----------------|---------------|---------|-------------------------|---|
|           |                 |               | Values  | Remote setting function | Frequency setup storage function                                  |
| 61        | 0               | 0~3           | 0       | No                      | ---   |
|           |                 |               | 1       | Yes                     | Yes   |
|           |                 |               | 2       |                         | No  |
|           |                 |               | 3       |                         | No(the remote setting frequency is cleared by STF/STR "turn off") |

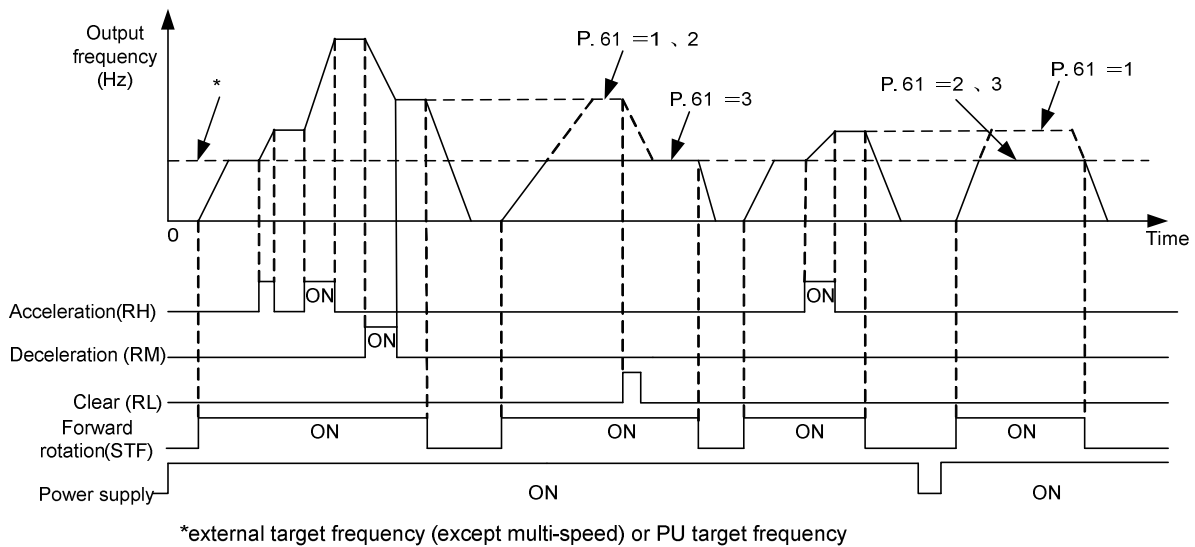


## <Setting>

### • Remote setting function

1. Whether the remote setting function is valid and whether the frequency setting storage function in the remote setting mode is used or not are determined by P.61.

Set P.61=1~3 (valid remote setting function), the function of terminal RM, RH and RL will be changed to acceleration (RH), deceleration (RM) and clear (RH). See the following figure:

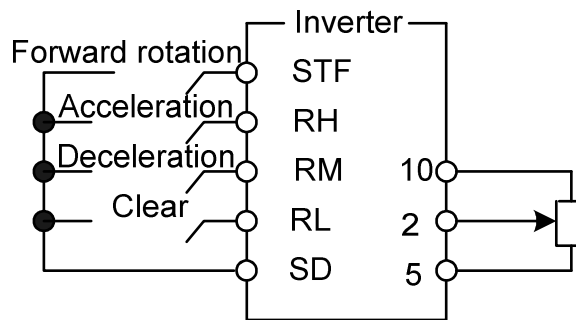

Wiring of the remote control setting

2. In the remote setting, the output frequency of the inverter is: (frequency set by RH/RM operation + external set frequency other than multi-speeds/PU set frequency)


- Frequency setting storage condition

The frequency setting storage function is to store the remote-set frequency (frequency set by RH/RM operation) in memory (EEPROM). Once the power supply is cut off and turned on again, the inverter can start running again at the remote-set frequency (P.61=1).

<Frequency setting storage condition>

- (1). It is the frequency when the start signal (STF/STR) is “off”.
- (2). When the signal RH (acceleration) and RM (deceleration) are both “off” and “on”, the remote-set frequency is stored every minute. (Current frequency set value and the last frequency set value are compared ever minute. If they are different, then the current frequency set value is written in the memory. If RL is on, write-in will unavailable).

Note: 1. The frequency can be varied by RH (acceleration) and RM (deceleration) between 0 and (the maximum frequency – frequency set by the main speed). The output frequency is limited by P.1.

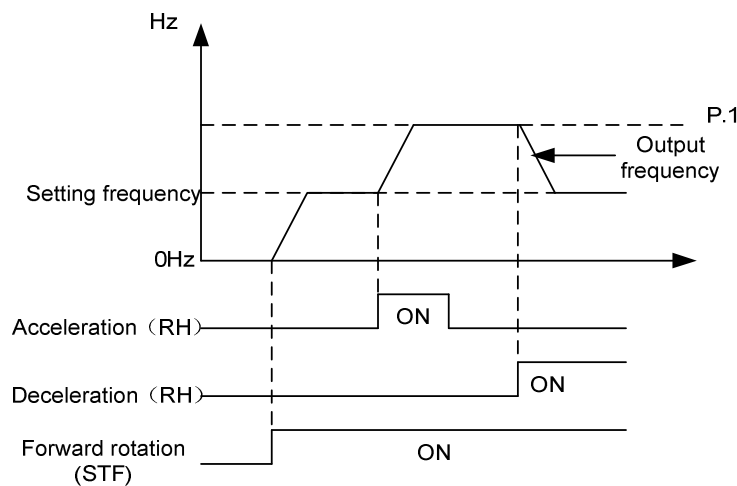

2. When the acceleration or deceleration signal is “on”, the acceleration / deceleration time will be determined by the set value of P.7 (the first acceleration time) and P.8 (the first deceleration time).
3. When RT signal is “on” and P.44≠99999 (the second acceleration time), P.45≠99999 (the second deceleration time), the acceleration / deceleration time will be determined by the set value of P.44 and P.45.
4. When the start signal (STF/STR) is “off” and RH (acceleration) / RM (deceleration) is “on”, the target frequency will also change.
5. When the start signal (STF/STR) becomes “off”, make the frequency setting storage function invalid (P.61=2, 3) if the frequency has to be changed continuously through RH/RM. If the frequency setting storage function is valid (P.61=1), the life of EEPROM will be shortened by frequent EEPROM data writing.
6. RH, RM and RL mentioned in this chapter are function names of “multi-function control terminal”. If the functions of the terminals are changed, other functions are likely to be affected. Please verify the functions of the terminals before changing the options and functions of the multi-function control panel (please refer to P.80~P.84, P.86, P.126~P.128). For wiring, please refer to Section 3.5.

## 5.28 Zero Current Detection (P.62 and P.63)

P.62 “Zero current detection level”

P.63 “Zero current detection time”

Related parameters


- P. 40 “Multi-function output terminal SU function selection”
- P. 85 “Function selection for multi-function relay”
- P. 129 “Multi-function terminal RUN function selection”
- P. 130 “Multi-function terminal FU/10X function selection”

| Parameter | Factory setting | Setting range  | Remarks          |
|-----------|-----------------|----------------|------------------|
| 62        | 5%              | 0~200%, 99999  | Function invalid |
| 63        | 0.5s            | 0.05~1s, 99999 | Function invalid |

### <Setting>

- Assume the inverter's rated is full-loaded, the current is 20A, P.62=5% and P.63=0.5s, then when the output current is smaller than  $20 \times 5\% = 1A$  and exceeding 0.5s, OMD will send out signals.

See the figure below:

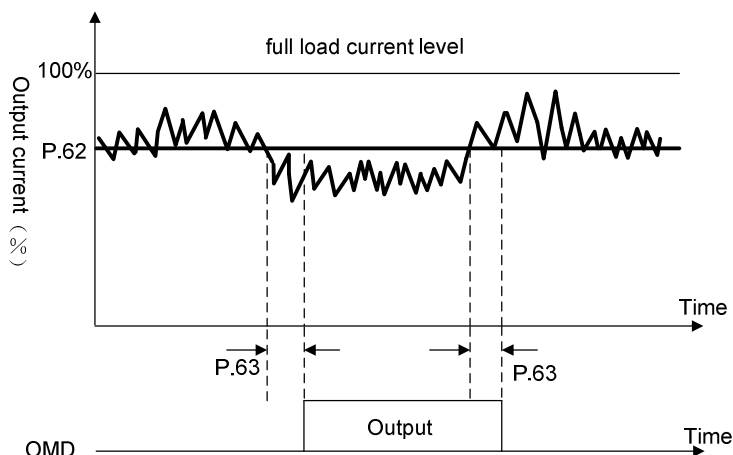

- If the set value of P.62 or P.63 is 99999, the zero current detection function is disabled.

Note: In this paragraph, OMD is the function name for “multi-function output terminal”. Please refer to P.40. For wiring, please refer to Section 3.5.

## 5.29 Retry Function (P.65, P.67, P.68, P.69)

P.65 “Retry selection”

P.67 “Number of retries at alarm occurrence”

P.68 “Retry waiting time”

P.69 “Retry accumulation time at alarm”

## Parameter Description

- When an alarm goes off, a “retry” will take place to restore the previous setting.
- Inverter's retry is performed conditionally. When the alarm goes off and the inverter has an automatic retry, the re-occurrence of alarm going off before a set time is called a “continuous alarm”. If continuous alarms happen for more than a set time, there is a significant malfunction. In this case, manual trouble shooting is necessary. The inverter at this point will perform no more the retry function. The number of Pre-defined occurrence is called “number of retries at abnormality (P.67)”.
- If none of the alarm belongs to "continuous alarms", the inverter will perform retry for unlimited times.
- The period from the moment of alarm to that of retry is defined as “retry waiting time”.

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 65        | 0               | 0~4           | ---     |
| 67        | 0               | 0~10          | ---     |
| 68        | 1s              | 0~360s        | ---     |

### <Setting>

- When P.65=0, retry is invalid. When alarm occurs, the voltage output is stopped, and all the inverter functions are disabled.
- When P.65=1, in case of “over-voltage between P and N”, the voltage output is stopped. After a period of waiting time (the set value of P.68), the inverter will perform the retry function.
- When P.65=2 and “over-current” occurs, voltage output is stopped. After a period of waiting time (the set value of P.68), the inverter will perform the retry.
- When P.65=3, in case of “over-voltage between P and N”, the voltage output is stopped. After a period of waiting time (the set value of P.68), the inverter will perform the retry.
- When P.65=4, all the alarms have the retry function. When the alarm goes off, the voltage output will be stopped. After a period of waiting time (the set value of P.68), the inverter will perform the retry.
- When P.67=0, retry is invalid.
- When P.67≠0, given continuous alarm occurs for times within the set value of P.67, the inverter will perform the retry function. However, once the set value of P.67 is exceeded, the inverter will not perform the retry function.
- For each time a retry happens, the value of P.59 will be increased by one automatically. Therefore, the number of P.69 read from the memory indicates the number of retries that have occurred.
- If P.69 is rewritten with 0, the number of retry executed is cleared.

Note: The inverter will perform retry only after the retry waiting time of P.68. Therefore when using this function, please be aware of the possible danger when operating the inverter.

## 5.30 Brake Selection (P.71)

### P.71 “Idling braking and linear braking selection”

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 71        | 1               | 0, 1          | ---     |

#### <Setting>



- P.71=0 is now idling braking. The inverter will terminate the output immediately after the stop sign is pressed, and the motor will be “racing”.
- P.71=1, it is now linear braking. The output of the inverter will follow the acceleration / deceleration curve after the stop sign is pressed.

## 5.31 Carrier Frequency (P.72)

### P.72 “Carrier frequency”


| Parameter | Model       | Factory setting | Setting range | Remarks |
|-----------|-------------|-----------------|---------------|---------|
| 72        | Frame A/B/C | 5kHz            | 0.7~14.5 kHz  | ---     |
|           | Frame D/E   | 4kHz            | 0.7~9 kHz     |         |
|           | Frame F/G   | 2kHz            | 0.7~9 kHz     |         |
|           | Frame H     | 2kHz            | 0.7~6 kHz     |         |

#### <Setting>

| Carrier frequency | Electromagnetic noise | Noise and leakage current | Thermal runaway | Current waveform  |
|-------------------|-----------------------|---------------------------|-----------------|---|
| 0.7KHz            | high ↑                | low ↑                     | low ↑           |  |
| 5KHz              | ↓                     | ↓                         | ↓               |   |
| 10KHz             | low ↓                 | high ↓                    | high ↓          |  |

- In case of a mechanical resonance occurring in a system within the inverter, P.72 is helpful for improving the performance by adjusting its value.

•The derating curve is as follows:

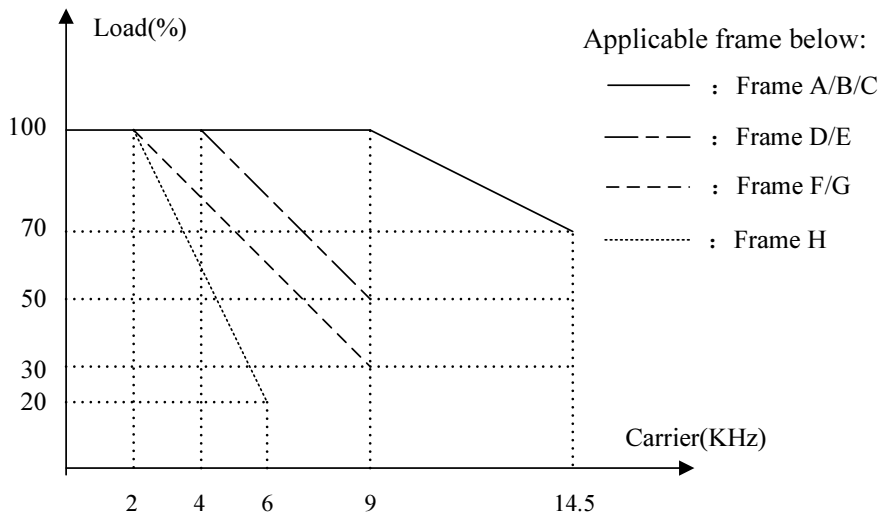

1. For the frame A/B/C: the carrier is 9K or below, the load is 100%, and then the load will decrease 5% when the carrier increases 1k each time. For example: the carrier is 14.5K, the load is 70%.
2. For the frame D/E: the carrier is 4K or below, the load is 100%, and then the load will decrease 10% when the carrier increases 1k each time. For example: the carrier is 9K, the load is 50%.
3. For the frame F/G: the carrier is 2K or below, the load is 100%, and then the load will decrease 10% when the carrier increases 1k each time. For example: the carrier is 9K, the load is 30%.
4. For the frame H: the carrier is 2K or below, the load is 100%, and then the load will decrease 20% when the carrier increases 1k each time. For example: the carrier is 6K, the load is 20%.

Note: 1. The optimum carrier frequency shall be 8 times greater than the target frequency.

## 5.32 FR/10X Frequency Output Terminal Selection (P.74)


P.74 “Fu/10X frequency output terminal selection (requiring slot cover for switching)”

- The function of external terminal FU/10X is the multi-function output terminal or 10 times the output function.

| Parameter | Factory setting | Setting range | Remarks |  |
|-----------|-----------------|---------------|---------|--|
| 74        | 0               | 0~10          | 0       | Output function of terminal is determined by <u>P.130</u> .                        |
|           |                 |               | 1~10    | Running frequency will Produce square wave impulse according to the value of P.74. |

### <Setting>

- When P.74=0, the function of external terminal FU/10X is the multi-function output terminal, and output function of terminal is determined by P.130 (please refer to P.130).
- When P.74=1~10, the function of external terminal FU/10X is 10 times the output function.
- When P.74=5 and temporary running frequency is at 20Hz, one can detect output impulse wave of terminal FU/10X and SE as follows:

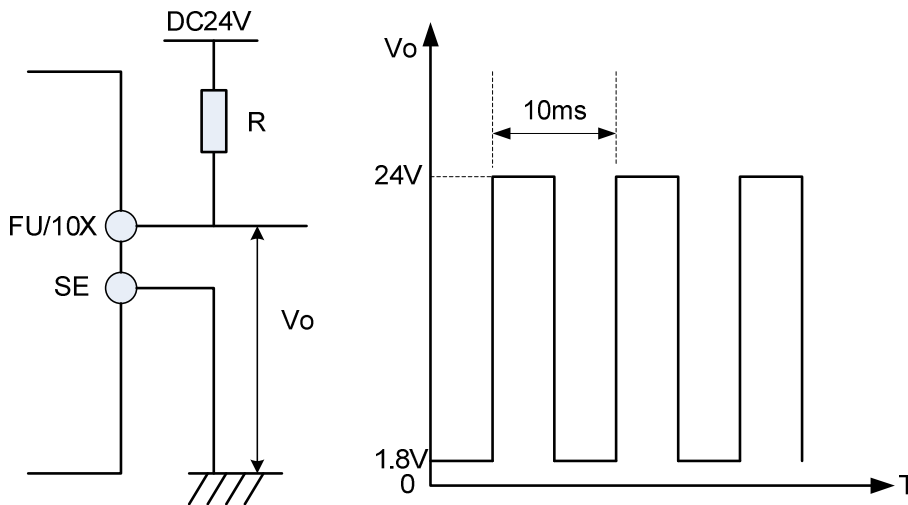




- Note:
1. Fu and 10X share the same hardware terminal. When switching the function (change the value of P.74), the pin slot on the control panel needs to be switched at the same time. The initial position of the slot cover is at FU.
  2. When setting P.74 to non-zero and selecting the 10-fold frequency function, AM and FM functions will be invalid.
  3. When P.74=1, the output will be 1-fold. The inverter can provide an output between 1 and 400 Hz with a 1% precision. The larger the rate of P.74, the larger the operation frequency, and the poorer the precision.
  4. Resistor R must be greater than 330Ω, or terminal FU/10X may be damaged.

## 5.33 Stop or Reset Function Selection (P.75)

### P.75 “Stop or reset function selection”



| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 75        | 1               | 0, 1          | ---     |

#### <Setting>

- When P.75=0, it is only suitable for the PU and H2 mode (combined mode 2). Press  to stop the operation.
- When P.75=1, it is only suitable for the chosen mode. Press  to stop the motor.
- When the alarm goes off, press  for 1 second to reset the inverter.

Note: 1. In normal or abnormal condition reset the inverter by parameter P.997.

2. There are two built-in programs simulating the thermally-accumulating relay in the inverter, namely, the "electronic thermal relay" and "IGBT module thermal relay". After resetting the inverter, the values of the two relays of "electronic thermal relay" and "IGBT module thermal relay" will be set to zero.

3. In any modes except the PU and the H2 mode and when P.75=1, the motor can be stopped by pressing . The inverter then displays E0 and all functions of the inverter are disabled. To restart in the external mode, follow the procedures below:  
Press  (The external STF/STR command will remove E0 to continue the operation). There is a start signal in the programmed operation mode. Once E0 is removed, the inverter will run at the section where it stopped after reset.)

4. To remove E0 in other modes, please turn the power off and on.

## 5.34 Parameters Write Protection (P.77)

### P.77 “Parameters write protection”

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 77        | 0               | 0~2,4         | ---     |

#### <Setting>

- If P.77=0 and the motor stops, all parameters can be rewritten except P.188. When the motor is running, only P.4~P.6, P.24~P.27, P.54~P.56, P.77, P.131~P.138, P.142~P.149, P.161, P.187, P.190~P.199, P.215, P.216, P.223~P.225, P.230, P.232, P.288 and P.290.
- If P.77=1 and when the motor stops, only P.77 and P.79 can be rewritten. When the motor is running, parameter-writing is forbidden except P.77 and P.79.
- If P.77=2 and when the motor stops, all parameters can be written except P.188. When the motor is running, some parameters, including P.22, P.72, P.78, P.79, P.155, P.160, and P.188 cannot be written.
- If P.77=4, there is setting password (P.295). And in the condition of lock, there are no



## Parameter Description

parameters can be read except the only-read parameters; with no setting password or unlock, the state is same with P.77=0.

### 5.35 Forward/Reverse Rotation Prevention Selection (P.78)

#### P.78 "Forward/reverse rotation prevention selection"

| Parameter | Factory setting | Setting range | Remarks |   |
|-----------|-----------------|---------------|---------|---|
| 78        | 0               | 0~2           | 0       | Forward rotation and reverse rotation are both permitted.   |
|           |                 |               | 1       | Reverse rotation is prohibited (Press the reverse command to decelerate and stop the motor).          |
|           |                 |               | 2       | Forward rotation is prohibited (Press the forward rotation command to decelerate and stop the motor). |

### 5.36 Operation Mode Selection (P.79)

#### P.79 "Operation mode selection"

| Parameter | Factory setting | Setting range | Remarks |  |
|-----------|-----------------|---------------|---------|--|
| 79        | 0               | 0~8           | 0       | "PU mode", "external mode" and "Jog mode" are interchangeable. |
|           |                 |               | 1       | "PU mode" and "JOG mode" are interchangeable.                  |
|           |                 |               | 2       | "External mode" only   |
|           |                 |               | 3       | "Communication mode" only                                      |
|           |                 |               | 4       | "Combined mode 1" only   |
|           |                 |               | 5       | "Combined mode 2" only   |
|           |                 |               | 6       | "Combined mode 3" only   |
|           |                 |               | 7       | "Combined mode 4" only   |
|           |                 |               | 8       | "Combined mode 5" only   |

Please refer to Section [4.1](#) for details.

## 5.37 Multi-function Terminal Function Selection

(P.80~P.84, P.86, P.126~P.128)

P.80~P.84, P.86, P.126~P.128 “Multi-function terminal function selection”

| Relevant Parameters | Corresponding terminal | Factory setting | Setting range  | Value | Function name | Function description   | Remarks  |
|---------------------|------------------------|-----------------|----------------|-------|---------------|--|--|
| 80                  | RL                     | 2               | 0~39,<br>44,45 | 0     | STF           | In “external mode”, “combined mode 1”, or “combined mode 3”, and when STF is on, the inverter runs forward.                                | In programmed operation mode, it is used as the start signal terminal. |
|                     |                        |                 |                | 1     | STR           | In “external mode”, “combined mode 1”, or “combined mode 3”, and when STF is on, the inverter runs forward.                                | In programmed operation mode, it is used as the pause signal terminal. |
|                     |                        |                 |                | 2     | RL            | Multi-speed  | Please refer to <u>P.4~P.6</u> for multi-speed instruction.            |
|                     |                        |                 |                | 3     | RM            | Multi-speed  |  |
| 81                  | RM                     | 3               | 0~39,<br>44,45 | 4     | RH            | Multi-speed  | Refer to <u>P.39</u>   |
|                     |                        |                 |                | 5     | AU            | In “external mode”, “combined mode 2” or “combined mode 4”, the inverter target frequency is set by the signal input across terminal 4 -5. |  |

# Parameter Description

| Relevant Parameters | Corresponding terminal | Factory setting | Setting range  | Value | Function name         | Function description   | Remarks  |
|---------------------|------------------------|-----------------|----------------|-------|-----------------------|--|--|
| 81                  | RM                     | 3               | 0~39,<br>44,45 | 6     | OH                    | (Note 3)   |  |
|                     |                        |                 |                | 7     | MRS                   | When MRS is "turned on", the output of the inverter will be terminated immediately.  |  |
|                     |                        |                 |                | 8     | RT                    | When RT is "on", the characteristics are the same as the second function.  | Refer to <u>P.44</u>   |
| 82                  | RH                     | 4               | 0~39,<br>44,45 | 9     | EXJ<br>(External JOG) | In "external mode" and when EXJ is "on", the target frequency is set by <u>P.15</u> , and the acceleration / deceleration time is set by <u>P.16</u> . |  |
| 83                  | STF                    | 0               | 0~39,<br>44,45 | 10    | STF<br>+EXJ           | Multiplexed function   | The multiplexed function of the external terminal is the complex of several basic functions. |
|                     |                        |                 |                | 11    | STR<br>+EXJ           |  |  |
|                     |                        |                 |                | 12    | STF+RT                |  |  |
|                     |                        |                 |                | 13    | STR<br>+RT            |  |  |
|                     |                        |                 |                | 14    | STF+RL                |  |  |
|                     |                        |                 |                | 15    | STR<br>+RL            |  |  |

# Parameter Description

Parameters

| Relevant Parameters | Corresponding terminal | Factory setting | Setting range | Value | Function name | Function description   | Remarks  |
|---------------------|------------------------|-----------------|---------------|-------|---------------|--|--|
| 84                  | STR                    | 1               | 0~39, 44,45   | 16    | STF+RM        | Multiplexed function   | The multiplexed function of the external terminal is the complex of several basic functions. |
|                     |                        |                 |               | 17    | STR+RM        |  |  |
|                     |                        |                 |               | 18    | STF+RH        |  |  |
|                     |                        |                 |               | 19    | STR+RH        |  |  |
|                     |                        |                 |               | 20    | STF+RL+RM     |  |  |
|                     |                        |                 |               | 21    | STR+RL+RM     |  |  |
| 86                  | RES                    | 30              | 0~39, 44,45   | 22    | STF+RT+RL     | Multiplexed function   |  |
|                     |                        |                 |               | 23    | STR+RT+RL     |  |  |
|                     |                        |                 |               | 24    | STF+RT+RM     |  |  |
|                     |                        |                 |               | 25    | STR+RT+RM     |  |  |
|                     |                        |                 |               | 26    | STF+RT+RL+RM  |  |  |
|                     |                        |                 |               | 27    | STR+RT+RL+RM  |  |  |
|                     |                        |                 |               | 28    | RUN           | In "external mode" and when Run is "on", motor will forward  |  |
| 126                 | AU                     | 5               | 0~39, 44,45   | 29    | STF/STR       | In "external mode", it is used with RUN. Inverter reverse when STF/STR is "on", but forward when STF/STR is "off". | Forward /reverse rotation control signal   |

# Parameter Description

| Relevant Parameters | Corresponding terminal | Factory setting | Setting range  | Value | Function name | Function description   | Remarks |
|---------------------|------------------------|-----------------|----------------|-------|---------------|--|---------|
| 126                 | AU                     | 5               | 0~39,<br>44,45 | 30    | RES           | External reset function  |         |
|                     |                        |                 |                | 31    | STOP          | In "external mode", it is as a three-wire mode with the RUN signal or the STF-STR terminal (Note 4). |         |
|                     |                        |                 |                | 32    | REX           | Multi-speed set (16 levels)  |         |
| 127                 | RT                     | 8               | 0~39,<br>44,45 | 33    | PO            | In "external mode" and when PO is "on", programmed operation mode is chosen (Note 5).                |         |
|                     |                        |                 |                | 34    | RES_E         | When alarms occur, external reset become valid only when the alarm goes off.                         |         |

# Parameter Description

| Relevant Parameters | Corresponding terminal | Factory setting | Setting range | Values | Function name | Function description   | Remarks |
|---------------------|------------------------|-----------------|---------------|--------|---------------|--|---------|
| 127                 | RT                     | 8               | 0~39, 44,45   | 35     | MPO           | In "external mode" and when MPO is "on", the manually operation cycle mode is chosen.  |         |
|                     |                        |                 |               | 36     | TRI           | When TRI is on, triangle wave function is chosen.  |         |
| 128                 | MRS                    | 7               | 0~39, 44,45   | 37     | GP_BP         | Automatic switchover frequency between inverter and commercial power-supply operation.   |         |
|                     |                        |                 |               | 38     | CS            | Manual switch to commercial power supply   |         |
|                     |                        |                 |               | 39     | STF/STR +STOP | The motor has a reverse rotation when the RUN signal is integrated into the external mode. Stop the motor and then run the motor for forward rotation. |         |
|                     |                        |                 |               | 40~43  | reserve       |  |         |


# Parameter Description

| Relevant Parameters | Corresponding terminal | Factory setting | Setting range | Values | Function name | Function description                      | Remarks   |
|---------------------|------------------------|-----------------|---------------|--------|---------------|---|---|
| 128                 | MRS                    | 7               | 0~39, 44,45   | 44     | PID_OFF       | The external terminal stopping PID enable | The signal is sent, PID calculation stops at once   |
|                     |                        |                 |               | 45     | SEC_FRE       | The second set frequency source enable    | The signal is sent, According to the parameters of p. 97 set value to choose frequency source |

Note: 1. The default value are P.80=2(RL), P.81=3(RM), P.82=4(RH), P.83=0(STF), P.84=1(STR), P.86=30(RES), P.126=5(AU), P.127=8(RT) and P.128=7(MRS).

2. If the setting of P.80~P.84, P.86 and P.126~P.128 are changed, the functions of the terminals are modified too. For example, when P.80 is equal 2, the RL terminal is used for RL. When P.80 is changed to 8, than the RL terminal function will be changed to RT, i.e., the second function selection terminal. Take another example, if P.83 is equal to 0, the STF terminal will be STF forward rotation function. When P.83 is changed to 6, then STF terminal function will be changed OH, i.e., the external thermal relay terminal.


3. Wiring for the external thermal relay (OH): for the conventional motor wiring, the external thermal relay is often placed at the front of the motor to prevent the motor from overheating. The wiring configuration is shown on the right. When the external thermal relay is separated, the alarm of the inverter will be tripped off and "OHT" will be displayed on the screen.

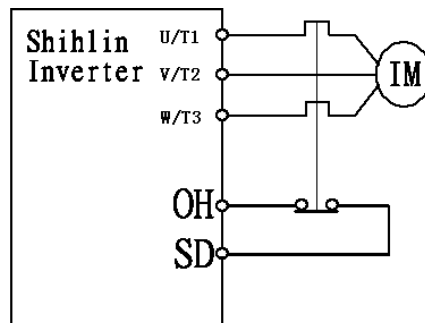

4. The operation of the inverter can be controlled by four means ("1" for terminal close, "0" for terminal open, and X = 0, 1, 2, 3, 4, 5, 6).


(1) Two-wire control mode 1:

| K0 | K1 | Operating Instructions |
|----|----|------------------------|
| 0  | 0  | Stop                   |
| 1  | 0  | Run Forward            |
| 0  | 1  | Run Reverse            |
| 1  | 1  | Stop                   |

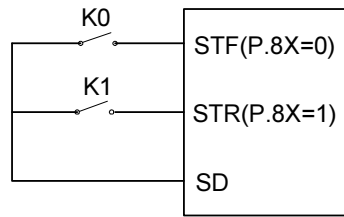


(2). Two-wire control mode 2:


| K0 | K1 | Operating Instructions |
|----|----|------------------------|
| 0  | 0  | Stop                   |
| 0  | 1  | Stop                   |
| 1  | 0  | Run Forward            |
| 1  | 1  | Run Reverse            |

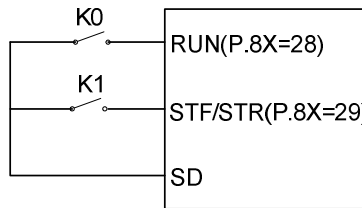

(3). Three-wire control mode 1 (with self-maintenance function): K0 is for the STOP function that is normally close. When it is open, the inverter will stop. K1 and K2 is the forward and reverse signals that are normally open. They indicate that pulse signal is active, i.e., jog is valid.

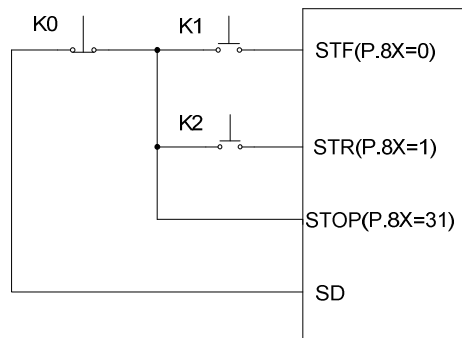

(4). Three-wire control mode 2 (with self-maintenance function): K1 is for the STOP function that is normally close. When it is open, the inverter will stop. K2 is the RUN signal that is normally open. It indicates that pulse signal is active, i.e., jog is valid. For the direction changing signal (STF/STR), the parameter corresponds to the external terminals is 39. When changing the direction, stop the inverter first, RUN the inverter before activating it.

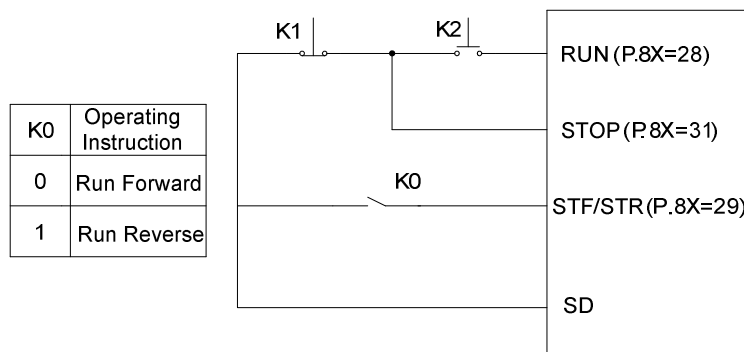

(5). In "external mode" and when PO is "on", select the programmed operation mode. At this stage, the STF terminal is the source of the start signal. When STF is "on", the inverter



begins to run in the programmed operation mode at the first section. When STF is "off", the invert stops running, and STR becomes the pause signal source. When STR is "on", the operation will be suspended. When STR is "off", the operation will be continued (continues from the suspended section). For details, please refer to P.100~P.108, P.111~P.118, P.121~P.123, P.131~P.138.

(6). In the external mode, the manual operation cycle mode is selected when MPO is "on". For details on parameter and operation, please refer to P.100~P.108, P.111~P.118, P.121~P.123, P.131~P.138

## 5.38 Multi-Function Control-Terminal Input Positive/Negative Logic

### (P.87)

#### P.87 "Multi-Function Control-Terminal Input Positive/Negative Logic"

- The function is bits-setting, if the bits shows 1, it means that the act of multi-function control terminal is negative logic; otherwise, it means that the act is positive logic.

| Parameters | Factory Setting | Setting Range | Remarks |
|------------|-----------------|---------------|---------|
| 87         | 0               | 0~511         | ---     |

The definition of each P.87 bits are as follows :

|     |       |       |       |       |       |       |       |       |       |
|-----|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| bit | $2^8$ | $2^7$ | $2^6$ | $2^5$ | $2^4$ | $2^3$ | $2^2$ | $2^1$ | $2^0$ |
|     | MRS   | RT    | AU    | RES   | RH    | RM    | RL    | STR   | STF   |

For example : A three-wire control type needs the function of STOP to be kept open(negative logic). So if set P.80=31, take M0 terminal as three-wire control STOP function, and P.83=0, P.84=1, and take STF and STR terminals as default positive/negative logic function, the parameter of P.87 should be set as follows:

|     |       |       |       |       |       |       |       |       |       |
|-----|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| bit | $2^8$ | $2^7$ | $2^6$ | $2^5$ | $2^4$ | $2^3$ | $2^2$ | $2^1$ | $2^0$ |
|     | 0     | 0     | 0     | 0     | 0     | 0     | 1     | 0     | 0     |

$$\text{So } P.87 = 0 \times 25 + 0 \times 24 + 0 \times 23 + 1 \times 22 + 0 \times 21 + 0 \times 20 = 4$$

Note: 1. When "STF" and "SFR" terminals are set as negative logic, but signal is not connected with SD, with power on, inverter will input and drive motor operate. So it is dangerous, you must pay attention to it.

## 5.39 Multi-Function Output Terminal Positive/Negative Logic(P.88)

P.88 “Multi-function output terminal positive/negative logic(P.88) ”

- The function is bits-setting, if the bit is 1, it means that the act of multi-function output terminal is negative logic; otherwise, it means that the act is positive logic.

| Parameters | Factory Setting | Setting Range | Remarks |
|------------|-----------------|---------------|---------|
| 88         | 0               | 0~15          | ---     |

The definition of each P.88 bits are as follows :

| bit | 2 <sup>3</sup> | 2 <sup>2</sup> | 2 <sup>1</sup> | 2 <sup>0</sup> |
|-----|----------------|----------------|----------------|----------------|
|     | FU             | RUN            | ABC            | SU             |

For example : P.85=0(inverter is running and detecting), if set positive logic output bit as 0, when inverter runs, multi-relay is on. when inverter stops, multi-relay is off ; otherwise, if set negative logic bit as 1, when inverter runs, multi-relay is off,and when the inverter stops, multi-relay is on.

## 5.40 Slip Compensation Coefficient (P.89)

P.89 “Slip compensation coefficient”

- Setting up this parameter appropriately enables the rotation speed of the motor under rated current to be closer to the set rotation speed.
- This function is only valid under the V/F mode; i.e., It is effective when P.300 = 0.

| Parameter | Factory setting | Setting range | Remarks |  |
|-----------|-----------------|---------------|---------|--|
| 89        | 0               | 0~10          | 0       | Slip compensation is forbidden.                                      |
|           |                 |               | 10      | The compensation value is 3% of the target frequency when P.89 = 10. |

## 5.41 Inverter Model (P.90)

P.90 “Inverter Model”

- P.90 is used for showing the type and capacity of inverter, and the parameter is read-only.

P.90 =

Applicable motor capacity: please refer to the following table

Input voltage: 1: 220V 1-PHASE  
2: 220V 3-PHASE  
3: 440V 3-PHASE

The applicable motor capacity is as following table:


| Value (value of the two low-order bits of P.90) | Capacity (kw) | Value (value of the two low-order bits of P.90) | Capacity (kw) |
|---|---------------|---|---------------|
| 7   | 5.5K          | 19  | 110K/90K-G    |
| 8   | 7.5K/5.5K-G   | 20  | 132K/110K-G   |
| 9   | 11K/7.5K-G    | 21  | 160K/132K-G   |
| 10  | 15K/11K-G     | 22  | 185K/160K-G   |
| 11  | 18.5K/15K-G   | 23  | 220K/185K-G   |
| 12  | 22K/18.5K-G   | 24  | 250K/220K-G   |
| 13  | 30K/22K-G     | 25  | 280K/250K-G   |
| 14  | 37K/30K-G     | 26  | 310K/280K-G   |
| 15  | 45K/37K-G     | 27  | 355K/310K-G   |
| 16  | 55K/45K-G     |   |               |
| 17  | 75K/55K-G     |   |               |
| 18  | 90K/75K-G     |   |               |

## 5.42 Frequency Jump (P.91~P.96)

### P.91~P.96 “Frequency jump”

- To avoid system’s mechanical resonance frequency when running the motor, the inverter provides three sets of jump frequencies, namely, P.91 (the first set), P.92 (the second set), and P.95 and P.96 (the third set).

| Parameter | Factory setting | Setting range  | Remarks        |
|-----------|-----------------|----------------|----------------|
| 91~96     | 99999           | 0~400Hz, 99999 | 99999: invalid |

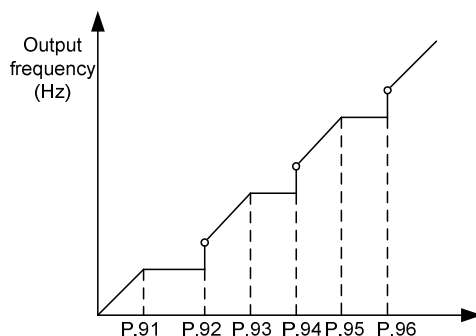

### <Setting>

- For example: assuming P.91=45 and P.92=50;

# Parameter Description

If the target frequency  $\leq 45\text{Hz}$ , then the steady output frequency=the target frequency.  
 If  $45\text{Hz} \leq \text{target frequency} < 50\text{Hz}$ , then the steady output frequency=45Hz.  
 If the target frequency  $\geq 50\text{Hz}$ , then the steady output frequency=the target frequency.

Note: 1. During the acceleration / deceleration period, the output frequency of the inverter will still pass through the jump frequency.  
 2. When P.91=99999 or P.92=99999, the first set of frequency jump is invalid.  
 When P.93=99999 or P.94=99999, the second set of frequency jump is invalid.  
 When P.95=99999 or P.96=99999, the third set of frequency jump is invalid.

## 5.43 The Second Frequency Source (P.97)

### P.97 “The second frequency source”

●When multi-function control terminal selects the second frequency source setting enable which is valid, the frequency source is decided according to the P.97 setting value. And in this condition, it is impossible to change the operation mode.

| Parameter | Factory Setting | Setting Range | Remarks |  |
|-----------|-----------------|---------------|---------|--|
| 97        | 0               | 0~2           | 0       | Frequency is given by operation panel PU |
|           |                 |               | 1       | Frequency is given by communication      |
|           |                 |               | 2       | Frequency is given by external terminal  |

Note: About multi-function control terminals function-selection and description, please refer to P.80 ~ P.84, P.86  
 About its corresponding wire arrangement, please refer to section 3.5.6

## 5.44 Programmed Operation Mode (P.100~P.108, P.111~P.118,

### P.121~P.123, P.131~P.138)

P.100 “Minute/second selection”

P.101~P.108 “Runtime of each section”

P.111~P.118

“Acceleration/deceleration time of each section”

P.121 “Run direction in each section”

P.122 “Cycle selection”

P.123 “Acceleration/deceleration time setting selection”

P.131~P.138 “Frequency of each section”

Related parameters


- P.7 “Acceleration time”
- P.8 “Deceleration time”
- P.21 “Acceleration/deceleration time increments”
- P.80~P.84, P.86, P.126~P.128
- “Multi-function terminals selection”

| Parameter | Factory setting | Setting range | Remarks   |  |
|-----------|-----------------|---------------|---|--|
| 100       | 1               | 0, 1          | 0   | The minimum increment of run time is 1 minute. |
|           |                 |               | 1   | The minimum increment of run time is 1 second. |
| 101~108   | 0s              | 0.1~3600s     | ---   |  |
| 111~118   | 0s              | 0~600s        | P.21=0  |  |
|           |                 | 0~6000s       | P.21=1  |  |
| 121       | 0               | 0~225         | ---   |  |
| 122       | 0               | 0~8           | 0: Cycle function invalid;<br>1~8: Run circularly |  |
| 123       | 0               | 0, 1          | ---   |  |
| 131~138   | 0 Hz            | 1~400Hz       | ---   |  |

## <Setting>

### 1. Programmed operation mode

- The calculation of runtime and acceleration/deceleration time in each section is presented in the figure below:

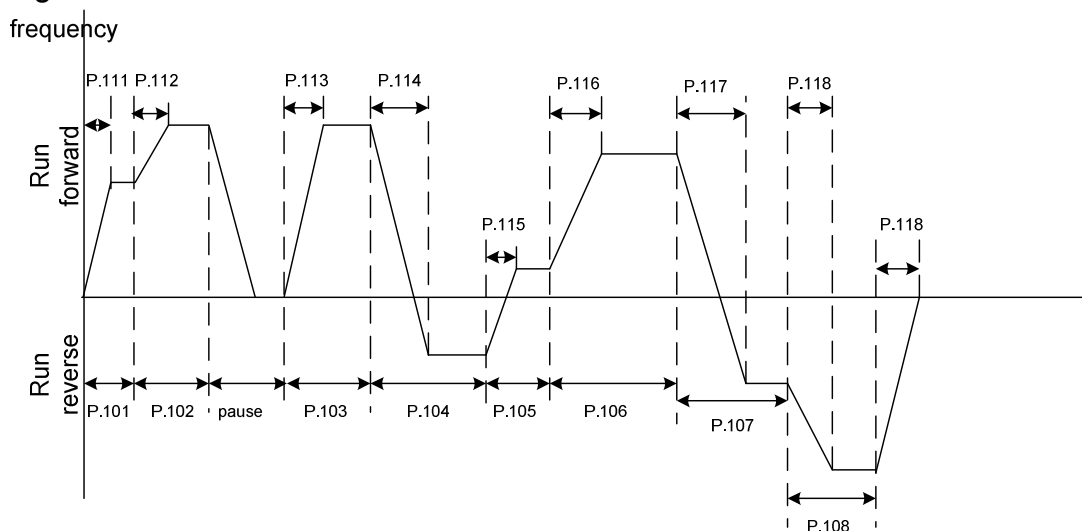

- The run direction is set in binary form (8-bit), and then translated to decimal form and stored in P.121. "1" means run forward, and "0" means run reversely. The highest bit is the run direction of section 8, while the lowest bit is the direction of the section 1.


For example: Suppose that section 1 is run forward, section 2 is run reverse, section 3 is run reverse, section 4 is run forward, section 5 is run reverse, section 6 is run forward, section 7 is run forward, section 8 is run reverse, then the value in binary form is 01101001.

$$P.121 = 0 \times 2^7 + 1 \times 2^6 + 1 \times 2^5 + 0 \times 2^4 + 1 \times 2^3 + 0 \times 2^2 + 0 \times 2^1 + 1 \times 2^0 = 105$$

- When P.122=0, it will not run in circular motion.
- When P.122 is 1~8, it is the initial sectional speed at the beginning of the cycle.  
For example: When P.122=3, the inverter will run circularly from the third section to the eighth section after it finishes its running from the first section to the eighth section.


- When P.123 = 0, the acceleration time is determined by P.7, and the deceleration time is determined by P.8.
- When P.123 = 1, the acceleration time and deceleration time are both determined by P.111~P.118.

## 2. Manual operation cycle mode

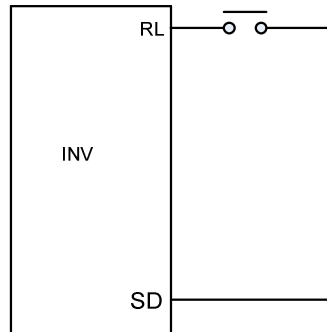

The wiring diagram for setting up the manual operation cycle

- Insert an impulse type switch between RL and SD.
- After turning on the power, set P.80=35 according to terminals wiring. Set corresponding parameter P.80 to 35. The inverter is on standby at this point.
- The mode of operation is shown in the figure below:

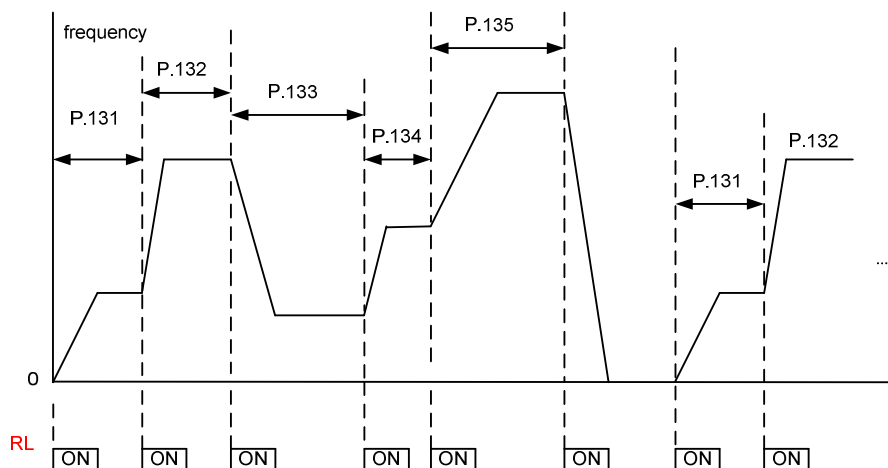

- Note:
1. The inverter can run eight levels of speed in the procedure, and the frequency is determined by P.131~P.138.
  2. If there is any section set to zero, the inverter will be on standby in this section. In other word, P.131 has to be nonzero when this mode is selected. Like the figure above, regardless of the value of P.137 and P.138, the inverter will stop when the switch is pressed for the sixth time.
  3. The rotation of the manual operation cycle mode is unilateralism. It has nothing to do with P.121 or the signals of STF and STR.

## 5.45 Operation Panel Monitoring Selection (P.110)

### P.110 “Operation panel monitoring selection”

| Parameter | Factory setting | Setting range | Remarks |  |
|-----------|-----------------|---------------|---------|--|
| 110       | 1               | 0, 1, 2       | 0       | When the inverter starts, the operation panel enters the monitoring mode automatically, and the screen displays the output frequency.  |
|           |                 |               | 1       | When the inverter starts, the screen of the operation panel displays the target frequency.   |
|           |                 |               | 2       | When the inverter starts, the operation panel enters the monitoring mode automatically, and the screen displays the current pressure and feedback pressure of the constant pressure system (note). |

Note: When P.110 = 2, the screen display shows two sections. A decimal point is used to separate the boundaries. What is on the left is the target pressure of the constant pressure system and what is on the right is the feedback pressure of the constant pressure system. As is shown in this figure,



, 20 denotes that the target pressure of the constant pressure system is 2.0kg/cm<sup>2</sup>; 30 denotes that the feedback pressure of the constant pressure system is 3.0kg/cm<sup>2</sup>.


## 5.46 The Selection of Forward/Reverse Rotation Dead Time (P.119)

### P.119 “The dead time of forward/reverse”

- When the inverter is running and receive the reverse rotation command, the output frequency will decrease to 0 in the process of switching from the current rotation direction to the opposite rotation direction. The dead time of forward/reverse rotation is the waiting or holding time after the output frequency decreases to 0.

| Parameter | Factory setting | Setting range | Remarks |   |
|-----------|-----------------|---------------|---------|---|
| 119       | 0               | 0~3000.0s     | 0       | Without the function  |
|           |                 |               | 1~3000  | The waiting or holding time after the output frequency decreases to 0 when the forward/reverse rotation is switching. |

The diagram is as follows:

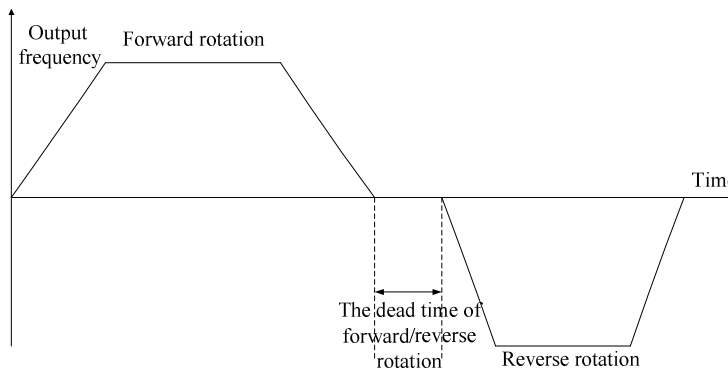

## 5.47 Zero-Speed Function (P.151~P.152)

P.151 “Zero-speed control function selection”

P.152 “Voltage instruction at zero-speed control”

- Make sure that P.13 (Start frequency) is set to zero when using this function.

| Parameter | Factory setting     | Setting range | Remarks  |                                   |
|-----------|---------------------|---------------|----------|-----------------------------------|
| 151       | 0                   | 0, 1          | 0        | There is no output at zero-speed. |
|           |                     |               | 1        | Control by DC (Note 1 and 3)      |
| 152       | 4% (7.5kW or below) | 0~30%         | (Note 2) |                                   |
|           | 2% (11kW~55kW)      |               |          |                                   |
|           | 1% (75kW or above)  |               |          |                                   |

Note: 1. The output mode is selected by the value of P.151. When P.151 is 0, then there is no output. When P.151 is 1, then the voltage of output DC voltage of P.152 is the keep torque.  
 2. Suppose that P.152 = 6%, then the output voltage of zero speed is 6% of base frequency voltage P.19.  
 3. This function is valid only at V/F, close-loop V/F control system, and close-loop vector control mode. For more details, please refer to the motor control mode parameter P.300 and the feedback control parameter P.350~P.354.

## 5.48 OverTorque Detection (P.155~P.156,P.260)

P.155 “Over torque detection level”

P.156 “Over torque detection time”

P.260 “Over torque detection selection”

Related parameters

- P. 40 “Multi-function output terminal SU function selection”
- P. 85 “Function selection for multi-function relay”
- P. 129 “Multi-function terminal RUN function selection”
- P. 130 “Multi-function terminal FU/10X function selection”





## 5.50 External Terminal Power Enable Function (P.158)

### P.158 “External terminal power enable”

| Parameter | Factory default value | Setting range |
|-----------|-----------------------|---------------|
| 158       | 0                     | 0~1           |

- If P.158=1, select power enables on the external terminals. In this situation, if the functions of the multi-function control terminals before turning on the power are STF, STR, RUN and MPO, and the corresponded external terminals are short circuit, and then the inverter will not run immediately after turning on the power. The inverter will run only after short circuit these terminals again. When P.158=0, make these terminal short circuit before turning on the power, and the inverter will run immediately after the power is turned on.

## 5.51 Energy-Saving Control Function (P.159)

### P.159 “Energy-saving control function”

| Parameter | Factory setting | Setting range | Remarks                    |
|-----------|-----------------|---------------|----------------------------|
| 159       | 0               | 0             | Normal running mode        |
|           |                 | 1             | Energy-saving running mode |

- Under the energy-saving running mode, the inverter will control the output voltage automatically in order to reduce the output power losses to the minimum when the inverter is run at a constant speed.

Note: 1. After selecting the energy-saving running mode, the deceleration time may be longer than the setting value. In addition, the properties of the regular torque load will produce abnormal voltage more easily. Please slightly prolong the deceleration time.

2. In the energy-saving running mode, only the V/F control mode is available. That is, only P.300=0 is valid.

3. For big load purposes or machines with frequent acceleration/deceleration, the energy-saving effect may be poor.

## 5.52 Multi-Function Display (P.161)

### P.161 “Multi-function display selection”

| Parameter | Factory setting  | Setting range         | Remarks |   |
|-----------|--|-----------------------|---------|---|
| 161       | 0  | 0~13,<br>18~21,<br>24 | 0       | The monitoring voltage file displays the current voltage.   |
|           |  |                       | 1       | The monitoring voltage file displays the current voltage between P and N terminals.   |
|           |  |                       | 2       | The monitoring voltage file displays the accumulation rate of temperature increase of the inverter.   |
|           |  |                       | 3       | The monitoring voltage file displays the current target pressure of the constant pressure system.   |
|           |  |                       | 4       | The monitoring voltage file displays the current feedback pressure of the constant pressure system.   |
|           |  |                       | 5       | The monitoring voltage file displays the current operation frequency.   |
|           |  |                       | 6       | The monitoring voltage file displays the current electronic thermal accumulation rate.  |
|           |  |                       | 7       | The monitoring voltage file displays the signal value (V) of 2-5 simulating input terminals.  |
|           |  |                       | 8       | The monitoring voltage file displays the signal value (mA) of 4-5 simulating input terminals.   |
|           |  |                       | 9       | The monitoring voltage file displays the output power (kW).   |
|           |  |                       | 10      | The monitoring voltage file displays PG card's feedback rotation speed.   |
|           |  |                       | 11      | The monitoring voltage file displays forward and reverse rotation signal. Then 1 represents forward rotation, 2 represents reverse rotation, and 0 represents stopping state. |
|           |  |                       | 12      | The monitoring voltage file displays module temperature   |
|           |  |                       | 13      | The monitoring voltage file displays the electronic thermal accumulation rate of motor  |
| 14-17     | Reserved   |                       |         |   |
| 18        | The monitoring voltage file displays output torque of inverter (%)   |                       |         |   |
| 19        | External terminal input state(about the sort of terminal, please refer to the table of the special monitor code in the communication part) |                       |         |   |

| Parameter | Factory setting | Setting range         | Remarks |   |
|-----------|-----------------|-----------------------|---------|---|
| 161       | 0               | 0~13,<br>18~21,<br>24 | 20      | External terminal output state(about the sort of terminal, please refer to the table of the special monitor code in the communication part) |
|           |                 |                       | 21      | Show the current effective carrier  |
|           |                 |                       | 22-23   | Reserved  |
|           |                 |                       | 24      | Show the current target frequency   |

Note: The multi-function display selection is realized in the monitoring voltage mode. Please refer to Page39 for monitoring mode selection (4.1.3 Operation flow charts for monitoring mode with DU01).

## 5.52 PID Control (P.170~P.183, P.223~P.225)

P.170 "PID function selection"

P.171 "PID feedback control method selection"

P.172 "PID proportion Gain"

P.172 "PID proportion Gain"

P.173 "PID Integration Gain"

P.174 "PID Differential Gain"

P.175 "Abnormal deviation level"

P.176 "Exception duration time"

P.177 "Exception handling mode "

P.178 "Sleep detects deviation"

P.179 "Sleep detects duration time"

P.180 "Revival level"

P.181 "Outage level"

P.182 "Integral upper limit frequency"

P.183 "Deceleration step length with stable pressure"

P.223 "Analog feedback bias pressure"

P.224 "Analog feedback gain pressure"

P.225 "Panel command"

- During the operation of PID control, the frequency displayed on the screen is the output frequency of the inverter.
- The output frequency during the operation is similar to output frequency during the normal operation. They are both limited within the upper limit P.182 and the lower limit P.2.
- For input signal filtering of terminal 2-5 and terminal 4-5, please refer to the instructions for P.60.
- The sketch map of PID function is shown as follows:

# Parameter Description

| Parameter | Factory setting | Setting range | Remarks   |  |
|-----------|-----------------|---------------|---|--|
| 170       | 0               | 0, 1, 2       | 0   | PID function non-selected  |
|           |                 |               | 1   | The target value is determined by <u>P.225</u> . The feedback value is determined by the voltage of terminal 2-5.  |
|           |                 |               | 2   | The target value is determined by P.225. The feedback value is determined by the voltage of terminal 4-5.  |
| 171       | 0               | 0, 1          | 0   | Negative feedback control<br>The calculation for the deviation is target value minors the feedback value.<br>When an increase in the output frequency will increase the feedback value, select this setup. |
|           |                 |               | 1   | Positive feedback control<br>The calculation for the deviation is feedback value minors the target value.<br>When an increase in the output frequency will decrease the feedback value, select this setup. |
| 172       | 20              | 1~100         | This gain determines the proportion controller's impact on feedback deviation. The greater the gain, the faster the impact. Yet a gain that is too big will cause vibration.  |  |
| 172       | 20              | 1~100         | This gain determines the proportion controller's impact on feedback deviation. The greater the gain, the faster the impact. Yet a gain that is too big will cause vibration.  |  |
| 173       | 1s              | 0~100s        | This parameter is use to set integral controller's integral time. When the integral gain is too big, the integral effect will be too weak to eliminate steady deviation. When the integral gain is too small, the system vibration frequency will increase, and therefore the system may be unstable. |  |
| 174       | 0 ms            | 0~1000ms      | This gain determines deviation controller's impact on the amount of change of the deviation. Appropriate deviation time can reduce the overshooting between the proportion controller and the integral controller. Yet when the deviation time is too large, system vibration may be induced.         |  |
| 175       | 0               | 0~100%        | ---   |  |
| 176       | 30s             | 0~600s        | ---   |  |

# Parameter Description

| Parameter | Factory setting | Setting range | Remarks   |   |
|-----------|-----------------|---------------|---|---|
| 177       | 0               | 0, 1, 2       | 0   | Free stop   |
|           |                 |               | 1   | Decelerate and stop   |
|           |                 |               | 2   | Continue to run when the alarm goes off   |
| 178       | 0               | 0~100%        | ---   |   |
| 179       | 1s              | 0~255s        | ---   |   |
| 180       | 90%             | 0~100%        | ---   |   |
| 181       | 40Hz            | 0~120Hz       | ---   |   |
| 182       | 50Hz            | 0~120Hz       | P.189=1   | When the deviation value accumulated with the integral time, an upper limit for deviation accumulation should be set. |
|           | 60Hz            |               | P.189=0   |   |
| 183       | 0.5Hz           | 0~10Hz        | When the feedback pressure satisfies the deviation value for stopping the machine and the set time (in seconds) for stopping the machine for detection is reached, the inverter will take the P.183 step to reduce the frequency. |   |
| 223       | 0%              | 100%          | Revising the feedback signal to unify the signal range of inverter's feedback terminal and actual feedback, so that the inverter display in accordance with the feedback meter.   |   |
| 224       | 100%            |               |   |   |
| 225       | 20%             | 0~100%        | The target value is set by P.225  |   |
|           |                 | 99999         | When P.170=1, the target value is set by the current or voltage of terminal 4-5.<br>When P.170=2, the target value is set by the voltage of terminal 2-5.   |   |

## <Setting>

- The revising instruction of the analog feedback bias pressure and gain pressure:
  - The following system default value can be used without revising again:

| The feedback of terminal 2-5 |                     | The feedback of terminal 4-5 |                     |
|------------------------------|---------------------|------------------------------|---------------------|
| Revising voltage             | Revising proportion | Revising current             | Revising proportion |
| 0.1V                         | P.223               | 4mA                          | P.223               |
| 5V                           | P.224               | 20mA                         | P.224               |

Note: The range of default setting is 0.1~5V. If there is a mismatch between the default setting range and the user's range, P.223 and P.224 can be set and P.170 must be set at last to unify the range.

Example: When the 0~7V feedback signal is given by terminal 2-5:

1). When P.171=0 (negative feedback control),  $P.223 = 0.1 / 7 * 100.0 = 1.4$   
 $P.224 = 5 / 7 * 100.0 = 71.4$

2). When P.171=1 (positive feedback control),  $P.223 = (7 - 0.1) / 7 * 100.0 = 98.6$   
 $P.224 = (7 - 5) / 7 * 100.0 = 28.6$

By setting P.223 and P.224 as the above calculated value, and then setting P.170 at 1, the revised range is 0~7V.

Example: When the 0~20mA feedback signal is given by terminal 4-5:

- 1). When P.171=0 (negative feedback control),  $P.223 = 4 / 20 * 100.0 = 20.0$   
 $P.224 = 20 / 20 * 100.0 = 100.0$
- 2). When P.171=1 (positive feedback control),  $P.223 = ( 20 - 4 ) / 20 * 100.0 = 80.0$   
 $P.224 = ( 20 - 20 ) / 20 * 100.0 = 0$

By setting P.223 and P.224 as the above calculated value, and then setting P.170 at 2, the revised range is 0~20mA.

2. When the feedback signal need to be revised by the user:

Please adjust the feedback signal to a certain value and then calculate the proportion of the value to the feedback range, then write the proportion value into P.223.

After that, adjust the feedback signal to a new value and then calculate the proportion of the value to the feedback range, then write the proportion value into P.224.

Example: When the user's feedback range is 0~8V:

When the feedback signal is adjusted to 1V,  $P.223 = ( 1 / 8 ) * 100.0 = 12.5$ ,

When the feedback signal is adjusted to 6V,  $P.224 = ( 6 / 8 ) * 100.0 = 75.0$

Note: The actual feedback signal must be connected and the value of P.170 must be set before revising like this.


• The instruction for the target pressure given by external analog terminal:

1. When the target value is set by terminal 2-5  
 When P.73 = 0, the given range is 0~5V corresponding to 0~100%;  
 When P.73 = 1, the given range is 0~10V corresponding to 0~100%.
2. When the target value is set by terminal 4-5  
 The given range is 4~20mA corresponding to 0~100%.

Example: Set P.170 = 1, P.171 = 0, P.225 = 9999.

It indicates that the PID target value is given by the current of terminal 4-5 (4~20mA).


If 8mA is given by the user, the corresponding given proportion is  $( 8 - 4 ) / ( 20 - 4 ) * 100.0 = 25.0$ .

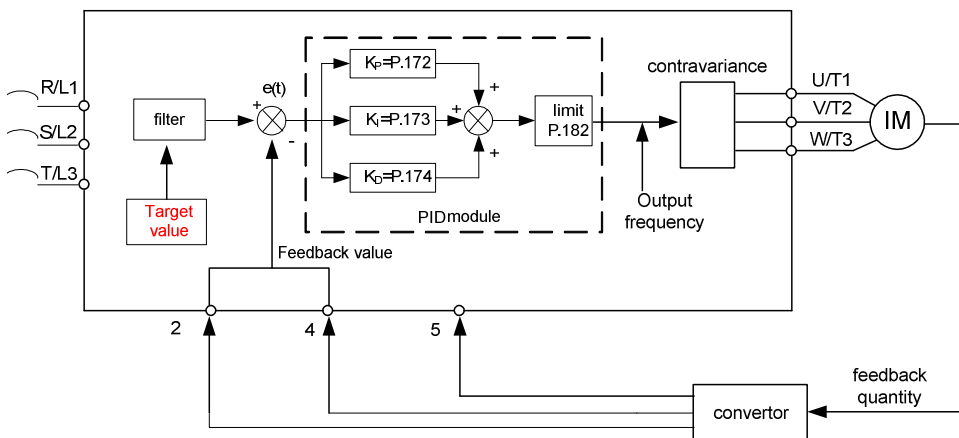

- When the output frequency reaches the set value of P.182, the feedback value will be less than the product of the target value and P.172. In addition, when the duration lasts more than the set value of P.176, PID will be considered as abnormal and handled according to


the set value of P.177.

For example, when P.175=60%, P.176=30s, P.177=0 and P.182=50Hz, the output frequency reaches 50Hz, and the feedback value is lower than 60% of the target feedback value for 30 seconds continuously, **PID** alarm will be display and the inverter will be stopped freely.

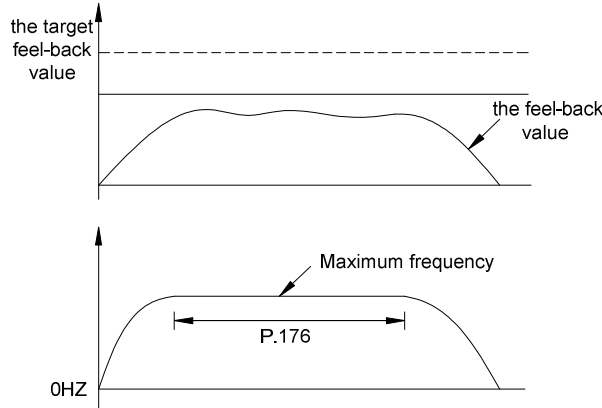

- If P.176 is set to 0, then the set values of P.179, P.180, P.181 and P.183 are invalid. If the set value of P.178 is nonzero, than PID's sleep function will be activated. When the absolute value of the deviation between the feedback value and the target feedback value is less than the sleep detected deviation value for the duration of P.179's sleep detection time, the inverter will steadily reduce the output frequency. Once the output frequency of the inverter is less than the machine stop level of P.181, the inverter will decelerate and stop. When the feedback value is lower than the wake-up level, the output frequency of the inverter will again be controlled by PID.

For example, if P.178=5%, P.179=1.0s, P.180=90%, P.181=40Hz, and P.183=0.5Hz, and when the feedback value is at a stable zone, i.e., larger than 95% of the target feedback value but less than 105% of the target feedback value, the inverter at the stable zone will reduce the output frequency by 0.5Hz/second. When the output frequency of the inverter is less than 40Hz, the inverter will directly decelerate and stop. When the feedback value lower than 90% of the target feedback value, the inverter will wake up and the output frequency will again be controlled by PID.

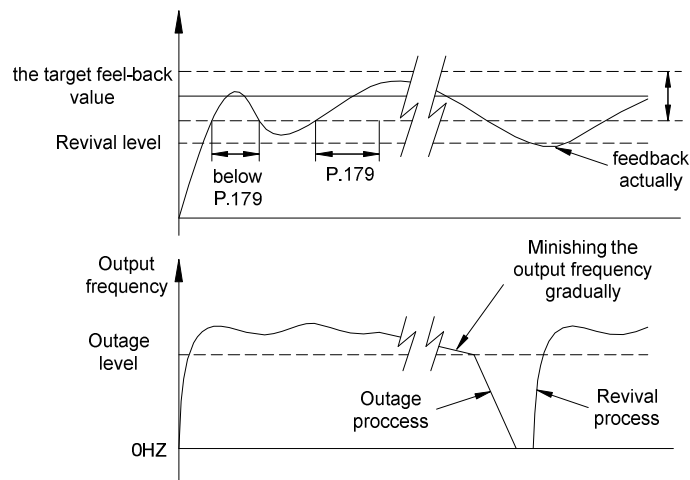




• PID gain easy setting:

(1) After changing target, response is slow

---Increase P-gain ( $K_P = P.172$ )

response is quick but unstable

---Decrease P-gain ( $K_P = P.172$ )

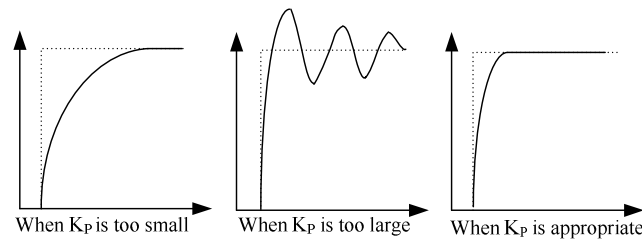


(2) Target and feedback

do not become equal

---Decrease Integration time ( $K_I = P.173$ )

become equal after unstable vibration

---Increase Integration time ( $K_I = P.173$ )

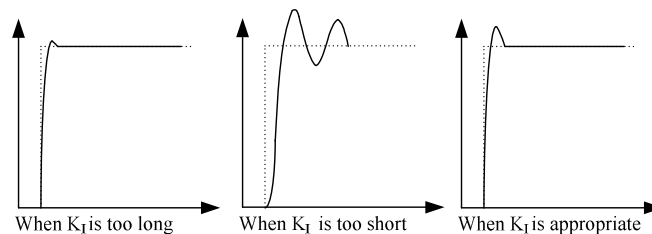

(3) Even after increasing  $K_P$ , response is still slow

---Increase D-gain ( $K_D = P.174$ )

It is still unstable

---Decrease D-gain ( $K_D = P.174$ )

Note: 1. When P.177=2, the panel has no alarm display but the multi-function output terminal has alarm detection. To turn off the alarm, reset P.997 or turn down the power.  
 2. Please refer to the parameter P.73 for the setting of PID target proportion range about external analog signal.  
 3. Make sure to revise the feedback signal again as the revising instruction 2 when the range of analog feedback signal selected by the user is less than the factory setting 0~5V or 4~20mA.

## 5.53 4-5 Terminal Disconnection Handling Function (P.184)

### P.184 "4-5 terminal disconnection handling"

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 184       | 0               | 0~3           | ---     |

#### <Setting>

- When P.184=0, the inverter will decelerate to 0Hz when disconnected. After reconnecting the inverter, the inverter will accelerate to the corresponding frequency.
- When P.184=1, the inverter will decelerate to 0Hz when disconnected. After reconnecting the inverter, the inverter will accelerate to the corresponding frequency. Meanwhile, the multi-function output terminal will set off the alarm. Reconnection will clear the alarm.

## Parameter Description

- When P.184=2, the panel will display the “AEr” alarm when disconnected. The inverter will stop immediately. Reset to clear the alarm.
- When P.184=3, the inverter will run continuously according to the frequency command before the disconnection. The multi-function output terminal will set off the alarm. Reconnect to clear the alarm.

Note: Please refer to [P.40](#). For wiring, please refer to Section [3.5](#).

### 5.54 SF-G Model Selection Function (P.186)

#### P.186 “SF-G model selection function”

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 186       | 0               | 0~1           | ---     |

#### <Setting>

- When P.186=0, execute [P.998](#) to return to the default value. Next execute the reset function of [P.997](#). Select the SF (the fans and water pump type) model.
- When P.186=1, execute [P.998](#) to return to the default value. Next execute the reset function of [P.997](#). Select the SF-G (constant torque type) model.

### 5.55 Firmware version (P.188)

#### P.188 “Firmware version”

- It is used to display that the current Firmware version of the inverter is readable only.

### 5.56 Factory Setting Function (P.189)

#### P.189 “Factory setting function”

| Parameter | Factory setting | Setting range | Remarks |  |
|-----------|-----------------|---------------|---------|--|
| 189       | 1               | 0, 1          | 0       | The default value of frequency-related parameter belongs to the 60Hz system. |
|           |                 |               | 1       | The default value of frequency-related parameter belongs to the 50Hz system. |

- According to different power frequency and the default motor frequency, the user can select frequency related parameters. The default value is either 50Hz or 60Hz. Description on relevant parameters are presented in the table below:

# Parameter Description

| Parameter     | Name  | Setting range | Minimum value |
|---------------|---|---------------|---------------|
| P. <u>3</u>   | Base frequency  | 0~400Hz       | 0.01Hz        |
| P. <u>20</u>  | Acceleration / deceleration reference frequency   | 1~400Hz       | 0.01Hz        |
| P. <u>38</u>  | The maximum operation frequency (the target frequency is set by the input signal of terminal 2-5) | 1~400Hz       | 0.01Hz        |
| P. <u>39</u>  | The maximum operation frequency (the target frequency is set by the input signal of terminal 4-5) | 1~400Hz       | 0.01Hz        |
| P. <u>55</u>  | Frequency display reference   | 0~400Hz       | 0.01Hz        |
| P. <u>66</u>  | Stall prevention operation reduction starting frequency   | 0~400Hz       | 0.01Hz        |
| P. <u>182</u> | Integral upper limit frequency  | 0~120Hz       | 0.01Hz        |
| P. <u>195</u> | Frequency corresponds to the maximum input voltage of terminal 2-5                                | 0~400Hz       | 0.01Hz        |
| P. <u>197</u> | 4-5 terminal's maximum input current corresponded frequency                                       | 0~400Hz       | 0.01Hz        |
| P. <u>305</u> | Motor rated frequency   | 0~400Hz       | 0.01Hz        |

Note: 1. Adjusting the default values from the table above would affect the acceleration/deceleration time, the output voltage, the voltage signal rated frequency, etc., and bring problems to the customers. In this case, the customers have to adjust the corresponding parameters, such as P.7, P.8, to more reasonable values.

2. If the customer would like to adjust the factory setting to 60Hz, please follow the following steps:  
 (1). Set P.189=0.  
 (2). Set P.998 to the factory default value (at this point, frequency-related parameters of the inverter will be reset to 60Hz. The factory default value of P.189 is 0).For details on P.998 procedures, please refer to P.998 in Chapter 5.

3. To resume the 50Hz system, the customer should set P.189 to 1 and then follow Step 2 in Note 2 (at this time, the factory setting of P.189 is 1).

## 5.57 2-5 Terminal Input Signal (P.192~P.195)

P.192 "2-5 terminal minimum input voltage"

P.193 "2-5 terminal maximum input voltage"

P.194 "Frequency corresponds to the minimum input voltage of terminal 2-5"

P.195 "Frequency corresponds to the maximum input voltage of terminal 2-5"

— Related parameters —


P. 73 "Voltage signal selection"  
 P.80~P.84, P.86  
 "Multi-function terminals selection"  
 P. 189 "Factory setting function"

| Parameter | Factory setting | Setting range   | Remarks |
|-----------|-----------------|-----------------|---------|
| 192       | 0               | 0~10            | ---     |
| 193       | 0               | 0~10            | ---     |
| 194       | 0 Hz            | 0~60Hz(Note 3)  | ---     |
| 195       | 50Hz            | 0~400Hz(Note 3) | P.189=1 |
|           | 60Hz            |                 | P.189=0 |

## <Setting>

### • Calibration procedures

1. Make sure that the voltage signal has been correctly connected to the inverter.
2. Assume that the preset criterion is that “when the voltage signal is A, the expected operation frequency will be 20Hz”. Then, adjust the voltage signal to A, and set P.194 to 20. At this point, the value of A will be written into P.192 automatically.
3. Assume that the preset criterion is that “when the voltage signal is B, the expected operation frequency will be 60Hz”. Then, adjust the voltage signal to B, and set P.195 to 60. At this point, the value of B will be written into P.193 automatically.

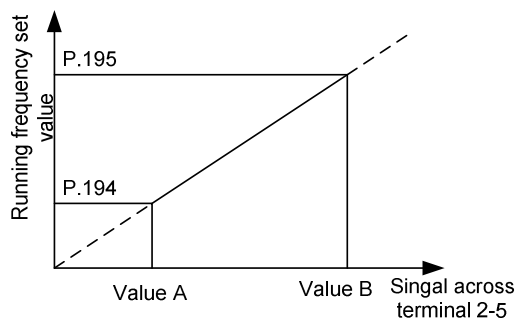

Note: 1. The equation of the curve above is:

$$\frac{\text{Running frequency}-\text{P.194}}{\text{Voltage value}-\text{Value A}} = \frac{\text{P.195}-\text{P.194}}{\text{Value B}-\text{Value A}}$$

2. If an actually stable signal input cannot be provided, the user can manually set the value of P.192 and P.193. The value of P.192 corresponds to the set frequency of P.194, while the value of P.193 corresponds to the set frequency of P.195. When manually setting up the values, first confirm the range of frequency parameters, P.194 and P.195. Then adjust the value of voltage parameters P.192 and P.193.
3. Rest any of the parameter from P.192 to P.195; the curve of P.38 will be invalid.

## 5.58 4-5 Terminal Input Signal (P.196~P.199)

P.196 “4-5 terminal minimum input current corresponded frequency”

P.197 “4-5 terminal maximum input current corresponded frequency”

P.198 “4-5 terminal minimum input current”

P.199 “4-5 terminal maximum input current”


—Related parameters—  
 P.80~P.84, P.86,P.126~P.128  
 “Multi-function terminals selection”  
 P.189 “Factory setting function”

| Parameter | Factory setting | Setting range   | Remarks |
|-----------|-----------------|-----------------|---------|
| 196       | 0 Hz            | 0~60Hz(Note 3)  | ---     |
| 197       | 50Hz            | 0~400Hz(Note 3) | P.189=1 |
|           | 60Hz            |                 | P.189=0 |
| 198       | 0               | 0~20            | ---     |
| 199       | 0               | 0~20            | ---     |

### <Setting>

• Calibration procedures

1. Make sure that the current signal has been correctly connected to the inverter.
2. Assume that the preset criterion is that “when the current signal is A, the expected operation frequency will be 20Hz”.Then, adjust the current signal to A, and set P.196 to 20. At this point, the value of A will be written into P.198 automatically.
3. Assume that the preset criterion is that “when the current signal is B, the expected operation frequency will be 60Hz”.Then, adjust the current signal to B, and set P.197 to 60. At this point, the value of B will be written into P.199 automatically.

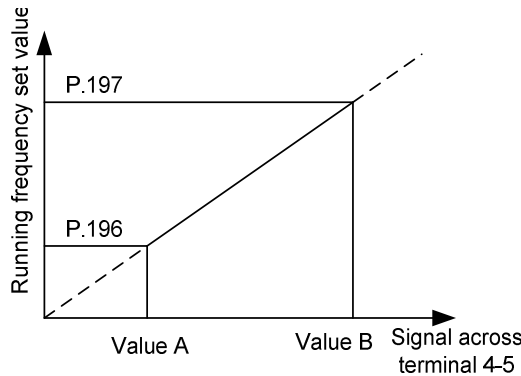

Note: 1. The equation of the curve above is:

$$\frac{\text{Running frequency}-\text{P.196}}{\text{Current value}-\text{Value A}} = \frac{\text{P.197}-\text{P.196}}{\text{Value B}-\text{Value A}}$$

2. If an actually stable signal input cannot be provided, the user can manually set the value of P.198 and P.199. The value of P.198 corresponds to the set frequency of P.196, while the value of P.199 corresponds to the set frequency of P.197. When manually setting up the values, first confirm the range of frequency parameters, P.196 and P.197. Then adjust the value of current parameters P.198, P.199.
3. Rest any of the parameter from P.196 to P.199; the curve of P.39 will be invalid.

## 5.59 Multi-machine Constant Pressure System Function (P.200, P.209,

### P.210, P.213~P.217)

P.200 “Constant pressure system function selection”

P.209 “Maximum frequency duration”

P.210 “Minimum frequency duration”

P.213 “Acceleration time for starting the commercial power supply frequency”

P.214 “Deceleration time for starting the commercial power supply frequency”

P.215 “Maximum frequency”

P.216 “Minimum frequency”


P.217 “Motor switchover permitted deviation”

| Parameter | Factory setting | Setting range     | Remarks   |
|-----------|-----------------|-------------------|---|
| 200       | 0               | 0~14              | P.200 is the function parameter of the multi-machine constant pressure system (the multi-channel card has to be purchased for using this function. Please refer to the manual for the multi-channel card for more details).                               |
| 209       | 5min            | 0.1~10min         | It is for setting up the time for the output frequency of the inverter to increase the servo motor (pump) after reaching the maximum frequency,   |
| 210       | 5min            | 0.1~10min         | Set the determining time as between the output frequency of the inverter reaching the minimum frequency and the decreasing of the servo motor (pump).   |
| 213       | 5s              | 0.01~20s/0.1~200s | When P.21=0, the unit of P.213 and P.214 is 0.01s.  |
| 214       | 5s              | 0.01~20s/0.1~200s | When P.21=1, the unit of P.213 and P.214 is 0.1s.   |
| 215       | 50Hz            | 20~60Hz           | When the inverter pump operation frequency reaches P.215, the register controlled by the increasing pump will start counting. When the output frequency is less than P.215, the register controlled by the increasing pump will be reset to zero.         |
| 216       | 20Hz            | 0~20Hz            | When the inverter pump operation frequency is less than P.216, the register controlled by the decreasing pump will start counting. When the output frequency is greater than P.216, the register controlled by the decreasing pump will be reset to zero. |

| Parameter | Factory setting | Setting range | Remarks  |
|-----------|-----------------|---------------|--|
| 217       | 0               | 0%~20%        | The bias between the command value and the feedback value is used as a reference for determining whether the output frequency of the inverter is close to the maximum or the minimum frequency and whether the code of the number of motors should be increased or decreased. When the bias is greater than the set value, the number of the motor (pump) has to be increased / decreased. |

### <Setting>

- When P.200=1 and P.85=11, integrating PID function parameters can realize multimachine constant pressure system and the AC control frequency motor contactor. When sending the stop command to the inverter, all the motors (pumps) will be stopped.
- P. 213 is the time when decreasing the pump, the setup reference for accelerating the output frequency of the inverter from the minimum frequency to the maximum frequency, and the time for the corresponding acceleration/deceleration base frequency.
- P. 214 is the time when increasing the pump, the setup reference for decelerating the output frequency of the inverter from the maximum frequency to the minimum frequency, and the time for the corresponding acceleration/deceleration base frequency.
- Fixed mode increasing pump control operation is shown in the figure below:

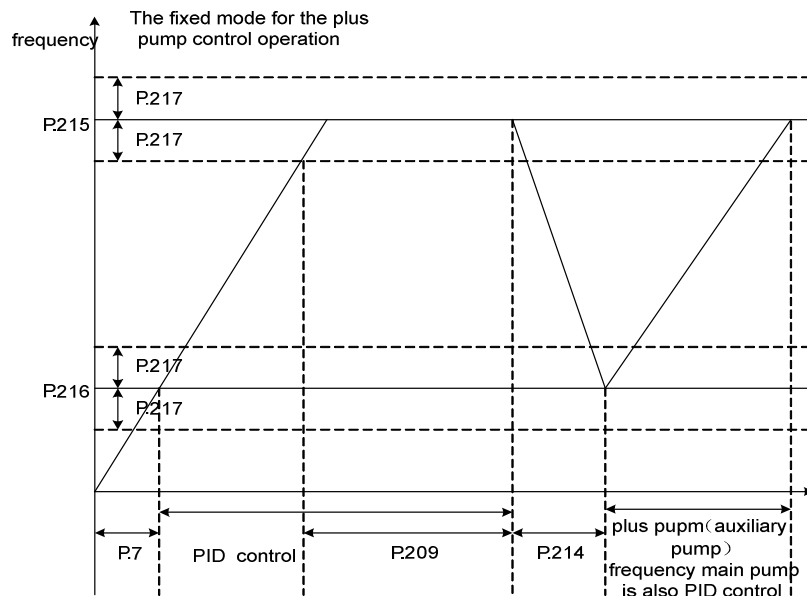

When the inverter is running, if the pressures command (or the frequency command) is larger than the feedback value continuously, PID output (equals to the output frequency) will increase until reaching the maximum frequency (P.215). This state will continue until the time assigned by P.209. If the bias between the command value and the feedback value is larger than the set value of P.217, increasing pump control will be performed.





| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 229       | 0               | 0~1           | ---     |
| 230       | 1Hz             | 1~400Hz       | ---     |
| 231       | 0.5s            | 0~360s        | ---     |
| 232       | 1Hz             | 1~400Hz       | ---     |
| 233       | 0.5s            | 0~360s        | ---     |


● Backlash countermeasures:

What is backlash compensation?

Reduction gears have an engagement gap and a dead zone between forward and reverse rotation. This dead zone is called backlash, and the gap disables a mechanical system from following motor rotation.

More specifically, a motor shaft develops excessive torque when the direction of rotation changes or when constant-speed operation shifts to deceleration, resulting in a sudden motor current increase or regenerative status.

To avoid backlash, acceleration/deceleration is temporarily stopped. Set the acceleration/deceleration stopping frequency and time in P.229 and P.233.

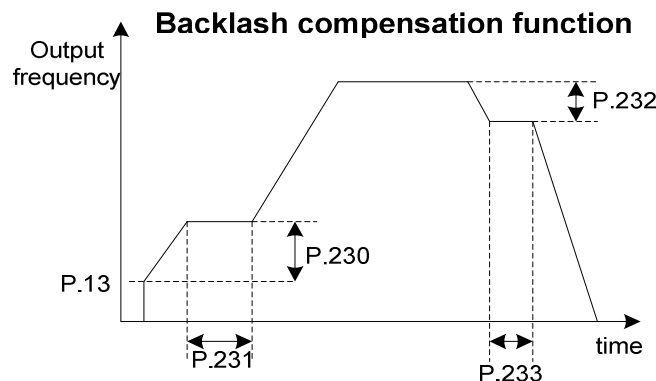

Note: 1. The setting of the backlash compensation will only prolong the acceleration/deceleration time during the period of interruption.  
 2. This function is only valid under the V/F mode; i.e., it is effective when P.300 = 0.

## 5.61 Triangular Wave Function (P.234~P.239)

P.234 "Triangular wave function selection"

P.235 "Maximum amplitude"

P.236 "Amplitude compensation for deceleration"

P.237 "Amplitude compensation for acceleration"


P.238 "Amplitude acceleration time"

P.239 "Amplitude deceleration time"

| Parameter | Factory setting | Setting range   | Remarks  |
|-----------|-----------------|-----------------|--|
| 234       | 0               | 0~2             | ---  |
| 235       | 10%             | 0~25%           | ---  |
| 236       | 10%             | 0~50%           | ---  |
| 237       | 10%             | 0~50%           | ---  |
| 238       | 10s             | 0~360s/0~3600 s | When P.21=0, the unit of P.238 and P.239 is 0.01s. |
| 239       | 10s             | 0~360s/0~3600 s | When P.21=1, the unit of P.238 and P.239 is 0.1s.  |

### <Setting>

- If P.234 “Triangular wave function selection” is “1” and triangular wave operation signal (TRI) is turned on, triangular wave function will be valid. Set any parameter in P.80~P.84, P.86, P.126~P.128 “Input terminal selection function” to “36” and then assign the TRI signal for the external terminal.
- If P.234 “triangular wave function selection” is equal to “2,” the triangular wave function is effective at any given time.

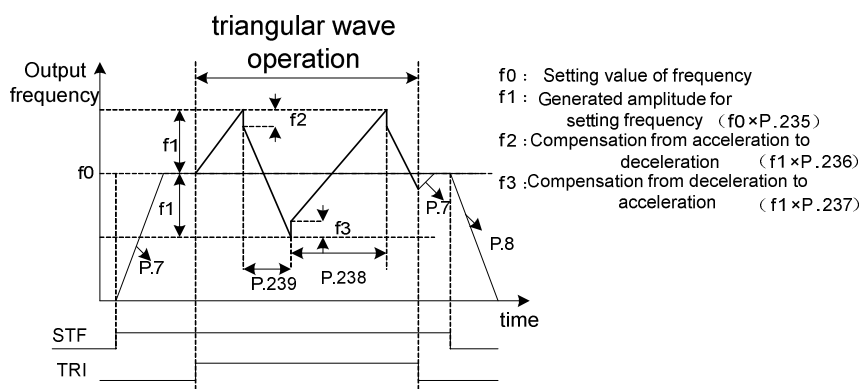

- Note: 1. During the movement of the triangular wave, the output frequency is limited by the maximum and the minimum frequency.
2. If the amplitude compensation, i.e., P.236 and P.237, is too big, over-voltage will be tripped off and the stall prevention action will be executed automatically. Consequently, the set method will not be carried out.
3. This function is only valid under the V/F mode; i.e., it is effective when P.300=0.

## 5.62 Auxiliary Frequency Function (P.240)

### P.240 “Auxiliary frequency function selection”

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 240       | 0               | 0~4           | ---     |

## <Setting>

- When P.240 is 0, no auxiliary frequency function is available.
- When P.240 is 1, operation frequency = basic frequency + auxiliary frequency (given by the 2-5 terminal).
- When P.240 is 2, operation frequency = basic frequency + auxiliary frequency (given by the 4-5 terminal).
- When P.240 is 3, operation frequency = basic frequency - auxiliary frequency (given by the 2-5 terminal).
- When P.240 is 4, operation frequency = basic frequency - auxiliary frequency (given by the 4-5 terminal).
- When the operation frequency is smaller than P.2, the operation frequency will be equal to the minimum limited frequency P.2. When the operation frequency is larger than P.1, the operation frequency will be equal to the maximum limited frequency P.1.

Note: The main frequency is set by the combination of the target frequency reference source DU01, communication and the multi-speed gear, or by 2-5、4-5 terminal.

## 5.63 DC Brake Function before Starting (P.242~P.244)

P.242 “DC injection brake function before starting selection”

P.243 “DC injection brake time before starting”


P.244 “DC injection brake voltage before starting”

Related parameters  
P.13 “Starting frequency”

| Parameter | Factory setting     | Setting range | Remarks |
|-----------|---------------------|---------------|---------|
| 242       | 0                   | 0~1           | ---     |
| 243       | 0.5s                | 0~60s         | ---     |
| 244       | 4% (7.5kW or below) | 0~30%         | ---     |
|           | 2% (11kW~55kW)      |               |         |
|           | 1% (75kW or above)  |               |         |

- If P.242=0, DC injection brake function is not available before starting. If P.242=1, DC brake injection function is selected before starting. When the output frequency reaches the starting frequency P.13, a DC voltage (the set value of P.244) will be injected into the motor windings by the inverter, which is used to lock the motor rotor. The DC brake operation will last a period (the set value of P.243) before the motor starts.

See the figure below:

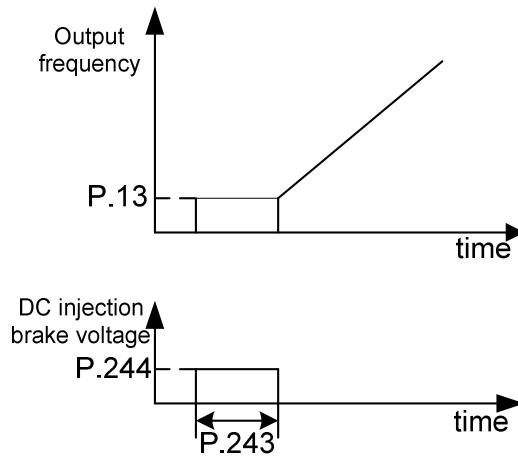

Note: This function is only valid under the V/F mode; i.e., it is effective when P.300=0.

## 5.64 Options for Stopping the Cooling Fan (P.245)

### P.245 "Cooling fan operation selection"

| Parameter | Factory setting | Setting range | Remarks  |
|-----------|-----------------|---------------|--|
| 245       | 0               | 0~3           | There is the output of fan abnormal alarm          |
|           |                 | 10~13         | There is only the detection of fan abnormal signal |

#### <Setting>

- When P.245=0 or 10, the fan will be turned on by the RUN signal. The fan will be turned off 30 seconds after the inverter stops.
- When P.245=1 or 11, turning on the power will turn on the fan. When the power is turned off, the fan will be off, too.
- When P.245=2 or 12, the fan will be turned on if the temperature of the heat sink is higher than 40°C. When the fan is turned off, the fan will be turned off, too.
- When P.245=3 or 13, the fan will be turned on when the temperature of the heat sink is higher than 60°C. When the temperature of the heat sink is lower than 40°C, the fan will be turned off.

Note: please refer to the parameter P.40, P.85, P.129, P.130.

## 5.65 Modulation Coefficient (P.246)

### P.246 "Modulation coefficient"

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 246       | 1               | 0.90~1.20     | ---     |

- P.246 is used to determine the ratio between the maximum output voltage and the input voltage. The users can use this parameter to obtain an output voltage that is higher than the input voltage. But the output voltage waveform at this point will generate distortion and contain assorted harmonics. It may also increase the motor torque harmonics and noises.

## 5.66 Commercial Power Supply Frequency Operation Function

### (P.247~P.250)

P.247 “MC switchover interlock time”

P.248 “Start waiting time”

P.249 “Automatic switchover frequency from inverter to commercial power supply frequency”

P.250 “Automatic switchover frequency range from commercial power supply to inverter”


| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 247       | 1s              | 0.1~100s      | ---     |
| 248       | 0.5 s           | 0.1~100 s     | ---     |
| 249       | 99999           | 0~60Hz, 99999 | ---     |
| 250       | 99999           | 0~10Hz, 99999 | ---     |

### <Setting>

- P.249 is used to switch the frequency from inverter operation to commercial power supply operation. Between starting and P.249 inverter operation, an output frequency greater than P.249 will automatically change the inverter operation to commercial power supply operation. When P.249 is set to 99999, there is no automatic switchover.
- When P.250≠99999, automatic switchover is valid during the operation (P.249≠99999). After the inverter operation is switched bypass operation, if the frequency command is lower than (P.249–P.250), the operation will be switched to inverter operation and run by the frequency of the frequency command. Inverter activation when the inverter start command (STF/STR) is turned off, the operation is also switched to the inverter operation.
- When P.250=99999, it is valid during automatic switchover operation (P.249≠99999). When the inverter start command (STF/STR) is turned off after the operation is changed from inverter operation to commercial power supply operation, the operation will be changed to the inverter operation and the motor will decelerate until it stops.

Examples for the commercial power supply frequency switchover function:

Assume that P.80=37, P.81=38, P.40=10 and P.130=9. The wiring diagram is presented below:

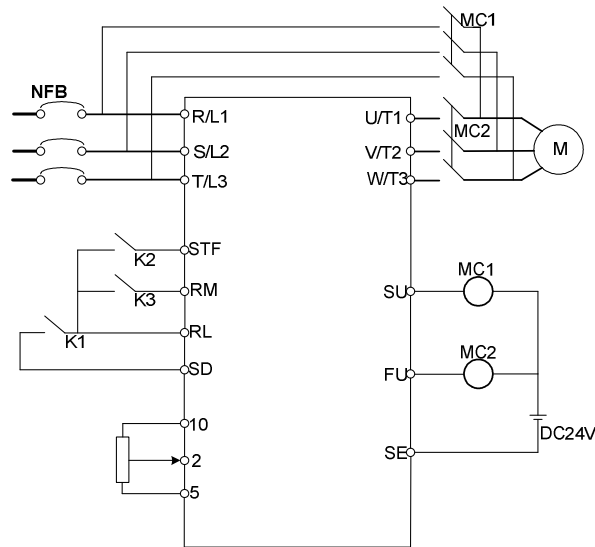


Please be cautious of the capacity of the output terminals. The used terminals vary according to the setup of P.40, P.85, P.129 and P.130 (output terminal function selection). When 10 is selected for the output terminal function, connect the relay that drives the commercial power supply frequency operation. When 9 is selected for the output terminal function, connect the relay that drives the inverter operation. When 37 is selected for the input terminal function, commercial power-supply operation switchover function is selected. When 38 is selected for the input terminal function, commercial power supply frequency operation switchover signal CS is selected.

### Warning:


1. **MC1 and MC2 must be mechanically interlocked; the running direction of the inverter operation and the commercial power supply operation should be consistent.**
2. **Use the commercial power operation switchover function under the external operation mode.**
3. **STF/STR is effective when the CS signal is ON.**

Here are some typical sequence diagrams for the switchover of the commercial power supply frequency:


1. No action sequence for the automatic switchover sequence (P.249=99999).

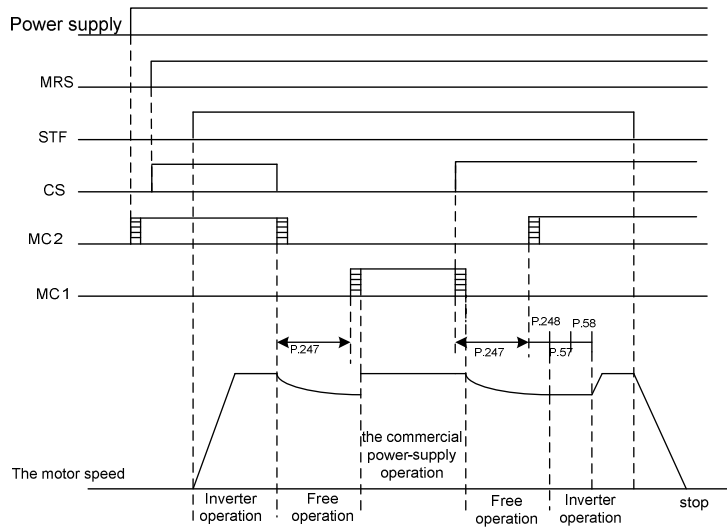

2. With action sequence for the automatic switchover sequence (P.249≠99999, P.250=99999).

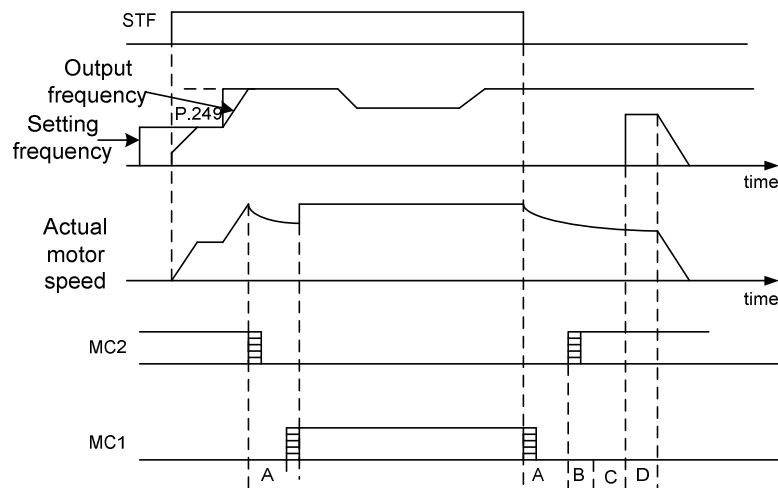

3. With action sequence for the automatic switchover sequence series (P.249≠99999, P.250 ≠ 99999).

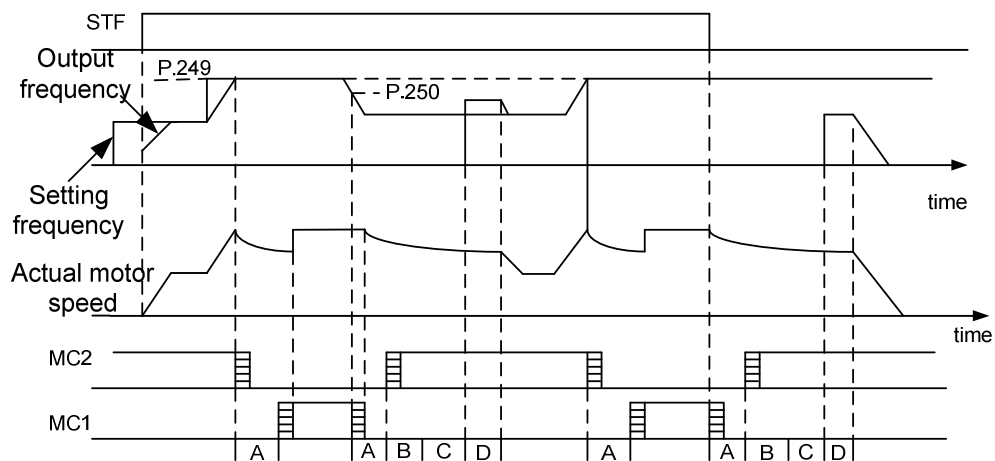

During the automatic switchover, A: P.247 MC switchover interlocking time; B: P.248 starting waiting time; C: P.57 restarting free operation time; D: P.58 restarting elevating time.

- Note: 1. When the motor runs at 50Hz (or 60Hz), the commercial power supply will offer a more efficient operation than the inverter will. Moreover, during the inverter maintenance/inspection period, the commercial power supply circuit should be installed to prevent the motor from being stopped for too long.
2. To prevent the inverter from setting off the over-current alarm when changing between the inverter operation and the commercial power supply operation, the interlock measure has to be taken. Once the motor stops, it will be activated via the inverter. Switchover and interlock can be carried out through the inverter and a complicated commercial power supply if commercial power supply switchover sequence function that can send out the signal for electromagnetic contactor actions is used.
3. This function is only valid under the V/F mode; i.e., it is effective when P.300=0.

## 5.67 Injection Molding Machine Specific Functions (P.251~P.254)

P.251 "Injection molding machine mode selection"

P.252 "Flow channel weighted coefficient"

P.253 "Pressure channel weighted coefficient"

P.254 "Corner frequency"

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| P.251     | 0               | 0~4           | ---     |
| P.252     | 100%            | 0~100%        | ---     |
| P.253     | 100%            | 0~100%        | ---     |
| P.254     | 0 Hz            | 0~100Hz       | ---     |

### <Setting>

- P.251=0, no injection modeling machine function.
- P.251=1, only the flow channel is valid. Set the frequency to be completely confirmed by the flow channel input signal. The pressure channel is invalid here.
- P.251=2, only the pressure channel is valid. Set the frequency to be completely confirmed by the pressure channel input signal. The flow channel is invalid.
- P.251=3, the frequency is determined by the combination of the flow channel and the pressure channel.

Make frequency = flow channel frequency x flow channel weighted coefficient  
 + pressure channel frequency x pressure channel weighted coefficient

- P.251=4, take the maximum absolute value of the flow channel and of the pressure channel.

Set frequency = MAX (flow channel frequency and pressure channel frequency)



- P.254 is the corner frequency, i.e., the frequency switch point of the acceleration/deceleration time. A factory default value equals to 0 indicates the first acceleration/deceleration time P.7, P.8 used by the entire operation frequency. When P.254 is set as a certain frequency value, the output frequency is smaller than P.254. Use the first acceleration/deceleration frequency P.7 and P.8. When the output frequency is larger than P.254, use the second acceleration/deceleration time P.44, P.45.
- For more details, please refer to the instruction on PM01, the injection modeling machine specific expansion card.

## **5.68 Maintenance Alarm Function (P.261)**

### **P.261 “Maintenance Alarm Time”**

- When Multi-function output terminal (P.40, P.85, P.129, P.130) equals 18, maintenance alarm is detecting. It means that when the inverter runs for the days that reach the parameter P.261 set value of maintenance alarm time, the multi-function terminal SO-SE or multi-function relay will send out signal.

| Parameter | Factory setting | Setting range | Remarks |  |
|-----------|-----------------|---------------|---------|--|
| P.261     | 0               | 0~9998 day    | 0       | No maintenance alarm                                     |
|           |                 |               | 1~9998  | Used to set time when maintenance alarm sends out signal |

## **5.69 Input Phase Failure Protection (P.281)**

### **P.281 “Input Phase Failure Protection”**

- The inverter has built-in input protection from phase failure. When P.281 is set to 1, input out of phase, the inverter will alarm IPF; When P.281 is set to 0, the function will be cancelled.

| Parameter | Factory setting | Setting range | Remarks |                             |
|-----------|-----------------|---------------|---------|-----------------------------|
| P.281     | 0               | 0,1           | 0       | No Phase Failure Protection |
|           |                 |               | 1       | Phase Failure Protection    |

## 5.70 Vibration Inhibition Factor (P.285 and P.286)

P.285 “Low frequency vibration inhibition factor”

P.286 “High frequency vibration inhibition factor”

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| P.285     | 1               | 0~3           | ---     |
| P.286     | 0               | 0~15          | ---     |

<Setting>

1. If motor vibration is generated at lower frequency, adjust the set value of P.285. The recommended value is 1.
2. If motor vibration is generated at higher frequency, adjust the set value of P.286. Gradually increase the set value by the unit of 1.
3. For the actual application, use the vibration-generating frequency that is lower or higher than half of the motor rated frequency to determine whether the occurred vibration is a low-frequency vibration or a high-frequency vibration. That is, if the rated frequency on the name plate of the motor is 50Hz and the vibration-generating frequency is lower than 25Hz, then this is a low-frequency vibration. On the other hand, if the vibration-generating frequency is higher than 25Hz, then this is a high-frequency vibration.

Note: 1. When the motor load is light, current flow may happen at certain specific operation frequency. This situation may cause the motor to vibrate slightly. The user can neglect it if this trivial vibration has no impact on the application.

2. If the current flow is serious (generating vibration), it may cause serious motor vibration or even inverter over-current. The user can try to adjust the vibration inhibition factor to improve the situation (Large power motors' current flow zone mostly happens at the low frequency zone).

## 5.71 Short Circuit Protection Function (P.287)

P.287 “Short circuit protection function selection”

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 287       | 1               | 0~1           | ---     |

<Setting>

- Set P.287 to 0 to cancel the output end short-circuits protection function.
- When P.287 is set to 1, if the output end is short, the operation panel will display the “SCP” abnormal alarm and the inverter will stop the output.

## 5.72 Alarm History Parameters (P.288~P.291)

P.288 “Alarm code display option”

P.289 “Alarm code”

P.290 “The latest alarm status selection”

P.291 “The latest alarm message”

- This paragraph provides the users with parameter-related information on alarm codes for frequency, current, voltage, as well as the 12 alarm codes mentioned earlier. If P.996 operation is executed, the abnormal codes and the status messages for the occurred alarms recorded by this set of parameters will be all cleared.

| Parameter | Factory setting | Setting range | Remarks  |
|-----------|-----------------|---------------|--|
| 288       | 0               | 0~12          | The value of P.288, 1~12, corresponds to the abnormal codes of P.289's alarm E1~E12.   |
| 289       | 0               | ---           |  |
| 290       | 0               | 0~7           | When P.290=1, P.291 corresponds to the frequency when the alarm goes off.<br>When P.290=2, P.291 corresponds to the current when the alarm goes off.<br>When P.290=3, P.291 corresponds to the output voltage when the alarm goes off.<br>When P.290=4, P.291 corresponds to the accumulation rate of temperature increase when the alarm goes off.<br>When P.290=5, P.291 corresponds to the P-N voltage when the alarm goes off.<br>When P.290=6, P.291 corresponds to the length of time the inverter has run before the alarm goes off.<br>When P.290=7, P.291 corresponds to the operation status code when the alarm goes off. |
| 291       | 0               | ---           |  |

If both P.288 and P.290 are 0, P.289 and P.291 will be displayed as 0.

Abnormal code corresponded alarm condition:

| Abnormal code | Alarm type | Abnormal code | Alarm type | Abnormal code | Alarm type | Abnormal code | Alarm type | Abnormal code | Alarm type |
|---------------|------------|---------------|------------|---------------|------------|---------------|------------|---------------|------------|
| 00            | No alarm   | 32            | OV1        | 49            | THN        | 82            | IPF        | 144           | OHT        |
| 16            | OC1        | 33            | OV2        | 50            | NTC        | 97            | OLS        | 160           | OPT        |
| 17            | OC2        | 34            | OV3        | 64            | EEP        | 98            | OL2        | 179           | SCP        |
| 18            | OC3        | 35            | OV0        | 65            | FAN        | 112           | BE         | 192           | CPU        |
| 19            | OC0        | 48            | THT        | 66            | PID        | 129           | AEr        | 193           | CPR        |
| 209           | PG1        | 210           | PG2        | 211           | PG3        |               |            |               |            |

## 5.73 Accumulative Motor Operation Time Function (P.292 and P.293)

P.292 “Accumulative motor operation time (minutes)”

P.293 “Accumulative motor operation time (days)”

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 292       | 0 min           | 0~1439min     | ---     |
| 293       | 0 day           | 0~9999day     | ---     |

<Setting>

- P.292 is about the accumulative motor operation time in minutes. The updated value cannot be modified by executing P.998 or power shutdown. To clear the accumulated time, make P.292=0.
- P.293 is about the accumulative motor operation time in days. The updated value cannot be modified by executing P.998 or power shutdown. To clear the accumulated time, make P.293=0.

## 5.74 Password Protection Function (P.294 and P.295)

P.294 “Decryption parameter”

P.295 “Password setup”

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 294       | 0               | 0~65535       | ---     |
| 295       | 0               | 2~65535       | ---     |

<Setting>

- P.294 is the parameter that provides the decrypt function. P.294 will be zero if the decryption is successful. Use P.295 to set the password. Enter the initial password into P.294 to decrypt the parameter password and to modify or to set up various parameters.
- P.295 is the parameter for setting up the password. The password has to be greater than 1. Once the password setup is completed, P.295 will display 1. After deleting the password, P.295 will display 0. Once the password is set, no parameter can be modified, except P.294. P.998 and power shutdown have no effect on the password. The parameters can be revised only after the decryption.

Note: Bring the inverter to the factory for decryption if the password is forgotten.

## 5.75 Motor Control Mode (P.300 and P.301)

P.300 “Motor control mode selection”


P.301 “Motor parameter auto-tuning function selection”

| Parameter | Factory setting | Setting range | Remarks |   |
|-----------|-----------------|---------------|---------|---|
| 300       | 0               | 0~4           | 0       | V/F control   |
|           |                 |               | 1       | Close-loop V/F control (VF + PG)                        |
|           |                 |               | 2       | General flux vector control                             |
|           |                 |               | 3       | Sensorless vector control (SVC)                         |
|           |                 |               | 4       | Close-loop vector control (FOC + PG)                    |
| 301       | 0               | 0~3           | 0       | Parameter auto-tuning function with no motor            |
|           |                 |               | 1       | Motor parameter auto-tuning measuring the running motor |
|           |                 |               | 2       | Motor parameter auto-tuning measuring the stopped motor |
|           |                 |               | 3       | Online auto-tuning function                             |

### <Setting>

- When P.300=0, no motor parameter auto-tuning function is required for normal V/F curve operation.
- For general magnetic vector control, please set P.300 to 2. The frequency will be altered due to elevated voltage and increased compensatory motor load.
- For executing the motor parameter auto-tuning function, set P.301 to 1 or 2 and press the forward rotation or the reverse rotation key. During the measuring process, the operation panel will flicker and display “TUN”. If the measurement fails, the operation panel will flicker “FAL” for three seconds and then return to normal display.

- Procedures for motor parameter auto-tuning are presented below:

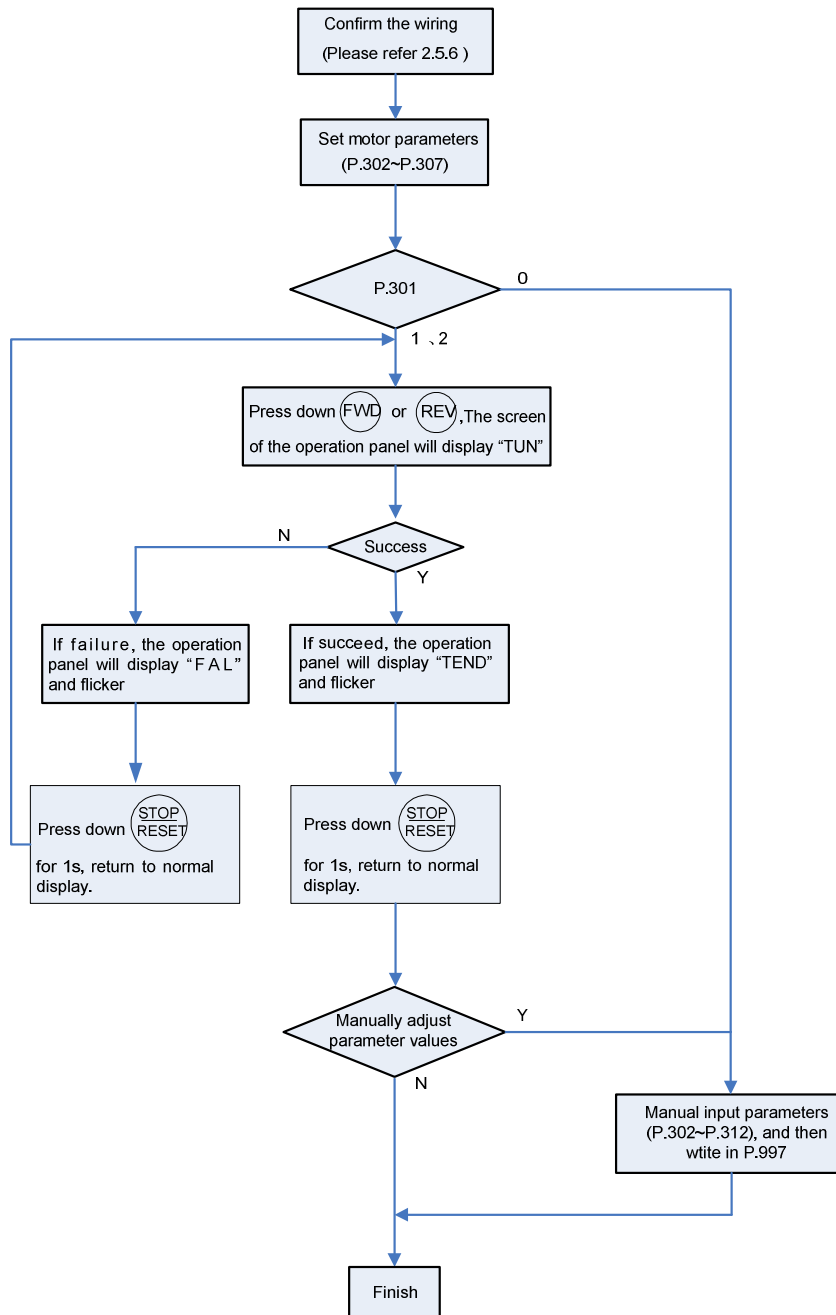

- If high accuracy sensorless control is required, set P.300 to 3 for sensorless vector control.

Note: 1. The motor capacity has to be at the same level or one level below of the level of the capacity of the inverter.

2. For the auto-tuning function, if motor operation is permitted, set P.301 to 1 (dynamic measurement). At this point, the load has to be separated from the motor. If the load environment does not permit auto-tuning, set P.301 to 2 (static measurement) if motoring is running.

3. Sensorless vector control: Auto-tuning function can be used to enhance the control function. Before setting P.300 to 3 or 4, first set the motor parameters or the auto-tuning function to improve the control accuracy.





4. When P.300=1 and the mode of Close-loop V/F control (VF + PG) is selected, please make sure that the motor poles P.303 is correct.

## 5.76 Motor Parameter (P.302~P.312)

|   |   |
|---|---|
| <u>P.302 “Motor rated power”</u>          | <u>P.308 “Motor excitation current”</u> |
| <u>P.303 “Motor poles”</u>                | <u>P.309 “Stator resistance”</u>        |
| <u>P.304 “Motor rated voltage”</u>        | <u>P.310 “Rotor resistance”</u>         |
| <u>P.305 “Motor rated frequency”</u>      | <u>P.311 “Leakage inductance”</u>       |
| <u>P.306 “Motor rated current”</u>        | <u>P.312 “Mutual inductance”</u>        |
| <u>P.307 “Motor rated rotation speed”</u> |   |

| Parameter | Factory setting  | Setting range                                   | Remarks |
|-----------|------------------|---|---------|
| 302       | 0                | 0~355   | ---     |
| 303       | 4                | 0~8   | ---     |
| 304       | 220/440V         | 0~440V  | ---     |
| 305       | 50Hz             | 0~400Hz   | P.189=1 |
|           | 60Hz             |   | P.189=0 |
| 306       | Horsepower-based | 0~500A/5000A<br>(Refer to note 5 in appendix 1) | ---     |
| 307       | 1410 r/min       | 0~65535 r/min                                   | P.189=1 |
|           | 1710 r/min       |   | P.189=0 |
| 308       | Horsepower-based | 0~500A/5000A<br>(Refer to note 5 in appendix 1) | ---     |
| 309       | Horsepower-based | 0~65535mΩ                                       | ---     |
| 310       | Horsepower-based | 0~65535mΩ                                       | ---     |
| 311       | Horsepower-based | 0~6553.5mH                                      | ---     |
| 312       | Horsepower-based | 0~6553.5mH                                      | ---     |

### <Setting>

- When the motor can be fully separated from the load, select P.301=1. When the motor is running, the motor parameter will carry out auto-tuning. Then press  or  on the keyboard panel for the inverter to automatically calculate the following parameter: P.308~P.312.
- When the motor cannot be fully separated from the load, select P.301=2. When the motor is stopped, the motor parameter will carry out auto-tuning. Then press  or  on the keyboard panel for the inverter to automatically calculate the following parameter: P.308~P.312.
- The users can use the motor's nameplate to calculate the two parameters. The motor nameplate parameters used in the calculation are: rated voltage  $U$ , rated current  $I$ , rated frequency  $f$  and power factor  $\eta$ .

- The calculation of motor idling excitation current and of motor mutual induction is presented below:  $L_6$  is motor leakage induction.

Idling current:  $I_0 = I \times \sqrt{1 - \eta^2}$

Mutual inductance calculation:  $L_m = \frac{U}{2\sqrt{3} \cdot \pi \cdot f \cdot I_0} - L_6$

$I_0$  is the idling current, whereas  $L_m$  is mutual inductance,  $L_6$  is leakage inductance.

Note: 1. When the inverter is used with a motor of a different level, verify the input motor's nameplate parameter P.302~P.307. The vector control method is heavily dependent upon motor parameters. To achieve a good control performance, the controlled motor's correct parameters have to be acquired.

2. When any or many values of P.302~P.312 are manually revised, perform the function of P.997 to reload the new values of the parameters.

## 5.77 Gain Adjustment at Speed Control (P.320~P.325)

P.320 "Speed control proportion coefficient 1"

P.321 "Speed control integral coefficient 1"

P.322 "Switching frequency 1"

P.323 "Speed control proportion coefficient 2"

P.324 "Speed control integral coefficient 2"


P.325 "Switching frequency 2"

| Parameter | Factory setting | Setting range                      | Remarks |
|-----------|-----------------|------------------------------------|---------|
| 320       | 100%            | 0~2000%                            | ---     |
| 321       | 0.3s            | 0~20s                              | ---     |
| 322       | 5.00HZ          | 0.00~P.325                         | ---     |
| 323       | 100%            | 0~2000%                            | ---     |
| 324       | 0.3s            | 0~20s                              | ---     |
| 325       | 5.00HZ          | P.322~the maximum output frequency | ---     |



## <Setting>

- P.320 and P.321 are the PI adjusting parameter when the running frequency is less than the switching frequency 1 (P.322). P.323 and P.324 are the PI adjusting parameter when the running frequency is greater than the switching frequency 2 (P.325). When the running frequency is between the switching frequency 1 and the switching frequency 2, the two PI parameters switch linearly.

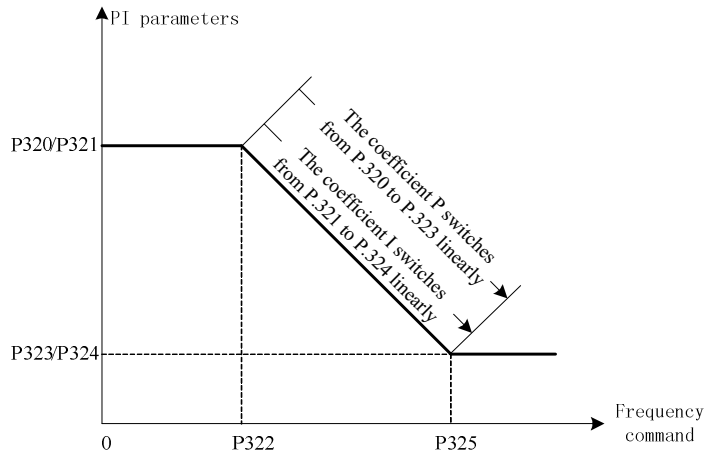

The diagram of the two PI parameter variation

- P.320/P.323 is used to set the proportion gain of speed control.(Set the value slightly larger to better follow changes on the speed command and to reduce speed change due to external interference.)
- P.321/P.324 is used to set the integral time of speed control.(Due to external interference-generated speed change, set the value smaller to shorten the time spent on returning to the original speed).

Note: 1. Use P.320/P.323 to increase the set value of speed control gain can elevate the effecting time. But a set value too high can generate vibration and noises.  
 2. Reduce speed control integral coefficient P.321/P.324 to shorten the time required to go back to the original speed. But if the value is too small, overshoot can happen.

## 5.78 Torque Limit Range Setting (P.326)

### P.326“Torque limit range level under vector control ”

| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| 326       | 200%            | 0~400%        | ---     |

## <Setting>

- When P.326=100%, the maximum output torque under the vector control is the motor rated torque.

Motor rated torque calculation:  $T(N.M) = \frac{P(W)}{\omega(rad/s)}$ ,

P(W) is on the basis of P.302,  $\omega(rad/s)$  can be worked out according to the parameter P.307:

$$\frac{2\pi \times P.307}{60} (rad/s).$$

## 5.79 Feedback Control Parameters (P.350~P.354)

P.350 “Number of pulses per revolution of the encoder”

P.351 “Encoder input mode setup”

P.352 “PG signal abnormality (zero speed) detection time”

P.353 “Motor over-speed detection frequency”

P.354 “PG over-speed detection time”


| Parameter | Factory setting | Setting range | Remarks |
|-----------|-----------------|---------------|---------|
| P.350     | 1024            | 1~20000       | ---     |
| P.351     | 0               | 0~4           | ---     |
| P.352     | 1s              | 0~100s        | ---     |
| P.353     | 4Hz             | 0~30Hz        | ---     |
| P.354     | 1s              | 0~100s        | ---     |

### <Setting>


- When using the PG card, P.350 is applied for setting up the number of pulses to be generated by the encoder per revolution of the motor. That is, the number of pulses generated by one cycle of Phase A/Phase B. When carrying out PG feedback control, if the detected frequency is 0, and with duration longer than the time set by P.352, and then the PG card’s feedback signal is abnormal. The inverter will display alarm PG2 and stop the operation. If PG signal abnormal (zero speed) detection time P.352 is set to 0, then there is no PG card feedback signal abnormal function, i.e., no alarm PG2.
- When carrying out PG feedback control, if the difference between the detected frequency and the output frequency exceeds P.353, and with duration longer than the set time of P.354, then the speed deviation is too big. The inverter will display alarm PG3 and stop the operation. If PG over-speed detection time P.354 is set to 0, then alarm PG3 function is not available.
- P.351 is applied for setting up the encoder’s input mode. The following encoder input modes are used as some examples:

0: No function;


1: Phase A/B pulse train, Phase A is 90° ahead of Phase B and is forward rotation.

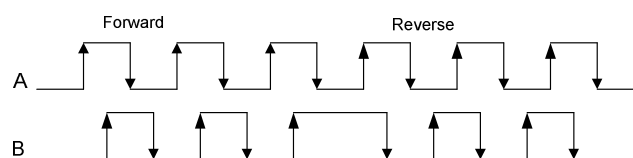


2: Phase A/B pulse train, Phase B is 90° ahead of Phase A and is forward rotation.

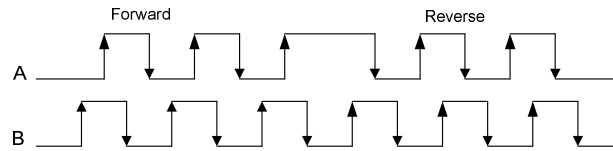

3. Phase A is a pulse train. Phase B is a direction sign. L is reverse rotation and H is forward rotation

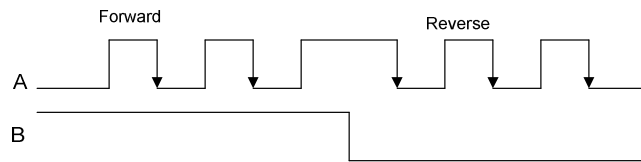

4. Phase A is a pulse train. Phase B is a direction sign. L is forward rotation and H is reverse rotation.

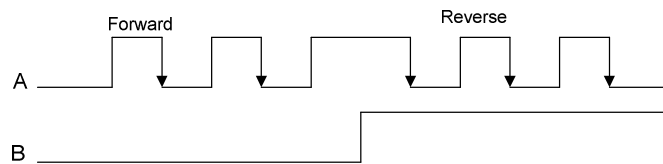

Note: 1. If closed-loop control is selected but P.351=0, then the inverter will display alarm PG1 and stop the operation.  
 2. When P.300=1, execute the V/F closed-loop control; when P.300=4, execute the closed-loop vector control.  
 3. When P.151=1, zero-speed operation is executed under the closed-loop control; DC voltage brake is executed under the V/F closed-loop control.

## 5.80 Parameter Copy Function (P.994 and P.995) (a PU series operation panel needs to be purchased)

P.994 "Parameter copy readout"

P.995 "Parameter copy write-in"

- Parameter copy function is valid only when the motor is stop, P.77=0, and under the PU mode. When several inverters use the same parameters value, only by setting one inverter that we can use P.994 and P.995 to quickly copy the values to other inverters.
- Parameter copy operation procedure:
  1. When the first inverter is in the PU mode, the value of P.994 is readout (the screen will display  $P.r.[P]$ ) and then written-in. The screen will then start to flicker, indicating that the parameters are copied from the inverter to the operation panel. When the flickering on the screen is stopped, parameter copying is completed.
  2. When the second inverter is in the PU mode, the value of P.995 is readout (the screen

# Parameter Description

will display  $P.r.L.H$ ) and then written-in. The screen will then start to flicker, indicating that the parameters are copied from the control panel to the inverter. When the flickering on the screen is stopped, parameter copying is completed.

- Note: 1. Regarding the parameter copy function of SF-Type inverters, it is limited to inverters of version V0.80 or above, or PU01 operation panel of version V2.05 or above.
2. If the version of the inverter is updated, pick inverter parameters of the lower version inverter among inverters of different versions for parameter copying.
3. Parameters cannot be copied between inverters of different series.
4. When parameters cannot be copied, PU01 operation panel will display the alarm code "OPT" or "Err". These alarm codes are not the abnormal alarm codes. When these alarm codes are displayed, inverter reset is not required.
5. Please refer to the PU01 operation manual for more details.

## 5.81 Alarm History Clear (P.996)

### P.996 "Alarm history clear"

- Once P.996 is read-out (after reading out the parameter, the screen will display  $E.r.L.L$ ) and rewrite it. All the abnormal record will be erased.

## 5.82 Inverter Reset (P.997)

### P.997 "Inverter reset"

- Once P.997 is read-out (after the read-out, the screen will display  $r.E.S.r$ ) and rewritten-in, the inverter is reset. After resetting the inverter, the values of the two relays, "electronic thermal relay" and "IGBT module thermal relay", will be set to zero.

## 5.83 Restoration of the Parameters to the Default Values (P.998 and P.999)

### P.998 "Restoring all parameters to default values"

### P.999 "Restoring some parameters to default values"

- Once P.998 is read-out (after the read-out, the screen will display  $R.L.L.L$ ) and rewritten-in, all the parameters will be restored to the default values except P.21, P.186, P.188, P.189, P.285, P.286, P.292 and P.293.
- Once P.999 is read-out (after the read-out, the screen will display  $P.r.L.r$ ) and rewritten-in, all the parameters will be restored to the default values except P.21, P.186, P.188, P.189, P.190, P.191, P.192~P.195, P.196~P.199, P.285, P.286, P.292, P.293 and P.300~P.312.
- After performing P.998 and P.999, the screen will display  $0.00$ , indicating that the parameters have been restored to the default values.

Note: The parameter P.998 is only executable in the PU mode. For the flow chart of transferring operation modes, please refer to 4.1.1.

## 6. Inspection and Maintenance

In order to avoid malfunction and security problems resulting from device aging caused by environmental factors such as temperature, oil fog, dust, vibration, humidity and etc., “daily inspection” and “periodical inspection” are necessary.

Note: The installation, wire arrangement, dismounting, and maintenance can only be done by qualified electricians.

### 6.1 Daily Inspection

---

1. Check whether the surrounding conditions are normal (including temperature, humidity, dust density, etc.) at the place of the installation.
2. Check whether the power supply voltage is normal (the voltage between R/L1, S/L2 and T/L3).
3. Check whether the wiring is secured (whether the external wiring for the main-circuit board and the control-board terminal are secured).
4. Check whether the cooling system is normal (whether there's any abnormal noise during the operation and whether the wiring is well secured).
5. Check whether the indicator lamp is normal (whether the indicator lamp of the control board and of the operation panel and the LED monitor of the operation panel are normal).
6. Check whether the operation is as expected.
7. Check whether there is any abnormal vibration, noise or odor during the operation.
8. Check whether there is any leakage from the filter capacitor.

### 6.2 Periodical Inspection (During Machine Shutdown) Items

---

1. Check the connectors and wiring (whether the connectors and wiring between the main-circuit board and control board are secured and without damage).
2. Check whether the components on the main-circuit board and the control board are overheated.
3. Check whether the electrolytic capacitors on the main-circuit board and control board have leakage.
4. Check the IGBT module on the main-circuit board.
5. Clean the dust and foreign substance on the circuit board.
6. Check the insulation resistor.
7. Check whether the cooling system is normal (whether the wiring is secured; clean the air filter, etc.)
8. Check the screws and belts.
9. Check the external wires and the terminal banks for damage.


## 6.3 Regular Replacement for Some Components

| Items            | Standard replacing time | Description   |
|------------------|-------------------------|---|
| Cooling fan      | 2 years                 | For the axle of a fan, the standard lifetime is about 10 – 35 thousand hours. Assuming that the fan operates 24 hours per day, the fan should be replaced every 2 years.                        |
| Filter capacitor | 5 years                 | The filter capacitor is an electrolytic capacitor that deteriorates with time. The deterioration speed is contingent on the ambient conditions. Generally, it should be replaced every 5 years. |
| Relay            | ---                     | If bad contact occurs, please replace it immediately.   |

Note: please send the inverters to the factory fore complement replacement.

## 6.4 Inverter Insulation Resistance Measurement


1. Before measuring the inverter insulation resistance, first dismount the “wiring of all the main-circuit terminals” and the “control board.” Then execute the wiring as shown in the right picture.
2. The measurement is only suitable for the main circuit. It is prohibited to use a high-resistance meter for measuring terminals on the control board.
3. The value of the insulation resistance shall be greater than 5MΩ.

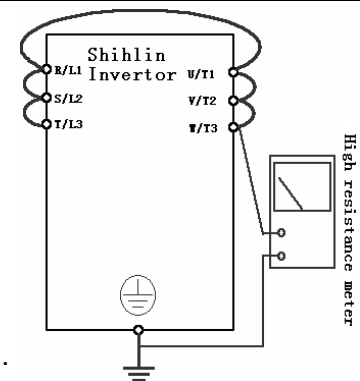

Note: Please do not carry out a high-voltage test; as such test will damage the built-in semiconductor components.

## 6.5 Motor Insulation Resistance Measurement


1. Before the measurement, please dismount the motor, and execute the wiring as shown in the diagram on the right.
2. The value of the insulation resistance shall be greater than 5MΩ.

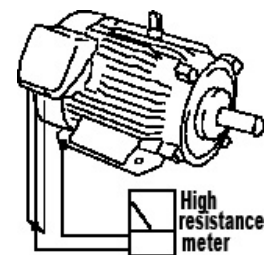

## 6.6 IGBT Module Test

Before conducting the IGBT module test, first dismantle the external wires from the main-circuit terminals. Then set the multi-meter to the ohm-testing position.

|               | Positive voltage | Negative voltage | Normal result  |               | Positive voltage | Negative voltage | Normal result  |
|---------------|------------------|------------------|----------------|---------------|------------------|------------------|----------------|
| Terminal mark | R                | P                | Conductive     | Terminal mark | U                | P                | Conductive     |
|               | S                | P                | Conductive     |               | V                | P                | Conductive     |
|               | T                | P                | Conductive     |               | W                | P                | Conductive     |
|               | P                | R                | Non-conductive |               | P                | U                | Non-conductive |
|               | P                | S                | Non-conductive |               | P                | V                | Non-conductive |
|               | P                | T                | Non-conductive |               | P                | W                | Non-conductive |
|               | R                | N                | Non-conductive |               | U                | N                | Non-conductive |
|               | S                | N                | Non-conductive |               | V                | N                | Non-conductive |
|               | T                | N                | Non-conductive |               | W                | N                | Non-conductive |
|               | N                | R                | Conductive     |               | N                | U                | Conductive     |
|               | N                | S                | Conductive     |               | N                | V                | Conductive     |
|               | N                | T                | Conductive     |               | N                | W                | Conductive     |

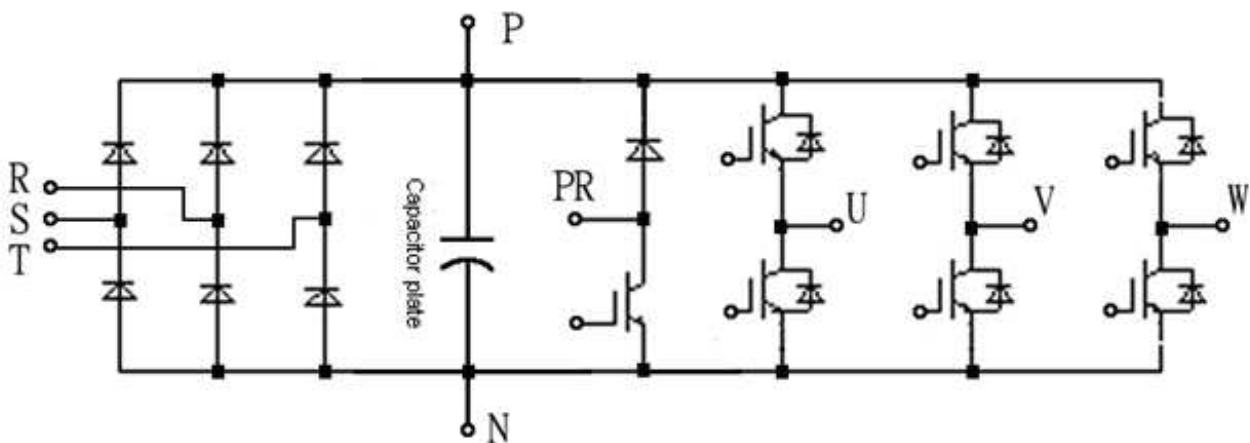

Note: The above diagram is the schematic diagram for frame A and B.

# Appendix 1 Parameter Table

Parameter Table

| Parameter Number | Name                                   | Setting Range                | Minimum Setting Unit   | Default Value                   | User Setting Value | Reference Page |
|------------------|--|------------------------------|------------------------|---------------------------------|--------------------|----------------|
| <u>P.0</u>       | Torque boost                           | 0~30%                        | 0.1%                   | Model-based<br>(Note 1)         |                    | P51            |
| <u>P.1</u>       | Maximum frequency                      | 0~120Hz                      | 0.01Hz                 | 120Hz<br>(55kW or below)        |                    | P52            |
|                  |  |                              |                        | 60Hz<br>(75kW or above)         |                    |                |
| <u>P.2</u>       | Minimum frequency                      | 0~120Hz                      | 0.01Hz                 | 0Hz                             |                    | P52            |
| <u>P.3</u>       | Base frequency                         | 0~400Hz                      | 0.01Hz                 | 50Hz/60Hz<br>(Note 2)           |                    | P52            |
| <u>P.4</u>       | Speed 1 (high speed)                   | 0~400Hz                      | 0.01Hz                 | 60Hz                            |                    | P53            |
| <u>P.5</u>       | Speed 2 (medium speed)                 | 0~400Hz                      | 0.01Hz                 | 30Hz                            |                    | P53            |
| <u>P.6</u>       | Speed 3 (low speed)                    | 0~400Hz                      | 0.01Hz                 | 10Hz                            |                    | P53            |
| <u>P.7</u>       | Acceleration time                      | 0~360s/<br>0~3600s           | 0.01s/0.1s             | 20s                             |                    | P55            |
| <u>P.8</u>       | Deceleration time                      | 0~360s/<br>0~3600s           | 0.01s/0.1s             | 10s<br>(7.5kW or below)         |                    | P55            |
|                  |  |                              |                        | 30s<br>(11kW or above)          |                    |                |
| <u>P.9</u>       | Electronic thermal relay capacity      | 0~500A/<br>5000A<br>(note 5) | 0.01A/0.1A<br>(note 5) | Motor rated current<br>(Note 1) |                    | P56            |
| <u>P.10</u>      | DC injection brake operation frequency | 0~120Hz                      | 0.01Hz                 | 3Hz                             |                    | P57            |
| <u>P.11</u>      | DC injection brake operation time      | 0~60s                        | 0.1s                   | 0.5s                            |                    | P57            |
| <u>P.12</u>      | DC injection brake operation voltage   | 0~30%                        | 0.1%                   | 4%<br>(7.5kW or below)          |                    | P57            |
|                  |  |                              |                        | 2% (11kW~55kW)                  |                    |                |
|                  |  |                              |                        | 1%<br>(75kW or above)           |                    |                |
| <u>P.13</u>      | Starting frequency                     | 0~60Hz                       | 0.01Hz                 | 0.5Hz                           |                    | P58            |
| <u>P.14</u>      | Load pattern selection                 | 0~13                         | 1                      | 0                               |                    | P58            |
| <u>P.15</u>      | JOG frequency                          | 0~400Hz                      | 0.01Hz                 | 5Hz                             |                    | P61            |
| <u>P.16</u>      | JOG acceleration /deceleration time    | 0~360s/<br>0~3600s           | 0.01s/0.1s             | 0.5s                            |                    | P61            |
| <u>P.17</u>      | Reserved                               |                              |                        |                                 |                    |                |
| <u>P.18</u>      | High speed maximum frequency           | 120~400Hz                    | 0.01Hz                 | 120Hz                           |                    | P52            |



# Appendix 1 Parameter Table

Parameter Table

| Parameter Number | Name  | Setting Range  | Minimum Setting Unit | Default Value   | User Setting Value | Reference Page |
|------------------|---|----------------|----------------------|---|--------------------|----------------|
| <u>P.19</u>      | Base frequency voltage  | 0~1000V, 99999 | 0.1V                 | 99999   |                    | P52            |
| <u>P.20</u>      | Acceleration / deceleration reference frequency   | 1~400Hz        | 0.01Hz               | 50Hz/60Hz (Note 2)  |                    | P55            |
| <u>P.21</u>      | Acceleration/ deceleration time increments  | 0, 1           | 1                    | 0   |                    | P55            |
| <u>P.22</u>      | Stall prevention operation level  | 0~400%         | 0.1%                 | 120%/150% (Note 3)  |                    | P61            |
| <u>P.23</u>      | Compensation factor at level reduction  | 0~150%, 99999  | 0.1%                 | 99999   |                    | P61            |
| <u>P.24</u>      | Speed 4   | 0~400Hz, 99999 | 0.01Hz               | 99999   |                    | P53            |
| <u>P.25</u>      | Speed 5   | 0~400Hz, 99999 | 0.01Hz               | 99999   |                    | P53            |
| <u>P.26</u>      | Speed 6   | 0~400Hz, 99999 | 0.01Hz               | 99999   |                    | P53            |
| <u>P.27</u>      | Speed 7   | 0~400Hz, 99999 | 0.01Hz               | 99999   |                    | P53            |
| <u>P.28</u>      | Output frequency filter constant  | 0~31           | 1                    | 0   |                    | P63            |
| <u>P.29</u>      | Acceleration/ deceleration curve selection  | 0, 1, 2        | 1                    | 0   |                    | P63            |
| <u>P.30</u>      | Regenerative brake function selection   | 0, 1, 2        | 1                    | 0<br>(22 kw and below models)<br>2<br>(30 kw and above model) |                    | P65            |
| <u>P.31</u>      | Carrier operation selection   | 0, 1           | 1                    | 0   |                    | P65            |
| <u>P.32</u>      | Serial communication Baud rate selection  | 0, 1, 2, 3     | 1                    | 1   |                    | P66            |
| <u>P.33</u>      | Communication protocol selection  | 0, 1           | 1                    | 1   |                    | P66            |
| <u>P.34</u>      | Writing Selection of Communication EEPROM   | 0, 1           | 1                    | 0   |                    | P66            |
| <u>P.35</u>      | Communication mode operation & speed command selection  | 0, 1           | 1                    | 0   |                    | P86            |
| <u>P.36</u>      | Inverter station number   | 0~254          | 1                    | 0   |                    | P66            |
| <u>P.37</u>      | Speed display   | 0~5000r/min    | 0.1 r/min            | 0 r/min   |                    | P86            |
| <u>P.38</u>      | The maximum operation frequency (the target frequency is set by the input signal of terminal 2-5) | 1~400Hz        | 0.01Hz               | 50Hz/60Hz (Note 2)  |                    | P88            |

# Appendix 1 Parameter Table

Parameter Table

| Parameter Number     | Name  | Setting Range                | Minimum Setting Unit   | Default Value        | User Setting Value | Reference Page |
|----------------------|---|------------------------------|------------------------|----------------------|--------------------|----------------|
| <a href="#">P.39</a> | The maximum operation frequency (the target frequency is set by the input signal of terminal 4-5) | 1~400Hz                      | 0.01Hz                 | 50Hz/60Hz (Note 2)   |                    | P92            |
| <a href="#">P.40</a> | Multi-function output terminal SU function selection  | 0~19                         | 1                      | 1                    |                    | P92            |
| <a href="#">P.41</a> | Up-to-frequency sensitivity   | 0~100%                       | 0.1%                   | 10%                  |                    | P95            |
| <a href="#">P.42</a> | Output frequency detection for forward rotation   | 0~400Hz                      | 0.01Hz                 | 6Hz                  |                    | P95            |
| <a href="#">P.43</a> | Output frequency detection for reverse rotation   | 0~400Hz, 99999               | 0.01Hz                 | 99999                |                    | P95            |
| <a href="#">P.44</a> | The second acceleration time  | 0~360s/<br>0~3600s, 99999    | 0.01s/0.1s             | 99999                |                    | P55            |
| <a href="#">P.45</a> | The second deceleration time  | 0~360s/<br>0~3600s, 99999    | 0.01s/0.1s             | 99999                |                    | P55            |
| <a href="#">P.46</a> | The second torque boost   | 0~30%, 99999                 | 0.1%                   | 99999                |                    | P51            |
| <a href="#">P.47</a> | The second base frequency   | 0~400Hz, 99999               | 0.01Hz                 | 99999                |                    | P52            |
| <a href="#">P.48</a> | Data length   | 0, 1                         | 1                      | 0                    |                    | P66            |
| <a href="#">P.49</a> | Stop bit length   | 0, 1                         | 1                      | 0                    |                    | P66            |
| <a href="#">P.50</a> | Parity check selection  | 0, 1, 2                      | 1                      | 0                    |                    | P66            |
| <a href="#">P.51</a> | CR & LF selection   | 1, 2                         | 1                      | 1                    |                    | P66            |
| <a href="#">P.52</a> | Number of communication retries   | 0~10                         | 1                      | 1                    |                    | P66            |
| <a href="#">P.53</a> | Communication check time interval   | 0~999.8s, 99999              | 1s                     | 99999                |                    | P66            |
| <a href="#">P.54</a> | FM/AM terminal function selection   | 0~5                          | 1                      | 0                    |                    | P96            |
| <a href="#">P.55</a> | Frequency display reference   | 0~400Hz                      | 0.01Hz                 | 50Hz/60Hz (Note 2)   |                    | P96            |
| <a href="#">P.56</a> | Current monitoring reference  | 0~500A/<br>5000A<br>(note 5) | 0.01A/0.1A<br>(note 5) | Rated output current |                    | P96            |
| <a href="#">P.57</a> | Restart coasting time   | 0~30s, 99999                 | 0.1s                   | 99999                |                    | P99            |

# Appendix 1 Parameter Table

Parameter Table

| Parameter Number | Name  | Setting Range               | Minimum Setting Unit | Default value         | User Setting Value | Reference Page |
|------------------|---|-----------------------------|----------------------|-----------------------|--------------------|----------------|
| <u>P.58</u>      | Restart cushion time                                    | 0~60s                       | 0.1s                 | 5s (7.5kW or below)   |                    | P99            |
|                  |   |                             |                      | 10s (11kW~55kW)       |                    |                |
|                  |   |                             |                      | 20s (75kW or above)   |                    |                |
| <u>P.59</u>      | Reserved  |                             |                      |                       |                    |                |
| <u>P.60</u>      | Input signal filter constant                            | 0~2047                      | 1                    | 31                    |                    | P100           |
| <u>P.61</u>      | Remote setting function selection                       | 0~3                         | 1                    | 0                     |                    | P100           |
| <u>P.62</u>      | Zero current detection level                            | 0~200%,<br>99999            | 0.1%                 | 5%                    |                    | P103           |
| <u>P.63</u>      | Zero current detection time                             | 0.05~1s,<br>99999           | 0.01s                | 0.5s                  |                    | P103           |
| <u>P.64</u>      | FM/AM output terminal selection                         | 0, 1                        | 1                    | 0                     |                    | P96            |
| <u>P.65</u>      | Retry selection   | 0~4                         | 1                    | 0                     |                    | P103           |
| <u>P.66</u>      | Stall prevention operation reduction starting frequency | 0~400Hz                     | 0.01Hz               | 50Hz/60Hz<br>(Note 2) |                    | P61            |
| <u>P.67</u>      | Number of retries at alarm occurrence                   | 0~10                        | 1                    | 0                     |                    | P103           |
| <u>P.68</u>      | Retry waiting time                                      | 0~360s                      | 0.1s                 | 1s                    |                    | P103           |
| <u>P.69</u>      | Retry accumulation time at alarm                        | 0                           | 0                    | 0                     |                    | P103           |
| <u>P.70</u>      | Special regenerative brake duty                         | 0~60%                       | 0.1%                 | 0                     |                    | P65            |
| <u>P.71</u>      | Idling braking and linear braking selection             | 0, 1                        | 1                    | 1                     |                    | P105           |
| <u>P.72</u>      | Carrier frequency                                       | Frame A/B/C:<br>0.7~14.5kHz | 0.1kHz               | Frame A/B/C:<br>5kHz  |                    | P105           |
|                  |   | Frame D/E:<br>0.7~9 kHz     |                      | Frame D/E:4 kHz       |                    |                |
|                  |   | Frame F/G:<br>0.7~9 kHz     |                      | Frame F/G:2 kHz       |                    |                |
|                  |   | Frame H :<br>0.7~6kHz       |                      | Frame H : 2 kHz       |                    |                |
| <u>P.73</u>      | Voltage signal selection                                | 0, 1                        | 1                    | 0                     |                    | P88            |
| <u>P.74</u>      | FU/10X output terminal selection                        | 0~10                        | 1                    | 0                     |                    | P107           |

# Appendix 1 Parameter Table

Parameter Table

| Parameter Number | Name  | Setting Range  | Minimum Setting Unit | Default value | User Setting Value | Reference Page |
|------------------|---|----------------|----------------------|---------------|--------------------|----------------|
| <u>P.75</u>      | Stop or reset function selection                              | 0~1            | 1                    | 1             |                    | P108           |
| <u>P.76</u>      | Reserved  |                |                      |               |                    |                |
| <u>P.77</u>      | Parameters write protection                                   | 0, 1, 2,4      | 1                    | 0             |                    | P108           |
| <u>P.78</u>      | Forward/reverse rotation prevention selection                 | 0, 1, 2        | 1                    | 0             |                    | P109           |
| <u>P.79</u>      | Operation mode selection                                      | 0~8            | 1                    | 0             |                    | P109           |
| <u>P.80</u>      | Multi-function terminal RL function selection                 | 0~39,44        | 1                    | 2             |                    | P110           |
| <u>P.81</u>      | Multi-function terminal RM function selection                 | 0~39,44,45     | 1                    | 3             |                    | P110           |
| <u>P.82</u>      | Multi-function terminal RH function selection                 | 0~39,44,45     | 1                    | 4             |                    | P110           |
| <u>P.83</u>      | Multi-function terminal STF function selection                | 0~39,44,45     | 1                    | 0             |                    | P110           |
| <u>P.84</u>      | Multi-function terminal STR function selection                | 0~39,44,45     | 1                    | 1             |                    | P110           |
| <u>P.85</u>      | Function selection for multi-function relay                   | 0~19           | 1                    | 5             |                    | P92            |
| <u>P.86</u>      | Multi-function terminal RES function selection                | 0~39,44,45     | 1                    | 30            |                    | P110           |
| <u>P.87</u>      | Multi-Function Control-Terminal Input Positive/Negative Logic | 0~511          | 1                    | 0             |                    | P117           |
| <u>P.88</u>      | Multi-Function Output-Terminal Positive/Negative Logic        | 0~15           | 1                    | 0             |                    | P118           |
| <u>P.89</u>      | Slip compensation coefficient                                 | 0~10           | 1                    | 0             |                    | P118           |
| <u>P.90</u>      | Inverter model  | 0~4000         | 1                    | 0             |                    | P118           |
| <u>P.91</u>      | Frequency jump 1A   | 0~400Hz, 99999 | 0.01Hz               | 99999         |                    | P119           |
| <u>P.92</u>      | Frequency jump 1B   | 0~400Hz, 99999 | 0.01Hz               | 99999         |                    | P119           |
| <u>P.93</u>      | Frequency jump 2A   | 0~400Hz, 99999 | 0.01Hz               | 99999         |                    | P119           |
| <u>P.94</u>      | Frequency jump 2B   | 0~400Hz, 99999 | 0.01Hz               | 99999         |                    | P119           |
| <u>P.95</u>      | Frequency jump 3A   | 0~400Hz, 99999 | 0.01Hz               | 99999         |                    | P119           |
| <u>P.96</u>      | Frequency jump 3B   | 0~400Hz, 99999 | 0.01Hz               | 99999         |                    | P119           |
| <u>P.97</u>      | The second frequency source                                   | 0~2            | 1                    | 0             |                    | P120           |
| <u>P.98</u>      | Middle frequency 1  | 0~400Hz        | 0.01Hz               | 3Hz           |                    | P58            |

# Appendix 1 Parameter Table

| Parameter Number | Name  | Setting Range      | Minimum Unit | Default value | User Setting Value | Reference Page |
|------------------|---|--------------------|--------------|---------------|--------------------|----------------|
| <u>P.99</u>      | Output voltage 1 of middle frequency              | 0~100%             | 0.1          | 10%           |                    | P58            |
| <u>P.100</u>     | Minute/second selection                           | 0, 1               | 1            | 1             |                    | P120           |
| <u>P.101</u>     | Runtime of Section 1 in programmed operation mode | 0~6000s            | 0.1s         | 0s            |                    | P120           |
| <u>P.102</u>     | Runtime of Section 2 in programmed operation mode | 0~6000s            | 0.1s         | 0s            |                    | P120           |
| <u>P.103</u>     | Runtime of Section 3 in programmed operation mode | 0~6000s            | 0.1s         | 0s            |                    | P120           |
| <u>P.104</u>     | Runtime of Section 4 in programmed operation mode | 0~6000s            | 0.1s         | 0s            |                    | P120           |
| <u>P.105</u>     | Runtime of section 5 in programmed operation mode | 0~6000s            | 0.1s         | 0s            |                    | P120           |
| <u>P.106</u>     | Runtime of section 6 in programmed operation mode | 0~6000s            | 0.1s         | 0s            |                    | P120           |
| <u>P.107</u>     | Runtime of Section 7 in programmed operation mode | 0~6000s            | 0.1s         | 0s            |                    | P120           |
| <u>P.108</u>     | Runtime of Section 8 in programmed operation mode | 0~6000s            | 0.1s         | 0s            |                    | P120           |
| <u>P.110</u>     | Operation panel monitoring selection              | 0, 1, 2            | 1            | 1             |                    | P123           |
| <u>P.111</u>     | Acceleration/deceleration time of section 1       | 0~600s<br>/0~6000s | 0.01s/0.1s   | 0s            |                    | P120           |
| <u>P.112</u>     | Acceleration/deceleration time of section 2       | 0~600s<br>/0~6000s | 0.01s/0.1s   | 0s            |                    | P120           |
| <u>P.113</u>     | Acceleration/deceleration time of Section 3       | 0~600s<br>/0~6000s | 0.01s/0.1s   | 0s            |                    | P120           |
| <u>P.114</u>     | Acceleration/deceleration time of Section 4       | 0~600s<br>/0~6000s | 0.01s/0.1s   | 0s            |                    | P120           |
| <u>P.115</u>     | Acceleration/deceleration time of Section 5       | 0~600s<br>/0~6000s | 0.01s/0.1s   | 0s            |                    | P120           |
| <u>P.116</u>     | Acceleration/deceleration time of Section 6       | 0~600s<br>/0~6000s | 0.01s/0.1s   | 0s            |                    | P120           |
| <u>P.117</u>     | Acceleration/deceleration time of Section 7       | 0~600s<br>/0~6000s | 0.01s/0.1s   | 0s            |                    | P120           |
| <u>P.118</u>     | Acceleration/deceleration time of Section 8       | 0~600s<br>/0~6000s | 0.01s/0.1s   | 0s            |                    | P120           |

# Appendix 1 Parameter Table

| Parameter Number | Name   | Setting Range     | Minimum Unit | Default value | User Setting Value | Reference Page |
|------------------|--|-------------------|--------------|---------------|--------------------|----------------|
| <u>P.119</u>     | The dead time of forward/reverse                             | 0~3000s           | 0.1s         | 0             |                    | P123           |
| <u>P.120</u>     | Output signal delay time                                     | 0~3600s           | 0.1s         | 0s            |                    | P92            |
| <u>P.121</u>     | Run direction in each section                                | 0~255             | 1            | 0             |                    | P120           |
| <u>P.122</u>     | Cycle selection  | 0~8               | 1            | 0             |                    | P120           |
| <u>P.123</u>     | Acceleration/deceleration time setting selection             | 0, 1              | 1            | 0             |                    | P120           |
| <u>P.125</u>     | Reserved   |                   |              |               |                    |                |
| <u>P.126</u>     | Multi-function terminal AU function selection                | 0~39,44,45        | 1            | 5             |                    | P110           |
| <u>P.127</u>     | Multi-function terminal RT function selection                | 0~39,44,45        | 1            | 8             |                    | P110           |
| <u>P.128</u>     | Multi-function terminal MRS function selection               | 0~39,44,45        | 1            | 7             |                    | P110           |
| <u>P.129</u>     | Multi-function terminal RUN function selection               | 0~19              | 1            | 0             |                    | P92            |
| <u>P.130</u>     | Multi-function terminal FU/10X function selection            | 0~19              | 1            | 2             |                    | P92            |
| <u>P.131</u>     | Frequency of section 1                                       | 0~400Hz           | 0.01Hz       | 0Hz           |                    | P120           |
| <u>P.132</u>     | Frequency of section 2                                       | 0~400Hz           | 0.01Hz       | 0Hz           |                    | P120           |
| <u>P.133</u>     | Frequency of section 3                                       | 0~400Hz           | 0.01Hz       | 0Hz           |                    | P120           |
| <u>P.134</u>     | Frequency of section 4                                       | 0~400Hz           | 0.01Hz       | 0Hz           |                    | P120           |
| <u>P.135</u>     | Frequency of section 5                                       | 0~400Hz           | 0.01Hz       | 0Hz           |                    | P120           |
| <u>P.136</u>     | Frequency of section 6                                       | 0~400Hz           | 0.01Hz       | 0Hz           |                    | P120           |
| <u>P.137</u>     | Frequency of section 7                                       | 0~400Hz           | 0.01Hz       | 0Hz           |                    | P120           |
| <u>P.138</u>     | Frequency of section 8                                       | 0~400Hz           | 0.01Hz       | 0Hz           |                    | P120           |
| <u>P.139</u>     | Voltage signal bias  | 0~100%            | 0.1%         | 0%            |                    | P88            |
| <u>P.140</u>     | Voltage signal gain  | 0.1~200%          | 0.1%         | 100%          |                    | P88            |
| <u>P.141</u>     | Voltage signal bias direction and rotational direction setup | 0~11              | 1            | 0             |                    | P88            |
| <u>P.142</u>     | Speed 8  | 0~400Hz<br>99999  | 0.01Hz       | 0Hz           |                    | P53            |
| <u>P.143</u>     | Speed 9  | 0~400Hz,<br>99999 | 0.01Hz       | 99999         |                    | P53            |
| <u>P.144</u>     | Speed 10   | 0~400Hz,<br>99999 | 0.01Hz       | 99999         |                    | P53            |

# Appendix 1 Parameter Table

| Parameter Number      | Name  | Setting Range     | Minimum Unit | Default Value  | User Setting Value | Reference Page |
|-----------------------|---|-------------------|--------------|--|--------------------|----------------|
| <a href="#">P.145</a> | Speed 11                                      | 0~400Hz,<br>99999 | 0.01Hz       | 99999  |                    | P53            |
| <a href="#">P.146</a> | Speed 12                                      | 0~400Hz,<br>99999 | 0.01Hz       | 99999  |                    | P53            |
| <a href="#">P.147</a> | Speed 13                                      | 0~400Hz,<br>99999 | 0.01Hz       | 99999  |                    | P53            |
| <a href="#">P.148</a> | Speed 14                                      | 0~400Hz,<br>99999 | 0.01Hz       | 99999  |                    | P53            |
| <a href="#">P.149</a> | Speed 15                                      | 0~400Hz,<br>99999 | 0.01Hz       | 99999  |                    | P53            |
| <a href="#">P.150</a> | Restart mode selection                        | 0~221             | 1            | 0  |                    | P99            |
| <a href="#">P.151</a> | Zero-speed control function selection         | 0, 1              | 1            | 0  |                    | P124           |
| <a href="#">P.152</a> | Voltage instruction at zero-speed control     | 0~30%             | 0.1%         | 4%<br>(7.5kW or below)<br>2%<br>(11kW~55kW)<br>1%<br>(75kW or above) |                    | P124           |
| <a href="#">P.153</a> | Communication error handling                  | 0, 1              | 1            | 0  |                    | P66            |
| <a href="#">P.154</a> | Modbus communication data format              | 0~5               | 1            | 4  |                    | P66            |
| <a href="#">P.155</a> | Over-torque detection level                   | 0~200%            | 0.1%         | 0%   |                    | P124           |
| <a href="#">P.156</a> | Over-torque detection time                    | 0.1~60s           | 0.1s         | 1s   |                    | P124           |
| <a href="#">P.157</a> | External terminals filter adjusting function  | 0~200             | 1            | 4  |                    | P125           |
| <a href="#">P.158</a> | External terminal power enable                | 0, 1              | 1            | 0  |                    | P126           |
| <a href="#">P.159</a> | Energy-saving control function                | 0, 1              | 1            | 0  |                    | P126           |
| <a href="#">P.160</a> | Stall prevention operation level when restart | 0~150%            | 0.1%         | 100%   |                    | P99            |
| <a href="#">P.161</a> | Multi-function display selection              | 0~13,<br>18~21,24 | 1            | 0  |                    | P127           |
| <a href="#">P.162</a> | Middle frequency 2                            | 0~400Hz,<br>99999 | 0.01Hz       | 99999  |                    | P58            |
| <a href="#">P.163</a> | Output voltage 2 of middle frequency          | 0~100%            | 0.1          | 0  |                    | P58            |

# Appendix 1 Parameter Table

Parameter Table

| Parameter Number      | Name  | Setting Range     | Minimum Unit | Default Value         | User Setting Value | Reference Page |
|-----------------------|---|-------------------|--------------|-----------------------|--------------------|----------------|
| <a href="#">P.164</a> | Middle frequency 3                            | 0~400Hz,<br>99999 | 0.01Hz       | 99999                 |                    | P58            |
| <a href="#">P.165</a> | Output voltage 3 of middle frequency          | 0~100%            | 0.1          | 0                     |                    | P58            |
| <a href="#">P.166</a> | Middle frequency 4                            | 0~400Hz,<br>99999 | 0.01Hz       | 99999                 |                    | P58            |
| <a href="#">P.167</a> | Output voltage 4 of middle frequency          | 0~100%            | 0.1          | 0                     |                    | P58            |
| <a href="#">P.168</a> | Middle frequency 5                            | 0~400Hz,<br>99999 | 0.01Hz       | 99999                 |                    | P58            |
| <a href="#">P.169</a> | Output voltage 5 of middle frequency          | 0~100%            | 0.1          | 0                     |                    | P58            |
| <a href="#">P.170</a> | PID function selection                        | 0, 1, 2           | 1            | 0                     |                    | P128           |
| <a href="#">P.171</a> | PID feedback control method selection         | 0, 1              | 1            | 0                     |                    | P128           |
| <a href="#">P.172</a> | PID proportion Gain                           | 1~100             | 1            | 20                    |                    | P128           |
| <a href="#">P.173</a> | PID integration Gain                          | 0~100s            | 0.1s         | 1s                    |                    | P128           |
| <a href="#">P.174</a> | PID differential Gain                         | 0~1000ms          | 1ms          | 0ms                   |                    | P128           |
| <a href="#">P.175</a> | Abnormal deviation level                      | 0~100%            | 0.1%         | 0                     |                    | P128           |
| <a href="#">P.176</a> | Exception duration time                       | 0~600s            | 0.1s         | 30s                   |                    | P128           |
| <a href="#">P.177</a> | Exception handling mode                       | 0, 1, 2           | 1            | 0                     |                    | P128           |
| <a href="#">P.178</a> | Sleep detects deviation                       | 0~100%            | 0.1%         | 0                     |                    | P128           |
| <a href="#">P.179</a> | Sleep detects duration time                   | 0~255s            | 0.1s         | 1s                    |                    | P128           |
| <a href="#">P.180</a> | Revival level                                 | 0~100%            | 0.1%         | 90%                   |                    | P128           |
| <a href="#">P.181</a> | Outage level                                  | 0~120Hz           | 0.01Hz       | 40Hz                  |                    | P128           |
| <a href="#">P.182</a> | Integral upper limit frequency                | 0~120Hz           | 0.01Hz       | 50Hz/60Hz<br>(Note 2) |                    | P128           |
| <a href="#">P.183</a> | Deceleration step length with stable pressure | 0~10Hz            | 0.01Hz       | 0.5Hz                 |                    | P128           |
| <a href="#">P.184</a> | 4-5 terminal disconnection handling           | 0~3               | 1            | 0                     |                    | P133           |
| <a href="#">P.186</a> | SF-G model selection function                 | 0, 1              | 1            | 0                     |                    | P134           |
| <a href="#">P.187</a> | FM calibration parameter                      | 0~9998            | 1            | 166                   |                    | P96            |
| <a href="#">P.188</a> | Firmware version                              | ---               | ---          | ---                   |                    | P134           |
| <a href="#">P.189</a> | Factory setting function                      | 0, 1              | 1            | 60Hz System           | 0                  | P134           |
|                       |   |                   |              | 50Hz System           | 1                  |                |
| <a href="#">P.190</a> | AM output bias                                | 0~1400            | 1            | 0 (Note 4)            |                    | P96            |



# Appendix 1 Parameter Table

| Parameter Number | Name   | Setting Range         | Minimum Unit    | Default value      | User Setting Value | Reference Page |
|------------------|--|-----------------------|-----------------|--------------------|--------------------|----------------|
| <u>P.191</u>     | AM output gain   | 0~1400                | 1               | 600 (Note 4)       |                    | P96            |
| <u>P.192</u>     | 2-5 terminal minimum input voltage                                   | 0~10                  | 0.01            | 0                  |                    | P135           |
| <u>P.193</u>     | 2-5 terminal maximum input voltage                                   | 0~10                  | 0.01            | 0                  |                    | P135           |
| <u>P.194</u>     | Frequency corresponds to the minimum input voltage of terminal 2-5   | 0~60Hz                | 0.01Hz          | 0Hz                |                    | P135           |
| <u>P.195</u>     | Frequency corresponds to the maximum input voltage of terminal 2-5   | 0~400Hz               | 0.01Hz          | 50Hz/60Hz (Note 2) |                    | P135           |
| <u>P.196</u>     | 4-5 terminal minimum input current corresponded frequency            | 0~60Hz                | 0.01Hz          | 0Hz                |                    | P137           |
| <u>P.197</u>     | 4-5 terminal maximum input current corresponded frequency            | 0~400Hz               | 0.01Hz          | 50Hz/60Hz (Note 2) |                    | P137           |
| <u>P.198</u>     | 4-5 terminal minimum input current                                   | 0~20                  | 0.01            | 0                  |                    | P137           |
| <u>P.199</u>     | 4-5 terminal maximum input current                                   | 0~20                  | 0.01            | 0                  |                    | P137           |
| <u>P.200</u>     | Constant pressure system function selection                          | 0~14                  | 1               | 0                  |                    | P138           |
| <u>P.209</u>     | Maximum frequency duration   | 0.1~10min             | 0.1min          | 5min               |                    | P138           |
| <u>P.210</u>     | Minimum frequency duration   | 0.1~10min             | 0.1min          | 5min               |                    | P138           |
| <u>P.213</u>     | Acceleration time for starting the commercial power supply frequency | 0.01~20s<br>/0.1~200s | 0.01s<br>/0.1 s | 5s                 |                    | P138           |
| <u>P.214</u>     | Deceleration time for starting the commercial power supply frequency | 0.01~20s<br>/0.1~200s | 0.01s<br>/0.1 s | 5s                 |                    | P138           |
| <u>P.215</u>     | Maximum frequency  | 20~60Hz               | 0.01Hz          | 50Hz               |                    | P138           |
| <u>P.216</u>     | Minimum frequency  | 0~20Hz                | 0.01Hz          | 20Hz               |                    | P138           |
| <u>P.217</u>     | Motor switchover permitted deviation                                 | 0~20%                 | 0.1%            | 0                  |                    | P138           |
| <u>P.223</u>     | Analog feedback bias pressure  | 0~100%                | 0.1             | 0%                 |                    | P128           |
| <u>P.224</u>     | Analog feedback gain pressure  | 0~100%                | 0.1             | 100%               |                    | P128           |
| <u>P.225</u>     | Panel command  | 0~100%,<br>99999      | 0.1             | 20%                |                    | P128           |
| <u>P.229</u>     | Backlash compensation function selection                             | 0~1                   | 1               | 0                  |                    | P140           |

# Appendix 1 Parameter Table

Parameter Table

| Parameter Number | Name   | Setting Range       | Minimum Unit | Default value   | User Setting Value | Reference Page |
|------------------|--|---------------------|--------------|---|--------------------|----------------|
| <u>P.230</u>     | The backlash compensation acceleration interrupt frequency | 0~400Hz             | 0.01Hz       | 1Hz   |                    | P140           |
| <u>P.231</u>     | The backlash compensation acceleration interrupt time      | 0~360 s             | 0.1s         | 0.5s  |                    | P140           |
| <u>P.232</u>     | The backlash compensation deceleration interrupt frequency | 0~400Hz             | 0.01Hz       | 1Hz   |                    | P140           |
| <u>P.233</u>     | The backlash compensation deceleration interrupt time      | 0~360 s             | 0.1s         | 0.5s  |                    | P140           |
| <u>P.234</u>     | Triangular wave function selection                         | 0~2                 | 1            | 0   |                    | P141           |
| <u>P.235</u>     | Maximum amplitude  | 0~25%               | 0.1%         | 10%   |                    | P141           |
| <u>P.236</u>     | Amplitude compensation for deceleration                    | 0~50%               | 0.1%         | 10%   |                    | P141           |
| <u>P.237</u>     | Amplitude compensation for acceleration                    | 0~50%               | 0.1%         | 10%   |                    | P141           |
| <u>P.238</u>     | Amplitude acceleration time                                | 0~360s<br>/0~3600 s | 0.01s/0.1s   | 10s   |                    | P141           |
| <u>P.239</u>     | Amplitude deceleration time                                | 0~360s<br>/0~3600 s | 0.01s/0.1s   | 10s   |                    | P141           |
| <u>P.240</u>     | Auxiliary frequency function selection                     | 0~4                 | 1            | 0   |                    | P142           |
| <u>P.242</u>     | DC injection brake function before starting selection      | 0~1                 | 1            | 0   |                    | P143           |
| <u>P.243</u>     | DC injection brake time before starting                    | 0~60s               | 0.1s         | 0.5s  |                    | P143           |
| <u>P.244</u>     | DC injection brake voltage before starting                 | 0~30%               | 0.1%         | 4% (7.5kW or below)<br>2% (11kW~55kW)<br>1% (75kW or above) |                    | P143           |
| <u>P.245</u>     | Cooling fan operation selection                            | 0~3, 10~13          | 0            | 0   |                    | P144           |
| <u>P.246</u>     | Modulation coefficient                                     | 0.90~1.20           | 0.01         | 1   |                    | P144           |
| <u>P.247</u>     | MC switchover interlock time                               | 0.1~100s            | 0.1s         | 1s  |                    | P145           |

# Appendix 1 Parameter Table

| Parameter Number | Name  | Setting Range | Minimum Unit | Default value | User Setting Value | Reference Page |
|------------------|---|---------------|--------------|---------------|--------------------|----------------|
| <u>P.248</u>     | Start waiting time  | 0.1~100s      | 0.1s         | 0.5s          |                    | P145           |
| <u>P.249</u>     | Automatic switchover frequency from inverter to commercial power supply frequency | 0~60Hz, 99999 | 0.01Hz       | 99999         |                    | P145           |
| <u>P.250</u>     | Automatic switchover frequency range from commercial power supply to inverter     | 0~10Hz, 99999 | 0.01Hz       | 99999         |                    | P145           |
| <u>P.251</u>     | Injection molding machine mode selection  | 0~4           | 1            | 0             |                    | P148           |
| <u>P.252</u>     | Flow channel weighted coefficient   | 0~100%        | 0.1%         | 100%          |                    | P148           |
| <u>P.253</u>     | Pressure channel weighted coefficient   | 0~100%        | 0.1%         | 100%          |                    | P148           |
| <u>P.254</u>     | Corner frequency  | 0~100Hz       | 0.01Hz       | 0 Hz          |                    | P148           |
| <u>P.259</u>     | Speed unit selection  | 0~1           | 1            | 0             |                    | P86            |
| <u>P.260</u>     | Over torque detection selection   | 0, 1          | 1            | 1             |                    | P124           |
| <u>P.261</u>     | Maintenance alarm time  | 0~9998day     | 1            | 0             |                    | P149           |
| <u>P.281</u>     | Input phase failure protection  | 0, 1          | 1            | 0             |                    | P149           |
| <u>P.285</u>     | Low frequency vibration inhibition factor   | 0~3           | 1            | 1             |                    | P150           |
| <u>P.286</u>     | High frequency vibration inhibition factor  | 0~15          | 1            | 0             |                    | P150           |
| <u>P.287</u>     | Short circuit protection (SCP) function selection                                 | 0~1           | 1            | 1             |                    | P150           |
| <u>P.288</u>     | Alarm code display option   | 0~12          | 1            | 0             |                    | P151           |
| <u>P.289</u>     | Alarm code  | ---           | ---          | 0             |                    | P151           |
| <u>P.290</u>     | The latest alarm status selection   | 0~7           | 1            | 0             |                    | P151           |
| <u>P.291</u>     | The latest alarm message  | ---           | ---          | 0             |                    | P151           |
| <u>P.292</u>     | Accumulative motor operation time (minutes)                                       | 0~1439min     | 1min         | 0 min         |                    | P152           |
| <u>P.293</u>     | Accumulative motor operation time (days)  | 0~9999day     | 1day         | 0 day         |                    | P152           |
| <u>P.294</u>     | Decryption parameter  | 0~65535       | 1            | 0             |                    | P152           |
| <u>P.295</u>     | Password setup  | 2~65535       | 1            | 0             |                    | P152           |
| <u>P.300</u>     | Motor control mode selection  | 0~4           | 1            | 0             |                    | P153           |
| <u>P.301</u>     | Motor parameter auto-tuning function selection                                    | 0~3           | 1            | 0             |                    | P153           |
| <u>P.302</u>     | Motor rated power   | 0~355         | 0.01         | 0             |                    | P155           |
| <u>P.303</u>     | Motor poles   | 0~8           | 1            | 4             |                    | P155           |
| <u>P.304</u>     | Motor rated voltage   | 0~440V        | 1 V          | 220/440V      |                    | P155           |

# Appendix 1 Parameter Table

Parameter Table

| Parameter Number | Name  | Setting Range                             | Minimum Unit               | Default value            | User Setting Value | Reference Page |
|------------------|---|---|----------------------------|--------------------------|--------------------|----------------|
| <u>P.305</u>     | Motor rated frequency                             | 0~400Hz                                   | 0.01Hz                     | 50Hz/60Hz (Note 2)       |                    | P155           |
| <u>P.306</u>     | Motor rated current                               | 0~500A/<br>5000A<br>(note 5)              | 0.01A/<br>0.1A<br>(note 5) | Horsepower-based         |                    | P155           |
| <u>P.307</u>     | Motor rated rotation speed                        | 0~65535 r/min                             | 1 r/min                    | 1410/1710 r/min (Note 2) |                    | P155           |
| <u>P.308</u>     | Motor excitation current                          | 0~500A/<br>5000A<br>(note 5)              | 0.01A/<br>0.1A<br>(note 5) | Horsepower-based         |                    | P155           |
| <u>P.309</u>     | Stator resistance                                 | 0~65535mΩ                                 | 1                          | Horsepower-based         |                    | P155           |
| <u>P.310</u>     | Rotor resistance                                  | 0~65535mΩ                                 | 1                          | Horsepower-based         |                    | P155           |
| <u>P.311</u>     | Leakage inductance                                | 0~6553.5mH                                | 0.1                        | Horsepower-based         |                    | P155           |
| <u>P.312</u>     | Mutual inductance                                 | 0~6553.5mH                                | 0.1                        | Horsepower-based         |                    | P155           |
| <u>P.320</u>     | Speed control proportion coefficient 1            | 0~2000%                                   | 1%                         | 100%                     |                    | P156           |
| <u>P.321</u>     | Speed control integral coefficient 1              | 0~20s                                     | 0.01s                      | 0.3s                     |                    | P156           |
| <u>P.322</u>     | Switching frequency 1                             | 0.00~P.325                                | 0.01Hz                     | 5.00HZ                   |                    | P156           |
| <u>P.323</u>     | Speed control proportion coefficient 2            | 0~2000%                                   | 1%                         | 100%                     |                    | P156           |
| <u>P.324</u>     | Speed control integral coefficient 2              | 0~20s                                     | 0.01s                      | 0.3s                     |                    | P156           |
| <u>P.325</u>     | Switching frequency 2                             | P.322~<br>the maximum<br>output frequency | 0.01HZ                     | 5.00HZ                   |                    | P156           |
| <u>P.326</u>     | Torque Limit Range Setting                        | 0~400%                                    | 0.1%                       | 200%                     |                    | P157           |
| <u>P.350</u>     | Number of pulses per revolution of the encoder    | 0~20000                                   | 1                          | 1024                     |                    | P158           |
| <u>P.351</u>     | Encoder input mode setup                          | 0~4                                       | 1                          | 0                        |                    | P158           |
| <u>P.352</u>     | PG signal abnormality (zero speed) detection time | 0~100s                                    | 0.1s                       | 1s                       |                    | P158           |

# Appendix 1 Parameter Table

| Parameter Number | Name  | Setting Range      | Minimum Unit | Default value | User Setting Value | Reference Page |
|------------------|---|--------------------|--------------|---------------|--------------------|----------------|
| <u>P.353</u>     | Motor over-speed detection frequency        | 0~30Hz             | 0.01Hz       | 4Hz           |                    | P158           |
| <u>P.354</u>     | PG over-speed detection time                | 0~100s             | 0.1s         | 1s            |                    | P158           |
| <u>P.994</u>     | Parameter copy readout                      | Refer to Chapter 5 | ---          | ---           | ---                | P159           |
| <u>P.995</u>     | Parameter copy write-in                     | Refer to Chapter 5 | ---          | ---           | ---                | P159           |
| <u>P.996</u>     | Alarm history clear                         | Refer to Chapter 5 | ---          | ---           | ---                | P160           |
| <u>P.997</u>     | Inverter reset                              | Refer to Chapter 5 | ---          | ---           | ---                | P160           |
| <u>P.998</u>     | Restoring all parameters to default values  | Refer to Chapter 5 | ---          | ---           | ---                | P160           |
| <u>P.999</u>     | Restoring some parameters to default values | Refer to Chapter 5 | ---          | ---           | ---                | P160           |

Note: 1. The torque boost, motor rated current and stator resistance values are shown in the table as follows

| Inverter type        | P.0 | P.9     |
|----------------------|-----|---------|
| SF-020-5.5 K         | 3   | 24      |
| SF-020-7.5 K/5.5K-G  | 3   | 33/24   |
| SF-020-11 K/7.5K-G   | 2/3 | 49/33   |
| SF-020-15 K/11K-G    | 2   | 65/49   |
| SF-020-18.5 K/15K-G  | 2   | 75/65   |
| SF-040-22K/18.5K-G   | 2   | 90/75   |
| SF-020-30 K/22K-G    | 2   | 120/90  |
| SF-020-37 K/30K-G    | 2   | 145/120 |
| SF-020-45 /37K-G     | 2   | 170/145 |
| SF-020-55 K/45K-G    | 2   | 212/170 |
| SF-040-5.5 K         | 3   | 13      |
| SF-040-7.5 K/5.5K-G  | 3   | 18/13   |
| SF-040-11 K/7.5K-G   | 2/3 | 24/18   |
| SF-040-15 K/11K-G    | 2   | 32/24   |
| SF-040-18.5 /15K-G   | 2   | 38/32   |
| SF-040-22K/18.5K-G   | 2   | 45/38   |
| SF-040-30 K/22K-G(S) | 2   | 60/45   |
| SF-040-37 K/30K-G    | 2   | 73/60   |
| SF-040-45 K/37K-G    | 2   | 91/73   |
| SF-040-55 K/45K-G    | 2   | 110/91  |
| SF-040-75 K/55K-G    | 1/2 | 150/110 |
| SF-040-90 K/75K-G    | 1   | 180/150 |

# Appendix 1 Parameter Table

Note: 1. The torque boost, motor rated current and stator resistance values are shown in the table as follows

| Inverter type       | P.0 | P.9     |
|---------------------|-----|---------|
| SF-040-110 K/90K-G  | 1   | 220/180 |
| SF-040-132 K/110K-G | 1   | 260/220 |
| SF-040-160 K/132K-G | 1   | 310/260 |
| SF-040-185 K/160K-G | 1   | 340/310 |
| SF-040-220 K/185K-G | 1   | 425/340 |
| SF-040-250 K/220K-G | 1   | 480/425 |
| SF-040-280 K/250K-G | 1   | 530/480 |
| SF-040-315 K/280K-G | 1   | 620/530 |
| SF-040-355 K/315K-G | 1   | 683/620 |

2. The default value is determined by the set value of P.189. When P.189 = 0, the default value is 60Hz, which is applicable to 60Hz systems. When P.189 = 1, the default value is 50Hz, which is applicable to 50Hz systems.
3. According to the value of P.186, please refer to the parameter instruction for P.22.
4. Parameters P.190 and P.191 are the calibrating values. Therefore the default value for each machine may differ slightly.
4. When the power is larger than 160KW, the precision of current displayed by P.9, P.56, P.306 and P.308 is 0.1A, and the current range is 5000A.

## Appendix 2 Alarm Code List

Alarm code list

| Code   | Screen Display | Cause  | Troubleshooting   |
|--|----------------|--|---|
| <b>ERROR</b>                                   | <i>Error</i>   | <ol style="list-style-type: none"> <li>Under-voltage for power supply</li> <li>The reset function "RES" is on</li> <li>Bad connection between the operation panel and main machine</li> <li>Internal circuit malfunction</li> <li>Wrong CPU operation</li> </ol> | <ol style="list-style-type: none"> <li>Provide a normal power supply</li> <li>Shut off "RES"</li> <li>Ensure firm connection between the operation panel and the main machine</li> <li>Replace the inverter.</li> <li>Restart the inverter</li> </ol>   |
| <b>OC0</b><br>Over-current when stop           | <i>OC0</i>     | The output current is two times larger than the rated current of the inverter.   | Please restart the inverter. If the alarm repeated, please send the inverter back to the factory.   |
| <b>OC1</b><br>Over-current during acceleration | <i>OC1</i>     |  | <ol style="list-style-type: none"> <li>In case the time for acceleration or deceleration is too short, extend it as necessary.</li> <li>Avoid abrupt increase of load.</li> <li>Check Terminals U/T1, V/T2 and W/T3 for short circuit.</li> </ol>   |
| <b>OC2</b><br>Over-current at constant speed   | <i>OC2</i>     |  |   |
| <b>OC3</b><br>Over-current during deceleration | <i>OC3</i>     |  |   |
| <b>OV0</b><br>Over-voltage when stop           | <i>OV0</i>     | Over-voltage between Terminals P and N.  | Check whether the power supply is normal or abnormal.   |
| <b>OV1</b><br>Over-voltage during acceleration | <i>OV1</i>     |  | <ol style="list-style-type: none"> <li>In case the time for acceleration or deceleration is too short, extend it as necessary.</li> <li>Check the brake resistor between Terminals +/P and PR for loose connection.</li> <li>Check whether the values of <u>P.30</u> and <u>P.70</u> are correct or not.</li> </ol> |
| <b>OV2</b><br>Over-voltage at constant speed   | <i>OV2</i>     |  |   |
| <b>OV3</b><br>Over-voltage during deceleration | <i>OV3</i>     |  |   |

## Appendix 2 Alarm Code List

Alarm code list

| Code  | Screen Display | Cause   | Troubleshooting   |
|---|----------------|---|---|
| <b>THT</b><br>Overheated<br>IGBT module           | <b>THT</b>     | IGBT module thermal<br>accumulation relay operation   | Avoid prolonged inverter operation<br>when overloaded.  |
| <b>THN</b><br>Overheated<br>motor                 | <b>THN</b>     | Electronic thermal relay<br>operation   | <ol style="list-style-type: none"> <li>1. Check whether the set value<br/>of <u>P.9</u> is correct or not<br/>(according to the externally<br/>connected motor).</li> <li>2. Reduce load.</li> </ol>  |
| <b>FAN</b><br>Cooling fan<br>alarm                | <b>FAN</b>     | Cooling fan failure   | <ol style="list-style-type: none"> <li>1. The cooling fan is<br/>damaged. Please replace it<br/>with a new fan.</li> <li>2. Please clean the fan if it is<br/>blocked by foreign substances.</li> <li>3. Check if fans wiring is<br/>broken/loose, or replace it with<br/>a new fan.</li> </ol>   |
| <b>OHT</b><br>External thermal<br>relay operation | <b>OHT</b>     | External thermal relay<br>operation   | <ol style="list-style-type: none"> <li>1. Check whether the capacity of<br/>the external thermal relay and<br/>of the motor coordinates well.</li> <li>2. Reduce the load.</li> </ol>   |
| <b>OPT</b><br>Abnormal<br>peripheral<br>devices   | <b>OPT</b>     | <ol style="list-style-type: none"> <li>1. Abnormal communication;<br/>Exceeding the number of<br/>communication retries</li> <li>2. Interrupted<br/>communication;<br/>Exceeding the permitted<br/>communication time<br/>interval</li> </ol> | Correctly set the communication<br>parameters.  |
| <b>EEP</b><br>Abnormal<br>memory                  | <b>EEP</b>     | ROM malfunction   | Send the inverter back to the<br>factory if this type of alarm happens<br>frequently.   |
| <b>PID</b><br>Abnormal PID                        | <b>PID</b>     | <ol style="list-style-type: none"> <li>1. Insufficient inverter and<br/>motor capacity</li> <li>2. PID target value or<br/>feedback value set<br/>unreasonably</li> <li>3. Peripheral devices<br/>malfunction</li> </ol>                      | <ol style="list-style-type: none"> <li>1. Enlarge the inverter and motor<br/>capacity.</li> <li>2. Check the feedback gain<br/>setup. Reset the target value<br/>according to the feedback.</li> <li>3. Check the system's peripheral<br/>feedback devices (e.g.,<br/>sensors, potentiometer) and<br/>whether the wiring is correct.</li> </ol> |



## Appendix 2 Alarm Code List

Alarm code list

| Code  | Screen Display | Causes   | Troubleshooting  |
|---|----------------|--|--|
| <b>CPU</b><br>Abnormal CPU                            | <b>CPU</b>     | Serious peripheral electromagnetic interference  | Reduce peripheral interference.  |
| <b>OLS</b><br>Stall prevention and protection         | <b>OLS</b>     | Over-loaded motor  | <ol style="list-style-type: none"> <li>1. Reduce motor load.</li> <li>2. Increase P.22 value.</li> </ol>   |
| <b>SCP</b><br>Short circuit over-current              | <b>SCP</b>     | Output-end short circuit   | Check whether the inverter output has short circuit (e.g., the motor wiring).  |
| <b>NTC</b><br>Overheated module                       | <b>NTC</b>     | The temperature of the IGBT module is too high.  | <ol style="list-style-type: none"> <li>1. Reduce the environment temperature and improve the air condition.</li> <li>2. Check whether the fan of the inverter is damaged.</li> </ol> |
| <b>OL2</b><br>Abnormal over-torque                    | <b>OL2</b>     | <ol style="list-style-type: none"> <li>1. Over-loaded motor</li> <li>2. <u>P.155, P.156</u> set unreasonably.</li> </ol> | <ol style="list-style-type: none"> <li>1. Reduce motor load.</li> <li>2. Adjust the set value of <u>P.155, P.156</u> properly.</li> </ol>  |
| <b>bE</b><br>Abnormal brake-resistor (Abnormal relay) | <b>bE</b>      | Abnormal brake-resistor (Abnormal relay)   | Return it to the factory for repair.   |
| <b>IPF</b><br>Abnormal power supply input             | <b>IPF</b>     | Abnormal power supply input  | Check whether power supply input is normal.  |
| <b>CPr</b><br>Abnormal CPU                            | <b>CPr</b>     | Abnormal PU procedures   | <ol style="list-style-type: none"> <li>1. Check the wiring.</li> <li>2. Check the parameter setup.</li> <li>3. Reduce peripheral interference.</li> </ol>                            |
| <b>AEr</b><br>Abnormal 4-5 terminal                   | <b>AEr</b>     | Abnormal disconnection of 4-5 terminal's analog output   | Please refer to the description for <u>P.184</u> .   |
| <b>PG1</b><br>Abnormal encoder model                  | <b>PG1</b>     | Abnormal encoder model   | Check the set value of <u>P.351</u> .  |
| <b>PG2</b><br>Abnormal PG card feedback signals       | <b>PG2</b>     | Abnormal PG card feedback signals  | Please refer to the feedback control parameter description for <u>P.350~P.354</u> .  |

## Appendix 2 Alarm Code List

Alarm code list

| Code  | Screen Display | Causes  | Troubleshooting  |
|---|----------------|---|--|
| <b>PG3</b><br>Too large speed deviation under closed-loop control | <b>PG3</b>     | Too large speed deviation under closed-loop control | Please refer to the feedback control parameter description for <a href="#">P.350~P.354</a> . |


Note: 1. For the types below 40HP, "BE" alarm is a brake-resistor alarm, and relay alarm for types above 40HP.  
2. When the above alarms occur, the inverter will stop. Please handle these alarms according to the methods mentioned above.  
3. Refer to [P.288~P.291](#) for abnormal alarm codes.

## Appendix 3 Troubles and Solutions

| Troubles  | Check points  |
|---|---|
| Motionless motor                                    | <p>Main circuit</p> <p>Check whether the power supply voltage between Terminals R/L1, S/L2 and T/L3 is normal.</p> <p>Check whether the Power light is on.</p> <p>Check whether the wiring between the inverter and the motor is correct.</p>   |
|   | <p>Load</p> <p>Check whether the load is too heavy.</p> <p>Check whether the motor rotor is locked.</p>   |
|   | <p>Parameters Setting</p> <p>Check whether the starting frequency (P.13) is set too big.</p> <p>Check whether the operation mode (P.79) is correct.</p> <p>Check whether the maximum frequency (P.1) is zero.</p> <p>Check whether the reverse rotation prevention is restricted.</p> <p>Check whether the bias and gain (P.192~P.199) setting is correct.</p> <p>Check that the frequency jump (P.91~P.96) setting is correct.</p>   |
|   | <p>Control circuit</p> <p>Check whether the output stop signal "MRS" is on. (Related parameter P.80~P.84, P.86, P.126~P.128).</p> <p>Check whether the "RES" function is ON. (Related parameter P.80~P.84, P.86, P.126~P.128).</p> <p>Check whether the external thermal relay is operating or not.</p> <p>Check whether the reset has been performed or not after the set-off of the alarm (the ALARM light in on).</p> <p>Check whether the voltage/current signals are correctly wired.</p> <p>Check whether the functions of STF and STR are correct (related parameter P.80~P.84, P.86, P.126~P.128).</p> <p>Check whether the wiring for the control circuit is disconnected or has a poor contact.</p> |
| Reversed motor rotation                             | <p>Check whether the phase sequence of output terminals U/T1, V/T2 and W/T3 is correct.</p> <p>Check whether the start signal (STF and STR) are connected correctly.</p>  |
| Failure to increase the rotation speed of the motor | <p>Check whether the load is too heavy.</p> <p>Check whether the stall prevention level (P.22) is correct.</p> <p>Check whether the torque boost (P.0) is set too high.</p> <p>Check whether the maximum frequency (P.1) is effective.</p>  |
| Unsmoothed acceleration / deceleration              | <p>Check whether the acceleration / deceleration time (P.7, P.8) is correct.</p> <p>Check whether the acceleration / deceleration curve selection (P.29) is correct.</p> <p>Check whether the voltage / current input signals are affected by noises.</p>   |
| Overlarge motor current                             | <p>Check whether the load is too heavy.</p> <p>Check whether the capacity of the inverter and of the motor are well matched.</p> <p>Check whether the torque boost (P.0) is set too high.</p>   |
| Speed variation during the operation                | <p>Check whether the voltage / current input signals are affected by noises.</p> <p>Check whether the load varies.</p> <p>Check whether the wiring length of the main circuit is too long.</p>  |

## Appendix 4 Optional Equipment

1. Expansion board (Please set the parameters according to the connected expansion board and the corresponding functions.)
  - 1). PM01 Injection modeling machine specific expansion card

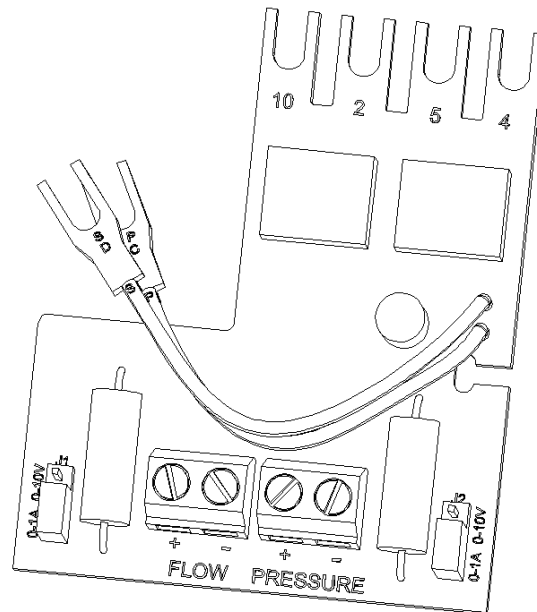


| Terminal Type       | Terminal Number | Terminal Function   |
|---------------------|-----------------|---|
| Analog signal input | FLOW+           | Flow signal +   |
|                     | FLOW-           | Flow signal -   |
|                     | J1              | Flow input signal selection. When the short-circuit board is inserted into the 0~10V side on the top, the flow signal will be the 0~10V voltage signal input terminal. When the short-circuit board is inserted into the 0~1A side on the bottom, the flow signal will be the 0~1A current signal input terminal.             |
|                     | PRESSURE+       | Pressure signal +   |
|                     | PRESSURE-       | Pressure signal -   |
|                     | J2              | Pressure input signal selection. When the short-circuit board is inserted into the 0~10V side on the top, the pressure signal will be the 0~10V voltage signal input terminal. When the short-circuit board is inserted into the 0~1A side on the bottom, the pressure signal will be the 0~1A current signal input terminal. |

Note: For more details, please refer to the instruction on PM01, the injection modeling machine specific expansion card.

Description on the ordering code:

| NO. | Model | Item Name   | Ordering Code |
|-----|-------|---|---------------|
| 1   | PM01  | PM01 Injection modeling machine specific expansion card | LNKSFPM01     |

## 2). Fan and water pump multi-channel control card

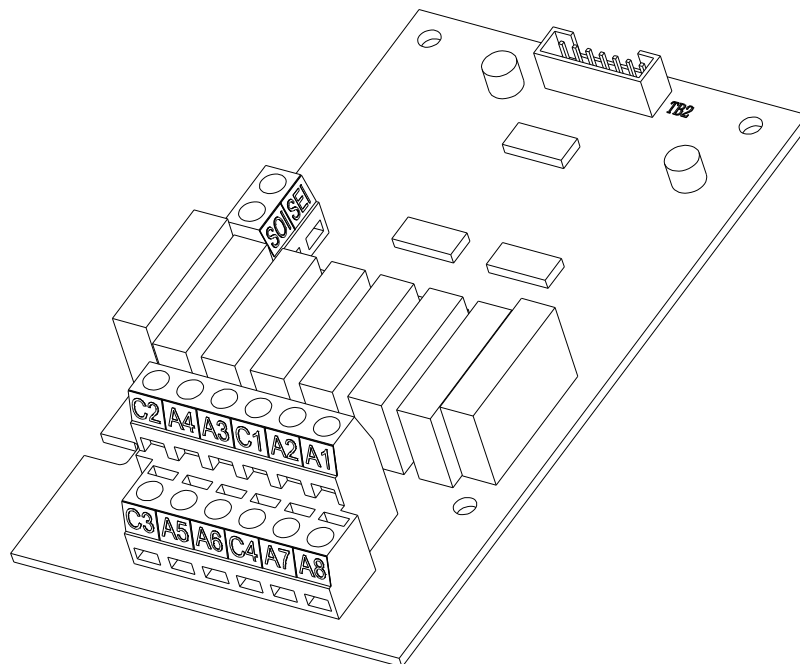

| Terminal Number | Terminal Name                        | Content   |
|-----------------|--------------------------------------|---|
| A1~A8           | Relay contact output terminal        | It is used to drive the external electromagnetic switch or the relay. A1~A8 corresponds to RY1~RY8.   |
| C1~C4           | Relay contact output common terminal | For the relay contact output common terminal, C1 is the shared terminal for A1 and A2. C2 is the shared terminal for A3 and A4. C3 is the shared terminal for A5 and A6. C4 is the shared terminal for A7 and A8. |
| SOI and SEI     | Expansion terminal                   | This terminal is connected to SU and SE of the inverter (set P.40=12) to control the signal of RY8.   |


Note: 1. For more details, please refer to the instruction on the fan and water pump multi-channel control card.

2. When connecting to two or more motors, make the corresponded common terminal short circuit.

Description on the ordering code:

| NO. | Model | Item Name                                     | Ordering Code |
|-----|-------|---|---------------|
| 1   | WS01  | Fan and water pump multi-channel control card | LNKSFWS01     |

### 3). PG01 expansion card

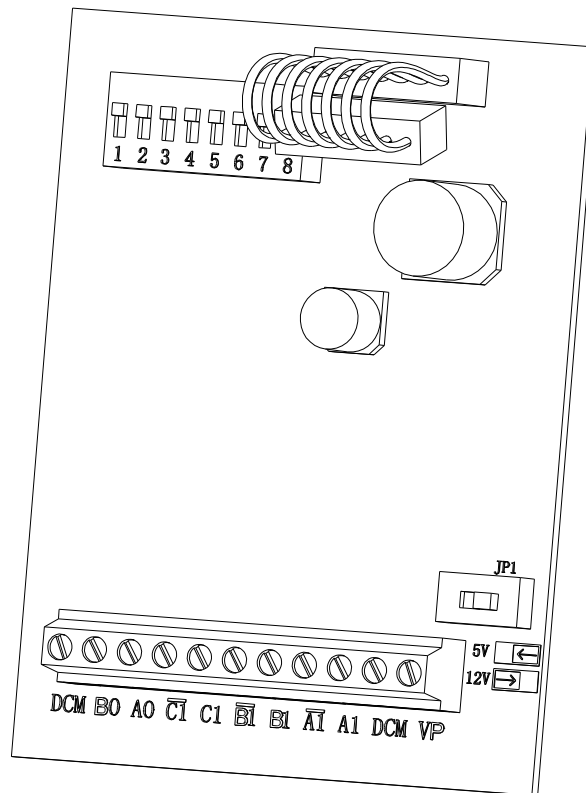



| Terminal Name   | Description   |
|---|---|
| VP  | Encoder power source (Use JP1 to switch to 12V or 5V)<br>Output voltage : +12V±5% 200mA<br>+5V±2% 200mA   |
| DCM   | The common ground for the power source and the signal (Be aware that DCM on the left is the ground for the frequency divider's signal output terminal). |
| A1, $\overline{A1}$<br>B1, $\overline{B1}$<br>C1, $\overline{C1}$ | Encoder signal input terminal, the maximal input signal is 80HZ   |
| A0,B0   | Frequency divider's signal output terminal, the DC maximum is 24V、50mA  |

Description on the ordering code:

| NO. | Model | Item Name           | Ordering Code |
|-----|-------|---------------------|---------------|
| 1   | PG01  | PG01 expansion card | LNKPG01       |

## 2. Operation panel, operation panels' fixed base and the data transmission line



1). DU01S: DU01 operation panel set (operation panel (DU01) and the fixed base (GMB01))

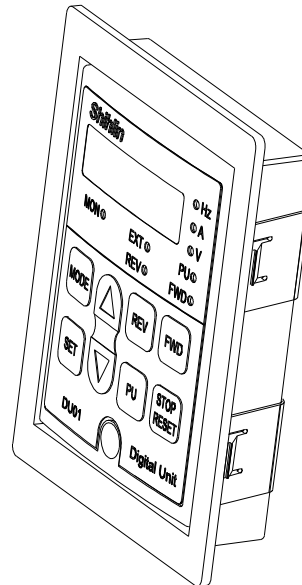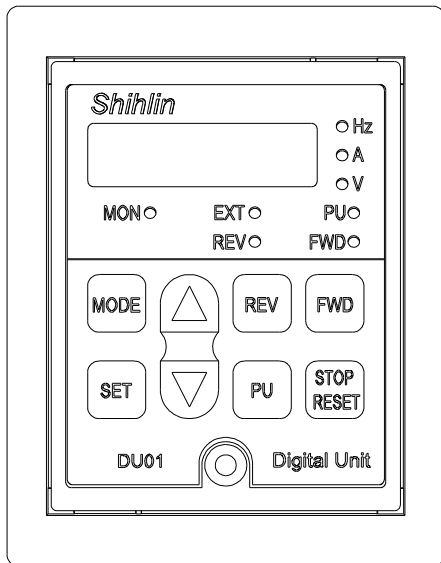

Description on the ordering code:

| NO. | Model | Item Name                | Ordering Code |
|-----|-------|--------------------------|---------------|
| 1   | DU01  | DU01 operation panel set | LNKDU01       |

2). PU01 operation panel:

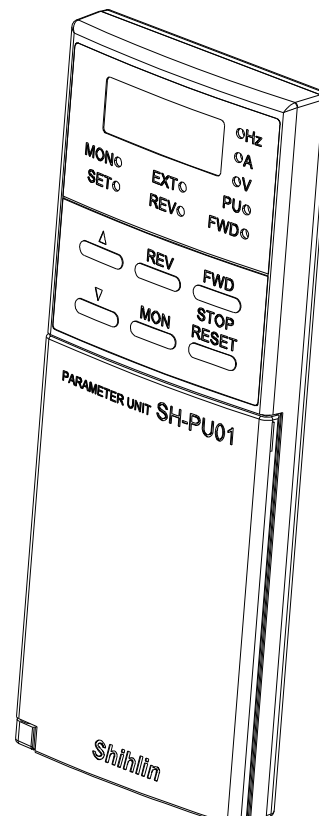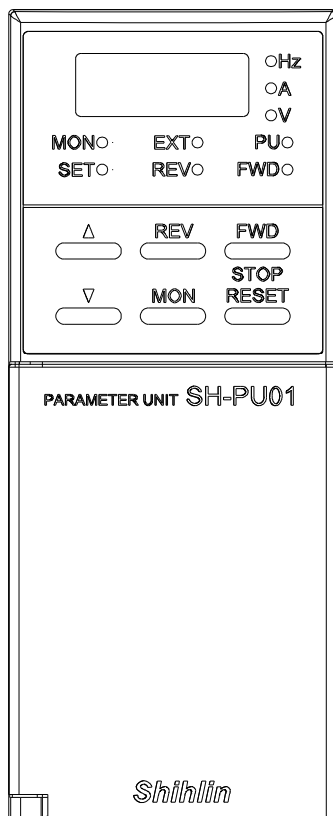


# Appendix 4 Optional Equipment

Description on the ordering code:

| NO. | Model   | Item Name                | Ordering Code |
|-----|---------|--------------------------|---------------|
| 1   | SH-PU01 | PU01 operation panel set | LNKSHPU01     |

3). CBL: Data transmission line (coordinated with the operation panel)

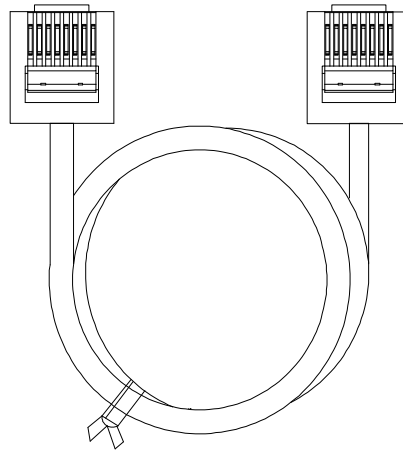

Description on the ordering code:


| NO. | Model    | Item name                           | Ordering code |
|-----|----------|-------------------------------------|---------------|
| 1   | SSCBL01T | Data transmission line (Length: 1M) | LNKSSCBL01T   |
| 2   | SSCBL03T | Data transmission line (Length: 3M) | LNKSSCBL03T   |
| 3   | SSCBL05T | Data transmission line (Length: 5M) | LNKSSCBL05T   |



# Appendix 5 Optional external DC reactor

Optional description

## 1. DC reactor attached to the inverter with G/H frame

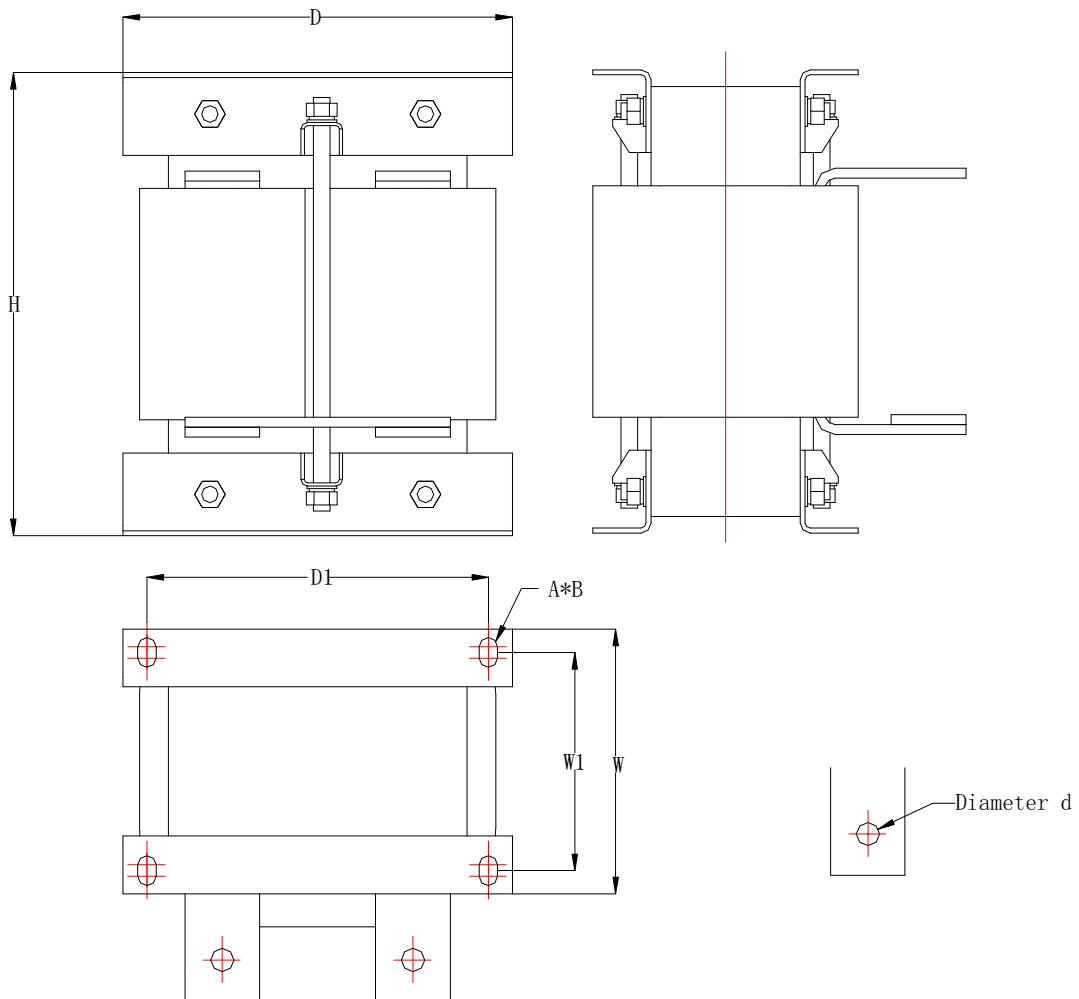

| Type of the reactor | H (mm) | W (mm) | W1 (mm) | D (mm) | D1 (mm) | d (mm) | A*B (mm) | Weight (kg) |
|---------------------|--------|--------|---------|--------|---------|--------|----------|-------------|
| DCL-0460-UIDH-EM09  | 280    | 150    | 115     | 220    | 191     | 14     | 11*18    | 28          |
| DCL-0650-UIDH-E72U  | 280    | 160    | 125     | 235    | 206     | 14     | 11*18    | 33          |
| DCL-1000-UIDH-302A  | 393    | 187    | 137     | 262    | 236     | 16     | 12*20    | 49          |

| Type of the inverter | Type of the attaching reactor |
|----------------------|-------------------------------|
| SF-040-185K/160K-G   | DCL-0460-UIDH-EM09            |
| SF-040-220K/185K-G   | DCL-0650-UIDH-E72U            |
| SF-040-250K/220K-G   | DCL-0650-UIDH-E72U            |
| SF-040-280K/250K-G   | DCL-0650-UIDH-E72U            |
| SF-040-315K/280K-G   | DCL-1000-UIDH-302A            |
| SF-040-355K/315K-G   | DCL-1000-UIDH-302A            |

**This inverter qualifies the CE label. Specifications:**

**Low Voltage Directive 2006/95/EC & Electromagnetic Compatibility Directive 2004/108/EC**

1. Electromagnetic compatibility command (EMC):

(1). EMC compatibility description:

For system integration, inverter is not a functionally independent device unit. It is usually a unit in the control box. It is combined with other devices to control a machine or equipment. Therefore, our company does not consider that all the EMC commands should be directly applied on the inverter. As a result, the CE label of this inverter is not extensible.

(2). Compatibility:

The inverter does not need to cover all the EMC commands. Yet, for certain machine equipment that needs to use EMC commands and the inverter, the machine has to be equipped with CE label. In addition, the company can provide the electromagnetic inspection data and operation manual that covers the required electromagnetic compatibility specifications for a quick and easy installation of the machine equipment of this inverter.

(3). Installation outline:

Please follow the following notes for installing the inverter:

Use a noise filter qualifying the EU standard to coordinate with the inverter.

The wire between the motor and the inverter has to be stored in shielded cable or metal tube. In addition, ground the motor terminal and the inverter terminal together. Please shorten the wire as much as possible.

Please put this inverter in a metal cabinet that is already grounded. It can prevent radiation interference.

The line-to-line noise filter at the power source terminal and the online magnetic iron core at the control row are used for suppressing noises. All the signals and the EU-qualified filter specifications are described in details in the operation manual. Please contact your agent.

2. Low-voltage command (LVD):

(1). Low-voltage command compatibility description:

This inverter is compatible with low-voltage commands.

(2). Compatibility:

Our company qualifies the low-voltage command specification.

(3). Description;

Do not rely on leakage protection only for preventing electric shocks. Grounding is required for the protection.

Ground each inverter individually (do not connect more than two (including two) ground cables).

Please use non-fuse switch and electromagnetic contactor that qualify EN or IEC specifications.

Please use the inverter under an environment of over-voltage level-2 condition with contamination level 2 or better.

For the style and dimensions of the input- and output-end of the inverter cable, please refer to the specifications listed in the operation manual.

## CE Certification Statement



### VERIFICATION OF CONFORMITY

CERTIFICATE NO: VC/2010/10/0501/CE

|                       |   |  |
|-----------------------|---|--|
| Applicant             | Name  | Shihlin Electric& Engineering Corporation  |
|                       | Address   | No.234, ChungLun, HsinFun, HsinChu, Taiwan, R.O.C.   |
| Manufacturer          | Name  | Shihlin Electric& Engineering Corporation  |
|                       | Address   | No.234, ChungLun, HsinFun, HsinChu, Taiwan, R.O.C.   |
|                       | Name  | : Suzhou Shihlin Electric& Engineering Corporation   |
|                       | Address   | : 22 Huoju Road, Suzhou New District, Jiangsu  |
| Description           | Trader Mark   |  |
|                       | Product Name  | Inverter   |
|                       | Model   | : SF-020-5.5K,SF-020-7.5K/5.5K-G,SF-020-11K/7.5K-G<br>SF-020-15K/11K-G,SF-020-18.5K/15K-G,SF-040-5.5K,SF-040-7.5K/5.5K-G,SF-040-11K/7.5K-G,SF-040-15K/11K-G<br>SF-040-18.5K/15K-G,SF-040-22K/18.5K-G |
| Applicable Directives | Low Voltage Directive 2006/95/EC & Electromagnetic Compatibility Directive 2004/108/EC  |  |
| Applicable Standards  | : Safety:EN61800-5-1:2007, EMC:EN61800-3:2004, EN55011:2007,EN61000-2-2:2002, IEC61000-4-2:2001,IEC61000-4-3:2006, IEC61000-4-4:2006, IEC61000-4-5:2005, IEC61000-4-6:2006, IEC61000-4-8:2001 |  |

VIACERT as the Third Party Authority ,upon the relevant request of Shihlin Electric & Engineering Corporation, Certifies that :the test results of the above mentioned products comply with the requirement of the EN Standard ,according to EU Low Voltage Directive 2006/ 95/EC and Electromagnetic Compatibility Directive 2004/108/EC The manufacturer is obliged to issue a Declaration of Conformity according to the basic requirement of relative Directives and places the CE marking with his own responsibility as follows:



All modifications to the Technical File should be first submitted to the Third Party Inspection Authority to ensure further validity of this attestation.

Third Party Authority Stamp



|                         |
|-------------------------|
| Date and Place of Issue |
| Shanghai, 19/05/2010    |
| FOR VIACERT             |
|                         |
| KELVIN GAO              |
| GENERAL MANAGER         |

VIACERT TESTING & CERTIFICATION  
14E, TIANSHAN ROAD 600, SHANGHAI, P.R.CHINA 200051

TEL:+86-21 51088618, FAX:+86-21 51801927  
EMAIL:info@via-cert.com



## VERIFICATION OF CONFORMITY

CERTIFICATE NO: VC/2010/10/0501/CE

|                       |   |   |
|-----------------------|---|---|
| Applicant             | Name  | Shihlin Electric& Engineering Corporation   |
|                       | Address   | No.234, ChungLun, HsinFun, HsinChu, Taiwan, R.O.C.  |
| Manufacturer          | Name  | Shihlin Electric& Engineering Corporation   |
|                       | Address   | No.234, ChungLun, HsinFun, HsinChu, Taiwan, R.O.C.  |
|                       | Name  | : Suzhou Shihlin Electric& Engineering Corporation  |
|                       | Address   | : 22 Huoju Road, Suzhou New District, Jiangsu   |
| Description           | Trader Mark   |   |
|                       | Product Name  | Inverter  |
|                       | Model   | : SF-020-22K/18.5K-G,SF-020-30K/22K-G,SF-020-37K/30K-G, SF-020-45K/37K-G,SF-020-55K/45K-G,SF-040-30K/22K-G, SF-040-37K/30K-G,SF-040-45K/37K-G,SF-040-55K/45K-G, SF-040-75K/55K-G,SF-040-90K/75K-G,SF-040-110K/90K-G, SF-040-132K/110K-G,SF-040-160K/132K-G, |
| Applicable Directives | Low Voltage Directive 2006/95/EC & Electromagnetic Compatibility Directive 2004/108/EC  |   |
| Applicable Standards  | : Safety:EN61800-5-1:2007, EMC:EN61800-3:2004, EN55011:2007,EN61000-2-2:2002, IEC61000-4-2:2001,IEC61000-4-3:2006, IEC61000-4-4:2006, IEC61000-4-5:2005, IEC61000-4-6:2006, IEC61000-4-8:2001 |   |

VIACERT as the Third Party Authority ,upon the relevant request of Shihlin Electric & Engineering Corporation, Certifies that :the test results of the above mentioned products comply with the requirement of the EN Standard ,according to EU Low Voltage Directive 2006/ 95/EC and Electromagnetic Compatibility Directive 2004/108/EC The manufacturer is obliged to issue a Declaration of Conformity according to the basic requirement of relative Directives and places the CE marking with his own responsibility as follows:



All modifications to the Technical File should be first submitted to the Third Party Inspection Authority to ensure further validity of this attestation.

Third Party Authority Stamp



|                         |                      |
|-------------------------|----------------------|
| Date and Place of Issue | Shanghai, 19/05/2010 |
| FOR VIACERT             |                      |
|                         |                      |
| KELVIN GAO              |                      |
| GENERAL MANAGER         |                      |

VIACERT TESTING& CERTIFICATION  
14E, TIANSHAN ROAD 600, SHANGHAI, P.R.CHINA 200051

TEL:+86-21 51088618, FAX:+86-21 51801927  
EMAIL:info@via-cert.com



## VERIFICATION OF CONFORMITY CERTIFICATE NO: VC/2012/12/002/CE

|   |  |  |
|---|--|--|
| Applicant   | Name   | : Shihlin Electric & Engineering Corporation   |
|   | Address  | : 16F, No.88, Sec.6, ChungShan N. Rd., Taipei, Taiwan  |
| Manufacturers   | Name   | : Shihlin Electric & Engineering Corporation   |
|   | Address  | : No.234, ChungLun, HsinFun, HsinChu, Taiwan   |
|   | Name   | : Suzhou Shihlin Electric & Engineering Corporation  |
|   | Address  | : 22 Huoju Road, Suzhou New District, Jiangsu, China   |
| Test Report No.:<br>VC-CO-20121017&<br>VC-CO-20121204&<br>2012157A&2012172A | Trader Mark  | :  SHIHLIN ELECTRIC 士林電機 Shihlin   |
|   | Product Name   | : <b>Inverter</b>  |
|   | Model  | : SF-040-185K/160K-G**, SF-040-220K/185K-G**,<br>SF-040-250K/220K-G**, SF-040-280K/250K-G**,<br>SF-040-315K/280K-G**, SF-040-355K/315K-G**<br>*** The type name may be followed by any alphanumeric suffix |
| Applicable Directives   | : LOW VOLTAGE DIRECTIVE 2006/95/EC<br>& ELECTROMAGNETIC COMPATIBILITY 2004/108/EC  |  |
| Applicable Standards  | : EN 61800-3:2004, EN 55011:2009/A1:2010, EN 61000-4-2:2009,<br>EN 61000-4-3:2006/A2:2010, EN 61000-4-4:2004,<br>EN 61000-4-5:2006, EN 61000-4-6:2009, EN 61800-4-8:2010,<br>EN 61800-5-1:2007 |  |

VIACERT as the Third Party Authority, upon the relevant request of Shihlin Electric & Engineering Corporation, Certifies that: the test results of the above mentioned products comply with the requirement of the EN Standards, according to EU Low Voltage Directive 2006/95/EC and Electromagnetic Compatibility 2004/108/EC. The manufacturer is obliged to issue a Declaration of Conformity according to the basic requirement of relative Directives and places the CE marking with his own responsibility as follows:



All modifications to the technical file should be first submitted to the Third Party Inspection Authority to ensure further validity of this attestation.

Third Party Authority Stamp



|                         |
|-------------------------|
| Date and Place of Issue |
| Shanghai, 26/12/2012    |
| FOR VIACERT             |
|                         |
| KELVIN GAO              |
| GENERAL MANAGER         |

VIACERT TESTING & CERTIFICATION  
13BC, TIANSHAN ROAD 600, SHANGHAI, P.R.CHINA 200051

TEL:+86-21 51088618, FAX:+86-21 51801927  
EMAIL:info@via-cert.com

## Australia C-Tick Certification Statement

### Supplier's declaration of conformity

For compliance levels 1, 2 and 3 in Australia



As required by the following Notices:

- *Radiocommunications Devices (Compliance Labelling) Notice 2003* made under section 182 of the Australian *Radiocommunications Act 1992*;
- *Radiocommunications Labelling (Electromagnetic Compatibility) Notice 2008* made under section 182 of the Australian *Radiocommunications Act 1992*;
- *Radiocommunications (Compliance Labelling – Electromagnetic Radiation) Notice 2003* made under section 182 of the Australian *Radiocommunications Act 1992*; and
- *Telecommunications Labelling (Customer Equipment and Customer Cabling) Notice 2001* made under section 407 of the Australian *Telecommunications Act 1997*

#### Instructions for completion

- **Do not return this form to the ACMA.** This completed form must be retained by the supplier as part of the documentation required for the compliance records and must be made available for inspection by the ACMA when requested.

#### Supplier's details (manufacturer, importer or authorised agent)

Company Name (OR INDIVIDUAL)

|   |
|---|
| Shihlin Electric (Australia) Pty Ltd            |
| TRADING AS Shihlin Electric (Australia) Pty Ltd |

ACMA supplier code number

|        |
|--------|
| N29467 |
|--------|

OR

Street Address

|  |
|--|
| Suite 2, Building 6, Omnico Business Park, 270, Ferntree |
| Gully Road, Notting Hill, VIC 3168, Australia            |
| POSTCODE 3162  |

ACN, ABN, or ARBN

|                       |
|-----------------------|
| ABN NO:58 137 152 455 |
|-----------------------|

#### Product details

Product description – brand name, type, model, lot, batch or serial number (if available)

|  |
|--|
| Brand Name : <b>Shihlin Electric &amp; Engineering Corporation</b>   |
| Model Number : <b>SF-(X)-(Y)</b><br><b>SF-(X)-(Y)-G</b><br>X=Input Voltage = 020 : 220V 3-Phase<br>040 : 440V 3-Phase<br>Y=Suitable Motor = 0.75K : 0.75KW<br>1.5K : 1.5KW ..... |
| Description : <b>AC MOTOR Drive</b>  |

#### Compliance

The above mentioned product complies with the requirements of the relevant ACMA Standards made under the *Radiocommunications Act 1992* and the *Telecommunications Act 1997*. These Standards are referenced in notices made under *section 182 of the Radiocommunications Act* and *407 of the Telecommunications Act*.

Evidence of compliance is demonstrated by test reports to the following applicable standards.

#### Applicable standards

Standard title, number and, if applicable, number of the test report

|  |
|--|
| <b>EN 61800-3:2004 Conductor Emissions</b> |
| <b>EN 61800-3:2004 Radiated Emissions</b>  |

#### Declaration

I hereby declare that the contents of this form are true and correct, that the product mentioned above complies with the relevant above mentioned standards and all products supplied under this declaration will be identical to the product identified above.


**Note:** Under section 137.1 of the *Criminal Code Act 1995*, it is an offence to knowingly provide false or misleading information to a Commonwealth entity.  
Penalty: 12 months imprisonment

|   |
|---|
| SIGNATURE OF SUPPLIER OR AGENT <i>Jung-Cheng Peng</i> |
| Jung-Cheng Peng                                       |

|                 |
|-----------------|
| Project Manager |
| 15 Jun. 11      |

## Appendix 8 Derating curve

The derating curve is as follows:

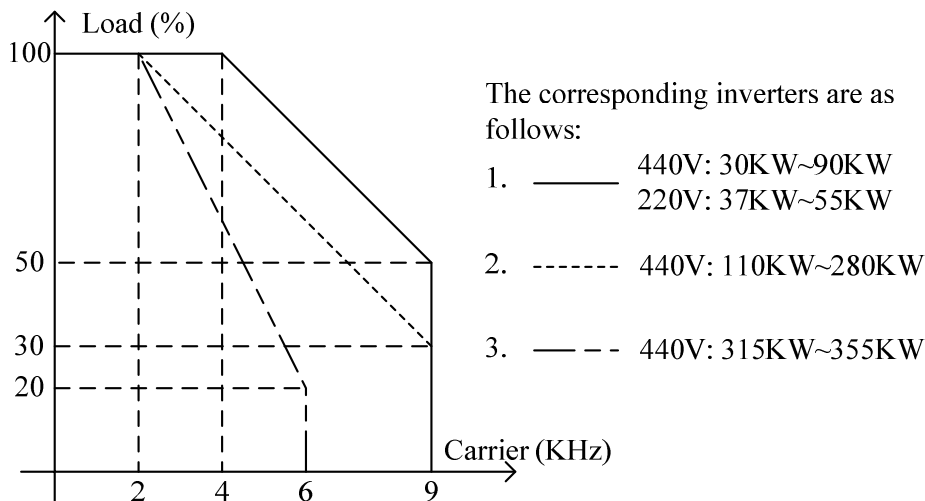

- (1) For the 440V: 30KW~90KW and 220V: 37KW~55KW, the default value of carrier is 4K. When the carrier is higher than the default value, the load will decrease 10% as the carrier increases 1K each time.
- (2) For the 440V: 110KW~280KW, the default value of carrier is 2K. When the carrier is higher than the default value, the load will decrease 10% as the carrier increases 1K each time.
- (3) For the 440V: 315KW~355KW, the default value of carrier is 2K. When the carrier is higher than the default value, the load will decrease 20% as the carrier increases 1K each time.

# Revision Record

| Published Date | Edition of the Manual                             | Revision Content   |
|----------------|---|--|
| 2011.11        | V1.00   | First Edition  |
| 2012.05        | V1.01   | <p><u>Addition</u></p> <ol style="list-style-type: none"> <li>1. Page90 Adding picture explanation of restart function</li> <li>2. Page112 Adding the output power to Multi-function display</li> <li>3. Page122 Adding note of reference parameter for external analog setting</li> </ol> <p><u>modification</u></p> <ol style="list-style-type: none"> <li>1. Page4 Amending SF-020-55K/K-G applicable motor capacity to 75HP</li> <li>2. Page9-11 Amending some frame model</li> <li>3. Page19 Amending the picture of System Wire Arrangement</li> <li>4. Page20 Amending the picture of Terminal Wire Arrangement</li> <li>5. Page31-34 Amending parts of inverter type</li> <li>6. Page33 Amending frame to 'C、E、F'</li> <li>7. Page37 Amending the flow chart for switching the working mode using DU01 operation panel</li> <li>8. Page38 Amending Operation flow charts for monitoring mode and frequency setting mode with DU01</li> <li>9. Page39 Amending Operation flow charts for parameter setting mode with DU01</li> <li>10. Page 62 When p.32=3, amending the remarks to 'reserved'.</li> <li>11. Page88 Amending factory setting of P.191 to 600</li> <li>12. Page126 Amending the main frequency reference source</li> <li>13. Page143 Amending the picture of Inverter Insulation Resistance Measurement</li> <li>14. Page166 Amending terminal description of PG01 expansion card</li> </ol> |
| 2012.10        | V1.02<br>(Applicable for V0.30 or above firmware) | <ol style="list-style-type: none"> <li>1. Unifying names of some parameters</li> <li>2. Amending some mistakes of the instruction manual</li> </ol>  |
| 2013.03        | V1.03   | <p><u>Addition</u></p> <ol style="list-style-type: none"> <li>1. Adding the information for the inverter from SF040-185K/160K-G to SF040-355K/315K-G.</li> <li>2. Adding the function diagnosis.</li> <li>3. Adding some command codes and the table of the special monitor codes.</li> <li>4. Adding the fan abnormal signal output to the part of multi-function output.</li> <li>5. Adding the revising instruction of analog feedback bias pressure and gain pressure.</li> <li>6. Adding P.322 ~P.325.</li> </ol> <p><u>Modification</u></p> <ol style="list-style-type: none"> <li>1. Amending P.9, P.70, P.56, P.161, P.223~P.225, P.245, P.306, P.308.</li> </ol>  |



# Revision Record

| Published Date | Edition of the Manual | Revision Content   |
|----------------|-----------------------|--|
| 2013.05.20     | V1.04                 | <p><u>Addition</u></p> <ol style="list-style-type: none"> <li>Adding the appendix 8.</li> <li>Adding the monitoring-EEPROM frequency in the communication part, and the modbus address is H1009.</li> <li>Adding the function of monitoring output torque by setting P.161 to 18, and reserving by setting P.161 to 14-17 in the multi-function part.</li> <li>Adding the description of P.90.</li> <li>Adding the description of P.260.</li> <li>Adding the description of maintenance alarm function.</li> <li>Adding the description of P.281, the input phase failure protection.</li> <li>Adding the function of monitoring external terminal input/output state in the multi-function display selection part by setting P.161 to 19/20.</li> <li>Adding the type of SF-040-30K/22K-GS in the frame B</li> </ol> <p>(3-8 above are available only when the software version is above V0.320)</p> <p><u>Modification</u></p> <ol style="list-style-type: none"> <li>Amending the instruction of P.72.</li> </ol> |
| 2015.01        | V1.05                 | <p><u>Addition</u></p> <ol style="list-style-type: none"> <li>1. Add the safety instructions.</li> </ol>   |
| 2016.02        | V1.06                 | <p><u>Addition</u></p> <ol style="list-style-type: none"> <li>Add some parameters</li> <li>Add P.34 “Writing Selection of Communication EEPROM”</li> </ol>   |
| 2017.05        | V1.06+                | <p><u>Modification</u></p> <p>Modify the part</p>  |
| 2018.01        | V1.07                 | <p><u>Modification</u></p> <p>Nameplate Instruction</p>  |

Version: V1.07

- Published Date: January, 2018